



Router *Plus* T1 Drop & Insert CSU
INSTALLATION AND OPERATION MANUAL

Publication 918-6257D Issue 1, September 1997

Osicom Technologies, Inc.

Contents	Index	Addresses and Phone Numbers	FCC Notice	Quick Start Procedure
----------	-------	-----------------------------	------------	-----------------------

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. This equipment also meets the technical criteria in the part 68 rules, Subparts A through F (for connection of terminal equipment to the telephone network).

FCC REGISTRATION NUMBER: 1R5USA-23055-DE-N

FCC FACILITY INTERFACE CODES:

04DU9–BN: 1.544 Mbps SuperFrame format without line power

04DU9–DN: 1.544 Mbps SF and B8ZS without line power

04DU9–1KN: 1.544 Mbps ANSI ESF without line power

04DU9–1SN: 1.544 Mbps ANSI ESF and B8ZS without line power

04DU9–1ZN: 1.544 Mbps ANSI ESF and Zero Bit Time Slot Interchange

SERVICE CODE: 6.0N

JACK ARRANGEMENTS: Use an RJ48C 8-pin modular telephone jack to connect to the network.

V.32bis modem: Use an RJ11C 8-pin modular telephone jack to connect to DDD lines.

The wall-mounted transformer (included with the unit) must be used with standalone (desktop) Routermate to assure reliability and compliance to the FCC and Underwriters' Laboratories requirements (as well as Canadian Department of Communications standards, when applicable).

Osicom Technologies, Inc.

9020 Junction Drive
Annapolis Junction, Maryland 20701
Phone: 800-359-7710
Local: 301-317-7710
Fax: 301-317-7220
Customer Service: 800-359-2273
Repair: 301-317-7400

World-Wide Web: www.osicom.com
E-mail, product offerings: info@osicom.com
E-mail, technical assistance: support@osicom.com

NOTICE

Information in this document is subject to change without notice and does not represent a commitment on the part of Osicom Technologies, Inc. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Osicom Technologies, Inc. Neither manufacturer nor seller shall be liable for any damage, loss, or injury, direct or consequential, arising from the inability to use or incorrect use of this product.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© Osicom Technologies, Inc. 1997. All rights reserved
The Osicom logo is a registered trademark of Osicom Technologies, Inc.
All other trademarks belong to their respective owners.

contents

1. [OVERVIEW](#)
 2. [INSTALLATION](#)
 3. [TERMINAL OPERATION](#)
 4. [STATUS AND TEST SCREENS](#)
 5. [CONFIGURATION SCREENS](#)
 6. [CONFIGURATION AND SOFTWARE UPDATE \(TFTP\)](#)
 7. [MODEM CONFIGURATION SCREENS](#)
 8. [UNIT CONFIGURATION SCREENS](#)
 9. [MANAGEMENT CONFIGURATION SCREENS](#)
 10. [MAINTENANCE AND REPAIR](#)
- APPENDIX A. [SPECIFICATIONS](#)
- APPENDIX B. [INTERFACES AND CABLES](#)
- APPENDIX C. [DIAGNOSTICS](#)

index

A

[Addresses and phone numbers](#)

[alarms](#)

[Annex D status](#)

[ARP table](#)

[Autolearn clients](#)

B

[Bandwidth allocation](#)

[BCP status](#)

[Blue alarm](#)

[BootP, restart](#)

Bridge

[global configuration](#)

[options](#)

[status](#)

[Bridging table](#)

C

[Carrier registers](#)

[Checklist, installation](#)

Configuration

[LAN](#)

[WAN](#)

[Configuration and software update](#)

[Configuration file transfer](#)

[Configuration menu](#)

[Configuration, CSU](#)

[Console interface](#)

CSU

- [alarms](#)
- [configuration](#)
- [data rate](#)
- [loopback tests](#)
- [remote NI loop](#)
- [status](#)

D

- [Data mode, CSU](#)
- [Data rate, CSU](#)
- [Default settings](#)
- [Diagnostic menu](#)
- [Dial-in management](#)
- [DLCI status table](#)

E

- [Encryption, global](#)
- [Encryption options](#)
- [Error counters, CSU](#)
- [Errors, Ethernet frames](#)
- [Event log screen](#)

F, G

- [File transfer, software](#)
- Filters
 - [IP](#)
 - [IPX](#)
- [Frame relay status](#)
- [Frequently used keys](#)
- Global configuration
 - [IP](#)
 - [PPP](#)

I, J

[ICMP status screen](#)

[Installation checklist](#)

[Interface configuration summary](#)

[Interface status summary](#)

Interfaces

[console](#)

[LAN](#)

[WAN 1](#)

[WAN 2](#)

IP

[address](#)

[filters](#)

[global configuration](#)

[RIP filters](#)

[routing options, LAN](#)

[routing options, WAN](#)

[routing table](#)

[static route](#)

[status screen](#)

[IPCP status](#)

IPX

[filters](#)

[global configuration](#)

[RIP filters](#)

[RIP/SAP status](#)

[routing table](#)

[SAP filters](#)

[services](#)

[status](#)

[IPXCP status screen](#)

[IPXWAN, status](#)

K, L

[Keys and conventions](#)

LAN

[configuration](#)

[status](#)

LCP

[negotiable options](#)

[state](#)

[status screen](#)

[LEDs](#)

[Loopback tests](#)

[Lower layer status, WAN](#)

M

[Main menu](#)

[Maintenance and repair](#)

[Management screen](#)

[Modem menu](#)

N

NCTE

[bandwidth allocation](#)

[loops](#)

NI

[coding](#)

[format](#)

P, Q

[Password, configure](#)

[Passwords](#)

[Ping](#)

[Port configuration summary](#)

[Port counters, IP](#)

[Port status summary](#)

[PPP global configuration](#)

[PPP status](#)

[Protocol options, WAN](#)

[Quick start procedure](#)

R

[Red alarm](#)

[Register summary](#)

[RIP neighbor list](#)

Router summary

[frame relay](#)

[PPP](#)

[Routing options, LAN](#)

S

[Save to flash](#)

[Service information](#)

SNMP

[trap client table](#)

[status screen](#)

[Software file transfer](#)

[Specifications](#)

[Speed, interface](#)

[Static address configuration](#)

[Static address table](#)

[Static route](#)

[Status, CSU](#)

[Status, WAN 1, frame relay](#)

[Status, WAN 1, PPP](#)

[Status and Test menu](#)

[System architecture](#)

[System information](#)

[System restart](#)

T

[TCP and UDP status screen](#)

[TCP/IP status and test](#)

[Telnet](#)

[Terminal selection](#)

[Test pattern](#)

[TFTP software download](#)

[Trace route](#)

[Transmit filters](#)

U, V, W, Y

[Unicast packets, LAN](#)

[Unit menu](#)

[User registers](#)

[V.54 loop](#)

[Voice, NCTE](#)


WAN 1

[configuration](#)

[status screen](#)

[Yellow alarm](#)

1. OVERVIEW

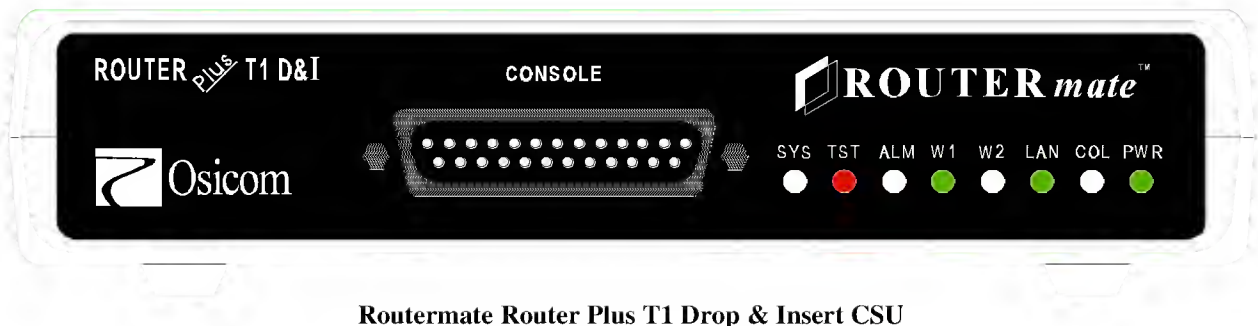

Routermate Router Plus T1 Drop & Insert CSU

[Start of Document](#)

- [1.1 Features](#)

Product - ROUTERmate Router Plus T1 Drop and Insert CSU.

Description - multi-protocol router and bridge with an integral T-1 Channel Service Unit (CSU).


Function - connects 10BaseT Ethernet Local Area Networks (LANs) across a full or fractional T-1 facility. Provides features that take full advantage of DACS (Digital Access Cross-connect Services) networks. The NCTE interface is used to drop and insert other T-1 devices out the WAN interface.

Design - the router engine, main processor, flash memory, and LAN & WAN interfaces are on the main circuit board. Encryption and V.32 modem options are on separate daughter cards.

Definitions

Bridge - Operates at the Data Link Level; it *extends* a network. That is, a bridge connects segments of the same network.

Router - Operates at the Network Level; it *connects* different networks.

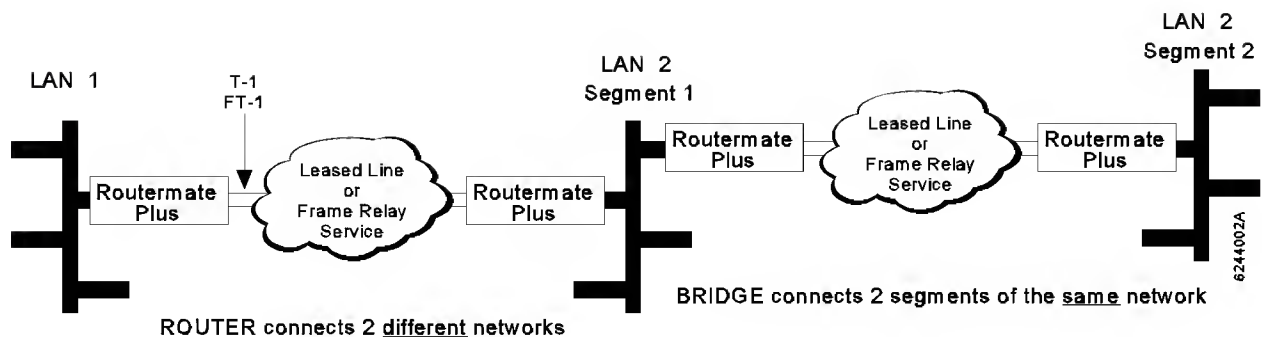


Router and Bridge Applications

1.1 Features

Management ([see figure below](#))

- **VT100** - direct access of the router's management screens through a terminal connected to the front-panel CONSOLE interface.
- **Telnet** - access of the router's management screens from any PC or ASCII terminal on the network using Telnet protocol. The Telnet Server parameter on the Management screen defaults to *Enabled*.
- **SNMP** - access the router's SNMP agent using Simple Network Management Protocol.
- **Dial-In Management** - an optional internal V.32 modem provides remote dial access of the router's management screens over DDD lines. This feature provides a backup management path when the primary path fails. The modem is answer-only.

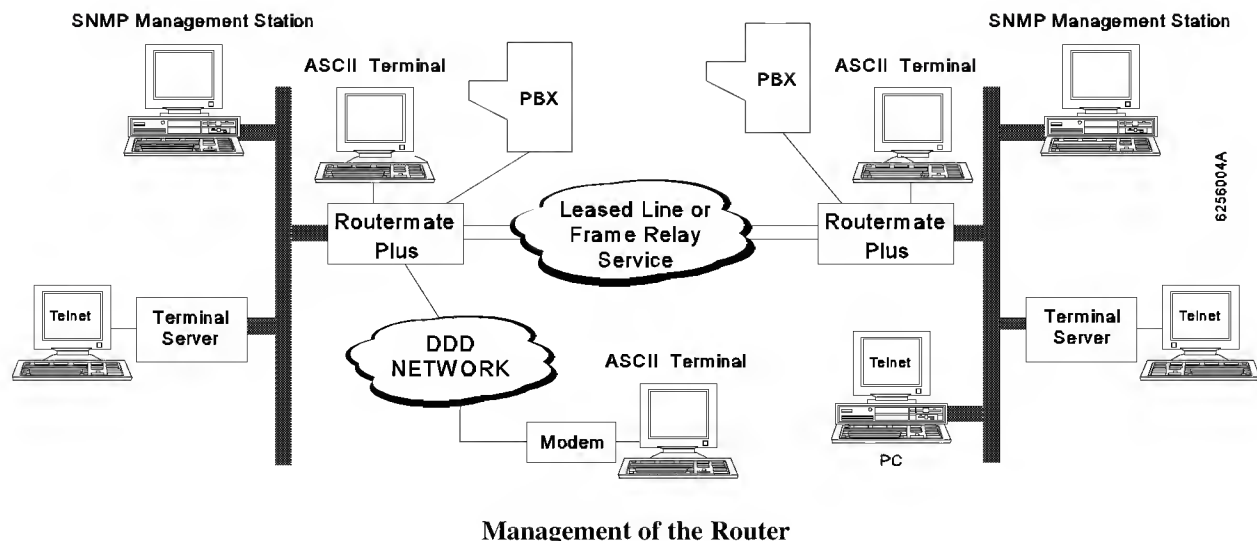

Integral T-1 CSU - internal T-1 CSU/DSU (Channel Service Unit/Data Service Unit) provides for direct connection to the T-1 line, eliminating the need for a separate CSU and cabling.

Drop and Insert - a standard NCTE interface lets the Router Plus T-1 D&I CSU function as a drop and insert T-1 multiplexer. DS0s are assigned to the WAN 1 or NCTE interface. Up to 24 DS0s can be assigned for both interfaces combined.

ESF Operation - Extended SuperFrame operation provides a 4 kbps data link channel transparent to user data. With ESF, the Telco central office can continuously monitor the local loop, transmit and receive test messages and retrieve performance statistics. The Routermate Plus is fully compliant with both ANSI T1.403 and AT&T 54016 ESF messaging specifications.

Protection for the Network - provides complete protection for the network. When ANSI 62411 coding is selected, it automatically inserts pulses into the transmitted signal as required to meet bit density specifications as defined in AT&T's Technical Publication 62411. For applications that do not meet bit density requirements, you can select inverted data.

Diagnostics - continuously monitors the performance of the T-1 link. Errors are reported in separate user and carrier registers. The carrier registers are under control of the Telco central office. The user registers cannot be reset by the central office and may be used to provide an audit of T-1 link performance. Automatic self-test system diagnostics executed on power-up.

Built-in Bit Error Rate Tester (BERT) - eliminates the need for external test equipment. The built-in tester can transmit any one of three test patterns: QRSS, Framed Ones or Minimum Density. You can insert bit errors in all patterns. The Routermate Plus records seconds in test, seconds in error, and last reset time.

Data Rate - CSU delivers 24 speeds at multiples of 56 kbps and 24 speeds at multiples of 64 kbps (up to 1.536 Mbps).

Clear Channel Operation - uses B8ZS (Bipolar Eight Zero Substitution) for clear channel operation. Clear channel operation may be required in applications where the user data is formatted in contiguous N x 64K multiples and where the protocol does not guarantee minimum ones density (where less than 12.5% of transmitted data contains a binary one state).

Front Panel LED Indicators - eight LEDs indicate the operational status of interfaces and tests.

Interfaces -

- **10BaseT (LAN)** - 8-pin modular interface connects router to 10Base-T Ethernet Local Area Network.
- **WAN 1** - 8-pin modular interface provides the router with a Point-to-Point (PPP) or Frame Relay connection to a full or fractional T-1 facility.
- **WAN 2 (optional)** - 8-pin modular interface for internal V.32 modem; connects router to dial lines for remote access of the router's management screens. See [Modem Configuration](#).

Data Encryption - optional encryption hardware provides encryption over PPP and Frame Relay links at speeds up to 1920 kbps.

Encryption is available in standard DES or proprietary E-DES (export) versions.

An additional optional encryption feature lets the user configure the *initial vector*, which is the initial number used to determine how encrypted data is synchronized with the decrypted data, and the *master key*, which is a number that determines the contents of the *encrypted key*. Call an Osicom sales representative at 1-888-674-2668 or 1-800-367-2729 for ordering information.

The encryption method is based on the Data Encryption Standard (DES) of the National Institute for Standards and Technology.

Bridging - protocols other than IP and IPX can be bridged on both the LAN and WAN interfaces (spanning tree bridging is not supported).

WAN Protocols

PPP
Frame Relay
RFC1490 and Cisco encapsulation
Inverse ARP

Configuration - configuration is simple because routing is divided into link services (LAN and WAN) and network services (IP, IPX, and bridging). Separate *interface* and *port* configuration screens allow for greater flexibility in configuring links.

Routing Services - routes the Internet Protocol (IP) and the Internetwork Packet eXchange (IPX) protocol.

IP includes:

- Transfer Control Protocol (TCP)
- Routing Information Protocol (RIP)
- Address Resolution Protocol (ARP)
- Bootstrap Protocol (BootP)
- Learned or static routes

IPX frames are encapsulated into frame types supported by Novell servers (*Type II*, 802.3, 802.2, and *SNAP*).

IPX includes:

- Service Advertising Protocol (SAP)
- Routing Information Protocol (RIP)
- IPXWAN parameter negotiation

System Architecture (see figure)

- 4 software elements:
 - Network Layer Services
 - LAN Services
 - WAN Services
 - Management
- 1 hardware element: LAN and WAN interfaces.

Management	Network Layer Services IP, IPX Routing and Bridging		
	Port 0	Port 1	Ports 1 - 14
	Ethernet	PPP	Frame Relay
	LAN Interface	WAN Interface	

System Architecture

Each service is embedded and knows only the interfaces to service providers (lower layers), service users (higher layers), and management. This design allows flexibility since services at any layer can be enabled, reconfigured, or disabled without affecting the other services.

When using Frame Relay protocol, the router supports up to 15 logical ports (1 for LAN and 14 for WAN 1).

Software and Configuration

- the operating system and parameter configuration are stored on an internal flashPROM
- software and configuration uploads and downloads using TFTP
- BootP supported for software downloads

2. INSTALLATION

Start of Document

- [2.1 Installation Checklist](#)
- [2.2 LEDs](#)
- [2.3 Interfaces and Cables](#)
- [2.4 Management](#)
 - [2.4.1 Passwords](#)
 - [2.4.2 Terminal Management](#)
 - [2.4.3 Telnet/SNMP Management](#)
 - [2.4.4 Dial-In Management](#)
- [2.5 Quick Start Procedure](#)
- [2.6 Obtaining the Enterprise MIB](#)

This section provides information on initial installation, configuration, and start-up procedures for your router.

The following topics are covered:

- LED indicators and interfaces
- terminal, SNMP, and Telnet management
- dial-in management
- connection of the router to the LAN and WAN
- quick start procedure; configure the router for most applications

For new installations, see the [Quick Start Procedure](#).

2.1 Installation Checklist


Before you begin installation:

1. Upon arrival of the equipment, inspect the condition of the received cartons and compare all items to the packing list attached to the carton.
2. Notify both Osicom Technologies' Customer Service Department (1-800-359-2273) and the transportation carrier *immediately* if there are any damages or shortages.
3. Save the cartons and foam inserts in case the unit must be shipped at a later date.


2.2 LEDs

The table below identifies and describes the LED indicators on the front panel.

LEDs		
LED	COLOR	INDICATION/FUNCTION
SYS	Red	On power-up, LED blinks momentarily, then goes out. If LED stays lighted, the unit has failed and is not operational.
	Off	Router is operational.
TST	Red	A diagnostic test is active - flashes for an interface test; steady on for a network test.
ALM	Red	Alarm condition (Red, Blue, Yellow, OOF, LOS)
W1	Green	The WAN interface is up.
	Off	The WAN interface is down.
W2	Green	Not used.
LAN	Green	The LAN interface is up.
	Off	The LAN interface is down.
COL	Red	Blinks once when any collision occurs on the LAN.
PWR	Green	Power is on.

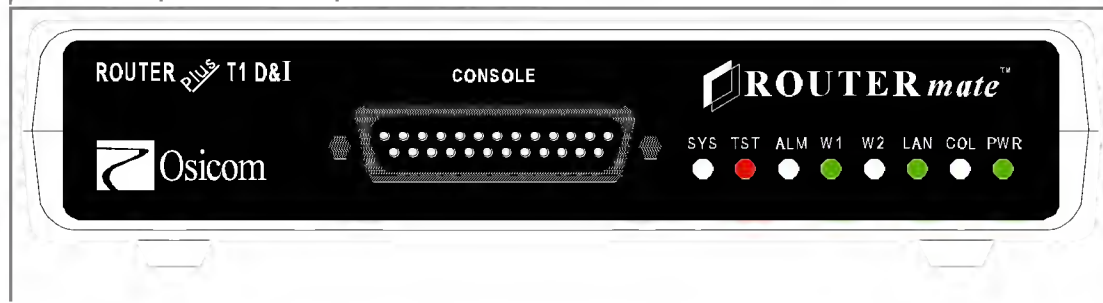

2.3 Interfaces and Cables

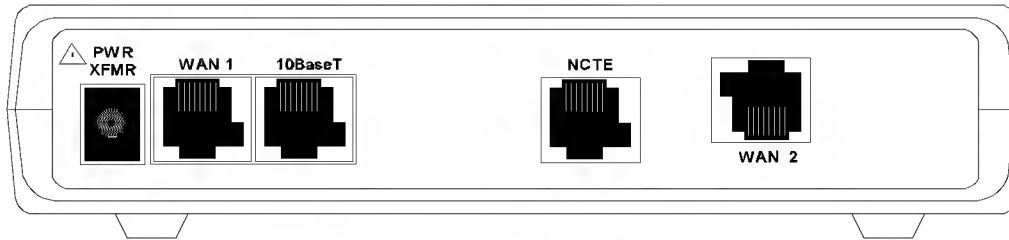

Rear Panel Connectors

NOTE

Do not connect cables until completing the Quick Start procedure.

See [Interfaces and Cables](#) for interface pin descriptions and cables available from Osicom.

WAN 1

The WAN 1 Interface connects the router to the Wide Area Network. The connector is an RJ48, 8-pin keyed modular jack and accommodates D4- or ESF-framed formats; or fractional T-1 input using from 1 to 24 DS0s. Configure the interface to match the type of service supplied by the carrier. See [T1 CSU Configuration](#).

Use cable DCA94511, included with the unit, to connect the WAN 1 interface to the RJ48 Telco jack.

10BaseT

The LAN connector is a 10BaseT interface that connects the router to the Local Area Network (LAN). It is an RJ45, 8-pin keyed modular jack. Use a customer-supplied 10BaseT drop cable to connect the LAN interface to a Media Access Unit (MAU) on the LAN.

NCTE


The NCTE interface is an 8-pin modular jack. It connects the Drop & Insert to the customer's PBX or other DS1 device. Use the 8-pin modular to DB15 cable adapter 115-0611-01 (included). See [T1 CSU Configuration](#) to configure NCTE interface parameters.

WAN 2

When the optional integral V.32bis modem is present, this interface provides a connection to dial lines for secure remote dial-in access of the router's management screens. It is an 8-pin modular connector. See [Dial-In Management](#).

Console

The Console interface on the front panel is an RS-232 DB25 female connector. It provides a connection for local management via an ASCII terminal. The console cable should be a straight-through cable.

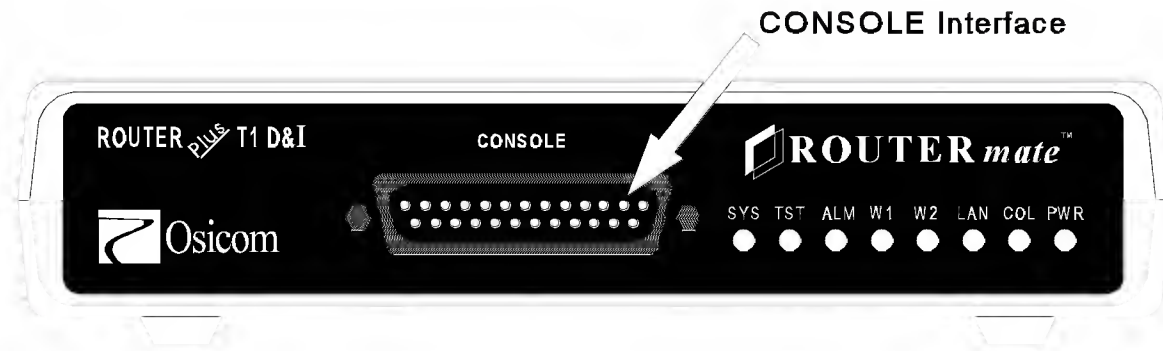

Use the terminal to access management screens for configuring, testing, and monitoring the status of the router.

Power

The router includes a wall-mount transformer. Refer to [Specifications](#) for power requirements.

NOTE



Use only the wall-mount transformer included with the unit. See the Multipurpose Label on the underside of the unit for the part number.

2.4 Management

The Routermate Router Plus T1 Drop & Insert CSU can be managed in a variety of ways, as follows:

- ASCII terminal
- SNMP (Simple Network Management Protocol)
- Telnet
- Dial-in management (optional)

NOTE

Before SNMP or Telnet management can be used, you must first configure the IP address on the Port IP Routing Options screen (see [Quick Start Procedure](#)).

SNMP and Telnet can be used simultaneously; telnet and terminal management cannot.

2.4.1 Passwords

Access to certain management screens is restricted to users who can enter a password.

Either of two passwords can be entered. If neither password has been configured, enter the default password, which is [CR] for both passwords.

The two passwords are:

Console Password - grants limited access to the management screens. The user can access all screens except encryption screens.

Key Password - grants access to all screens.

Both passwords are configured on the [Unit screen](#).

2.4.2 Terminal Management

Connect an ASCII terminal directly to the router's front-panel CONSOLE interface to access the management screens. See [Quick Start Procedure](#).

2.4.3 Telnet/SNMP Management

Telnet allows the management screens to be accessed from any host on the network. An SNMP management station can configure the optional encryption card using the enterprise MIB. Using the standard MIB II, an SNMP management station can view the status of the router. See [Obtaining the Enterprise MIB](#).

Telnet or SNMP management can be performed via the LAN or WAN interface. To manage the router using Telnet or SNMP:

1. IP routing must be enabled (default). See [Port Configuration](#).
2. If the WAN interface is configured for *Unnumbered* mode (default), you must use the LAN IP address (default is 192.0.2.1).
3. If the WAN interface is configured for *Numbered* mode, you can use either the LAN or WAN IP address (default WAN address is 192.0.3.1).
4. Verify that the interface associated with the address you are attempting to access is *Up* (see the [LAN Status](#) and [WAN Status](#) screens).
5. For SNMP management, configure the SNMP R/O Community and the SNMP R/W Community to match the strings used by the SNMP management station (see the [Management screen](#)).

Defaults: R/O = *public*
R/W = *private*

6. For Telnet access, set the Telnet Server parameter on the Management screen to *Enabled* (default).

After making a Telnet connection to a defaulted unit, configure the IP addresses assigned by your network administrator to the router's LAN port. When you re-configure the IP address for the interface to which the Telnet session is connected, the Telnet session is interrupted. You can then establish a new connection, if you wish, to the newly configured address.

NOTE

The default IP addresses are only to facilitate initial configuration by remote access. They cannot be used as the permanent IP addresses.

2.4.4 Dial-In Management

This optional feature provides a backup management path. The optional WAN 2 interface is used for secure dial-in management. A remote modem operator can access the terminal management screens. The remote modem must be V.32-compatible.

Before making a dial-in management call, attach the cable and configure the integral and originating modems as follows:

1. Connect the DDD line cable (115-0414-001) from the WAN 2 interface to an RJ11 jack.
2. On the [Modem screen](#), configure the following parameters:
 - Modem Security (default = Disabled)
 - Security Password (default = *password*)
 - Auto Answer (default = Enabled)

NOTE

If using Osicom's 4532 or 4232 modem, you can enable **Modem Security** to prevent an unauthorized connection. If using a modem other than Osicom's 4532 or 4232 modem, **Modem Security** must be disabled.

3. If using Osicom's 4532 or 4232 modem to originate the call, configure the originating modem as follows:
 - a. Enable level 1 security.
`AT"E1`
 - b. Set both passwords to match the Security Password (default is *password*).
`AT"Zpassword`
`AT"Ypassword`
 - c. Set the modem user ID to usr in order to connect the router with security. Use `AT"Wusr`.

After making a connection, enter any key; the router's banner screen appears and you are prompted to enter a terminal selection, followed by the password.

2.5 Quick Start Procedure

The following steps facilitate initial installation and configuration.

NOTE

This procedure assumes you are accessing the management screens from a directly-connected terminal.

Default configuration settings - The default settings allow you to get started quickly and easily with minimal configuration.

NOTE

If your application matches the default settings of IP routing over an unnumbered PPP link, then you only need to configure the CSU and assign DS0s and configure the IP address and subnet mask on the LAN port. See steps [4](#) & [7](#).

Verify that the following parameters suit your application. Contact your carrier and network administrator or Internet services provider.

The router's default settings are:

LAN interface:

Protocol: *Ethernet* (fixed)
Port 0 (LAN):
IP Address: 192.0.2.1
Subnet Mask: 255.255.255.0
IP Routing: *Enabled*
IPX Routing: *Disabled*
Bridging: *Disabled*
Frame Type: *TYPE II*

WAN Interface:

Protocol: *PPP* (Point-to-Point)
Port 1 (WAN):
IP Routing: *Enabled*
Mode: *Unnumbered*
IPX Routing: *Disabled*
Bridging: *Disabled*
IP Address: 192.0.3.1 (Numbered Mode)
Subnet Mask: 255.255.255.0
DLCI: 25

The T1 CSU's default settings are:

T1 Format: *Auto Detect*
T1 Coding: *Auto Detect*
T1 Timing: *Repeater*
ESF Data Link: *AT&T TR-54016*
NCTE: *Disabled*
NCTE format: *ESF*
NCTE coding: *B8ZS*
DS0s: *WAN 1*

Perform all the steps in the procedure if your application requires settings that are different from the defaults above.

Summary of Steps:

- [1.](#) Installation checklist (prepare site; obtain cables)
- [2.](#) Apply power to router.
- [3.](#) Connect terminal.
- [4.](#) Configure CSU and assign DS0s to the WAN 1 or NCTE interface.
- [5.](#) Select WAN protocol; PPP or Frame Relay.
- [6.](#) Enable or disable IP, IPX, Bridging for the LAN port (Port 0).
- [7.](#) Configure IP, IPX options for the LAN port.
- [8.](#) Enable or disable IP, IPX, Bridging for the WAN port(s).
- [9.](#) Configure IP, IPX options for the WAN port(s).
- [10.](#) Connect LAN and WAN cables.
- [11.](#) Test CSU.
- [12.](#) Save configuration to Flash.

☐ **STEP 1:** *Installation Checklist*

1. Prepare the site, including provision for a dedicated power outlet. Locate the unit in close proximity to the T1 line, PBX and LAN hub.
2. Obtain the following items:
 - ANSI terminal with a straight-through RS-232 cable.
 - a 10BaseT LAN cable.
 - PBX cable

☐ **STEP 2:** *Power Up*

1. Apply power.
2. The red **SYS** LED blinks momentarily, then goes out.

☐ **STEP 3:** *Connect Terminal*

1. Use a straight-through RS-232 cable to connect the terminal to the CONSOLE port on the front of the router. Power-on the terminal and configure the terminal as follows:

Rate: 9600 bps
Mode: full duplex
Character: 8 bits
Parity: none
Stop bits: 1
CR = CR

The [Terminal Selection screen](#) appears. If the Terminal Selection screen does not appear, type [CTRL-N].

2. Type the letter for the type of terminal that is connected to the router; you are prompted for a password.
3. Type [CR], the default password, to access the management screens. The Main Menu is displayed.

☐ **STEP 4:** *Configure the CSU and assign DS0s to the WAN 1 or NCTE interface*

1. Access the [T1 CSU Configuration screen](#) and configure the following parameters ([see defaults](#)):
NI Format

NI Coding
Timing

Auto Detect should not be used on both ends of a point-to-point circuit.

2. Set NCTE to *Enabled*.
3. Match the following with the PBX configuration:
NCTE Format
NCTE Coding
4. Access the [Interface Configuration screen](#) and configure the Data Rate for *N x 56k* (default) or *N x 64k*.

WARNING

Using *N x 64* will cause line density errors unless the line is provisioned for B8ZS or the *Invert Data* option is used.

5. Access the [Bandwidth Allocation screen](#) and assign DS0s to the WAN and NCTE interfaces.

6. Assign the DS0s to *Not Used* or *WAN 1* (default) or *NCTE*. DS0s configured as *NCTE* are actually configured as either *NCTE Data* or *NCTE A=x B=x* for voice channels using trunk processing.

Select as follows to fit the application:

Application	Selection
E&M Busy	A=1 B=1
E&M Idle	A=0 B=0
GS and LS FXS Idle	A=0 B=1
GS FXO Busy No TG and Ring ing	A=1 B=0 A=0 B=1
GS FXO Busy Tip Ground	A=0 B=0
GS FXO Busy TG and Ringing	A=1 B=1
GS FXO Idle	A=0 B=0
GS FXS Busy Ring Ground	A=1 B=1
GS FXS Busy Loop Closure	A=0 B=0
LS FXO Busy	A=0 B=1
LS FXO Idle	A=0 B=0
PLAR Busy	A=1 B=1
PLAR Idle	

WARNING

Voice channels using robbed bit signaling will not operate properly on channels configured for *NCTE Data*.

☐ **STEP 5:** *Configure Protocol for the WAN*

1. Access the [WAN 1 Configuration screen](#).
2. Select the Protocol: *PPP*, *Frame Relay - Annex D*, or *Frame Relay - No LMI*. Default is *PPP*.

☐ **STEP 6:** *Enable/Disable IP, IPX, Bridging for LAN*

Access the [Port 0 Configuration screen](#) and set IP Routing, IPX Routing, and Bridging to *Enabled* or *Disabled*.

☐ **STEP 7:** *Configure IP, IPX Options for LAN*

If IP Routing is *Enabled*:

1. Access the [Port 0 IP Routing Options screen](#).
2. Configure the Address.
3. Configure the Subnet Mask.
4. Configure Frame Type to match the type used on the LAN. The default is TYPE II, which is almost always used.

If IPX Routing is *Enabled*:

1. Access the [Port 0 IPX Routing Options screen](#).
2. Configure the IPX Network Number for the LAN.
3. Configure the Frame Type to match the type used on the LAN.

☐ **STEP 8:** *Enable/Disable IP, IPX, Bridging for WAN*

For Point-to-Point applications, configure the following for Port 1 only.

For Frame Relay applications, configure the following for each port 1-14 as required.

1. Access the [Port Configuration screen](#).
2. Set IP Routing, IPX Routing, and Bridging to *Enabled* or *Disabled*.
3. *Frame Relay only:* Configure the DLCI for this port. **The number configured here is the DLCI used to reach the remote site.**
4. Frame Relay only: verify Encapsulation is set for RFC1490 (default).

☐ **STEP 9:** *Configure IP, IPX Options for WAN*

For Point-to-Point applications, configure the following for Port 1.

For Frame Relay applications, configure the following for each port for which a DLCI was configured in the previous step.

If IP Routing is *Enabled*:

1. Access the [IP Routing Options screen](#) for the individual port.
2. Configure the IP Address and Subnet Mask. No entries are required for Unnumbered Mode.

For Frame Relay applications:

If the remote router requires it, enable Inverse ARP on the port IP Routing Options screen. The Routermate Plus router does not require Inverse ARP (default is disabled).

If IPX Routing is *Enabled*:

1. Access the [IPX Routing Options screen](#) for the individual port.
2. Configure the IPX Network Number for the WAN. No entry is required for Unnumbered Mode.
3. Enable or Disable IPXWAN to match the router on the other end of the WAN link. Support for IPXWAN is only provided to allow the Routermate router to be compatible with Novell routers. It is not required to route IPX and should be disabled unless it is required. The default is disabled.

For Frame Relay applications:

If the remote router requires it, enable Inverse ARP on the port IPX Routing Options screen. The Routermate router does not require Inverse ARP (default is disabled).

☐ **STEP 10:** *Attach LAN and WAN Cables*

1. Use the WAN cable included with the unit to connect the WAN 1 interface to the T1 line.
2. Use a customer-supplied 10BaseT drop cable to connect the 10BaseT interface to the LAN.
3. Connect the PBX cable to the NCTE interface, using the DB-15 to RJ-48 adapter if necessary.

☐ **STEP 11:** *Test CSU*

After all the cables are connected and you have completed the initial software configuration, the Router Plus T1 Drop & Insert CSU will communicate with the T1 network and PBX.

1. Verify that the front panel ALM (alarm) LED is OFF and the W1 LED is ON.
2. If the ALM LED is ON, refer to the [T1 CSU Status and Test screen](#) and related sections in the manual.

☐ **STEP 12:** *Save Configuration to Flash*

When your configuration has been implemented and checked out to be satisfactory, access the Main Menu and select Save to Flash; a prompt will appear to confirm your selection.

If the new configuration is not satisfactory, power cycle the router (off-on) before saving it to restore the original configuration.

WARNING

If the unit is power cycled before the configuration is saved to flash, the original configuration will be restored.

You are now ready to pass data.

Return to  to locate specific information on configuration and management screens.

2.6 Obtaining the Enterprise MIB

There are two enterprise MIBs:

- CSU - configure and monitor CSU parameters
- Encryption - configure encryption options

The enterprise MIBs can be downloaded from Osicom's Web site at: www.osicom.com.

3. TERMINAL OPERATION

Start of Document


- [3.1 Screen Structure, Terminal Management](#)
- [3.2 Keys and Conventions](#)
- [3.3 Terminal Selection](#)
- [3.4 Password](#)
- [3.5 Main Menu](#)
 - [3.5.1 Save To Flash](#)
 - [3.5.2 Logoff](#)
 - [3.5.3 Screen Path](#)

This section provides an overview of terminal management. After reading this section, the user will be familiar with the following:

- Terminal screen structure and hierarchy of menus
- Keys, conventions, and screen paths - which keys to use to move around screens, edit parameters, and access other screens
- ASCII terminal communication parameters
- Terminal Selection
- Password
- Main Menu
- Save To Flash
- Logoff procedure

3.1 Screen Structure, Terminal Management

This figure shows the screen structure for the router's terminal management screens (see [Main Menu](#)).

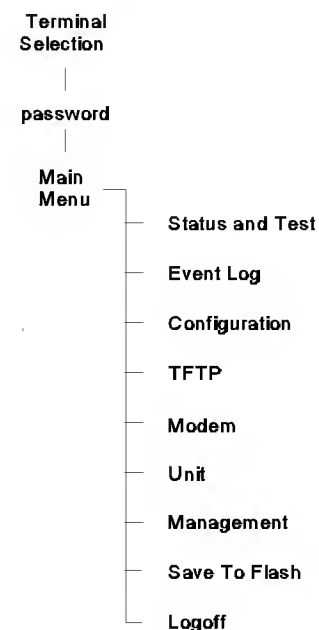

Screen Structure, Terminal Management

3.2 Keys and Conventions

Prompts at the bottom of each screen instruct the user which keys to use to:

- Position the cursor
- Edit parameters
- Execute commands
- Access other screens

See the table of the most [frequently used keys](#).

Edit Fields

To **configure a parameter** by typing a value:

1. Press [CR] to highlight the field.
2. Type the value.
3. Press [CR] again to exit the field.

To **restore the parameter** to its original contents, press [Esc] before exiting the field.

To edit existing text in a field that can be edited:

1. Move the cursor to the field and press [Ctrl-E] to highlight the field.
2. Use the arrow keys to move the cursor within the field.
3. Type over the existing information.
4. Press [CR] to exit the field.

To **delete existing text** from a field that can be edited:

1. Move the cursor to the field and press [CR].
2. Press [Space Bar].
3. Press [CR] again.

Selecting from multiple options

1. Move the cursor to the parameter.
2. Press [CR] to toggle/scroll through the available options.
3. When the desired option is displayed, either move the cursor to the next parameter using [Space Bar] or [Backspace], or exit the screen.

To **restore the parameter** to its original contents, press [Esc] before exiting the field.

Saving Changes

Press [X] to exit from a screen. If you have modified any parameter, you are prompted:

Confirm this configuration?

No Yes

Select *No* to exit the current screen without saving the changes; select *Yes* to save the changes and exit.

Frequently Used Keys	
KEY	FUNCTION
Move Around in Screens	
[Space Bar]	cursor down
[Back Space]	cursor up
[C trl-N]	Terminal Selection screen
[Ctrl-O]	re-draw screen
[Ctrl-T]	return to Main Menu *
[X]	exit to previous screen
Type an Entry	
[CR]	select field
[Back Space]	delete character left
[Esc]	restore original setting
[Ctrl-E]	highlight field, edit text
[CR][Space Bar]	delete current contents
[CR]	
Select From List	
[CR]	scroll/toggle through list
[Esc]	restore edited field to its original setting
[Space Bar]	move to next field
* [Ctrl-T] returns to the Main Menu <u>without</u> prompting to confirm configuration changes.	

Certain prompts will change to correspond to the function or operation. An example is shown below.

FUNCTION/OPERATION	PROMPT
Edit an entry	Edit Field = [CR]
Select from multiple options	Scroll Through Options = [CR]
Select another menu	Select Menu = [CR]

3.3 Terminal Selection

Use any conventional ASCII asynchronous display terminal to access the router's management screens.

Connect the terminal to the **CONSOLE** interface using a straight-through RS-232 cable.

Configure the terminal for:

- Rate: 9600 bps
- Mode: full duplex
- Character: 8 bits
- Parity: none
- Stop bits: 1
- Flow control: DC1/DC3 (Xon/Xoff)

When the unit is turned on, there is a brief delay as internal diagnostics run automatically. Then the [Terminal Selection screen](#) appears.


When the router is powered up, the following prompt appears on the screen:

Router Plus Drop and Insert T1 CSU Boot Diagnostics 2.x.xx

Copyright 1996-1997 Osicom Technologies, Inc.

Press D to run diagnostics

If you want to run diagnostic tests or initiate TFTP downloads, press D to display the Diagnostic Menu. If you do not press D at the prompt, after a slight delay, the Terminal Selection screen appears.

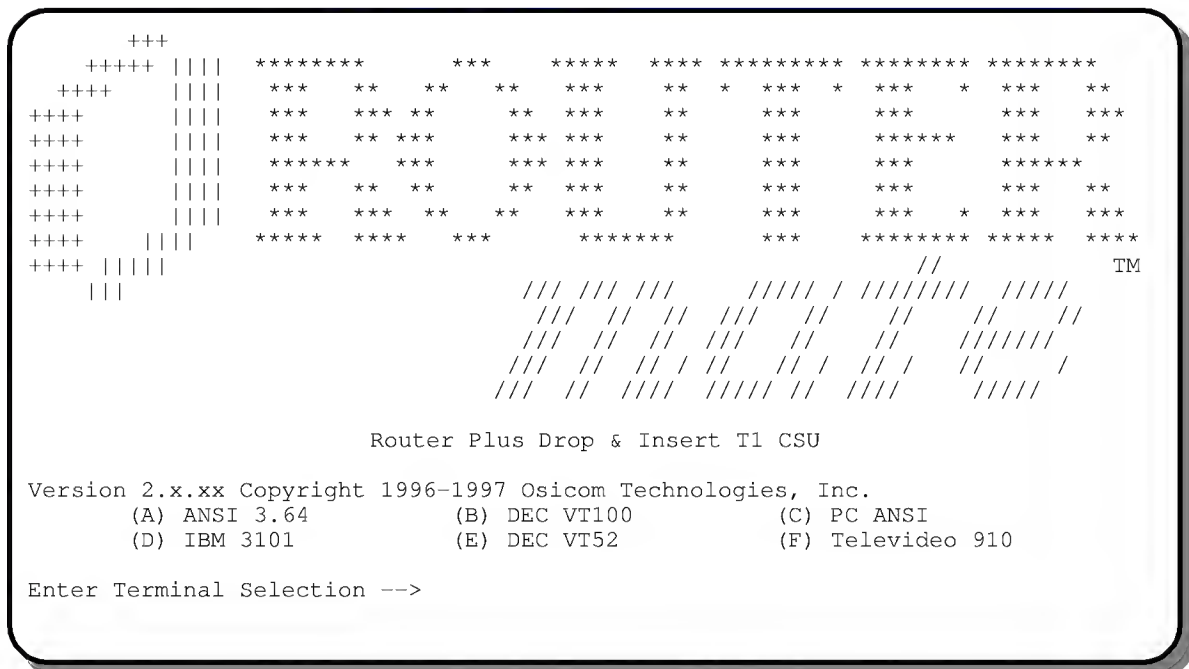

Terminal Selection Screen

If the Terminal Selection screen does not appear, press [Ctrl-N].

Type the letter for the type of terminal that is connected to the unit:

- (A) ANSI 3.64
- (B) DEC VT100
- (C) PC ANSI
- (D) IBM 3101
- (E) DEC VT52
- (F) Televideo 910

If the terminal displays garbled characters after the terminal type is selected, press [CTRL-N] to return to the Terminal Selection screen, where you can select a different terminal type.

Telnet: When a Telnet connection is used to access the management screens, the terminal type usually can be determined automatically. If not, the Terminal Selection screen is displayed. The user has three attempts or 30 seconds to enter the password before the session is disconnected.


Access to the management screens is restricted to users who can enter a password.

NOTE

When encryption hardware is installed, the password is checked for *Console Password* or *Key Password*.

- If the Console Password is entered, encryption screens cannot be accessed and encryption options cannot be changed.
- If the Key Password is entered, all screens can be accessed.

The default Key Password is [CR]. Entering [CR] on a defaulted unit with encryption hardware installed, causes the user to logon at the Key Password level.

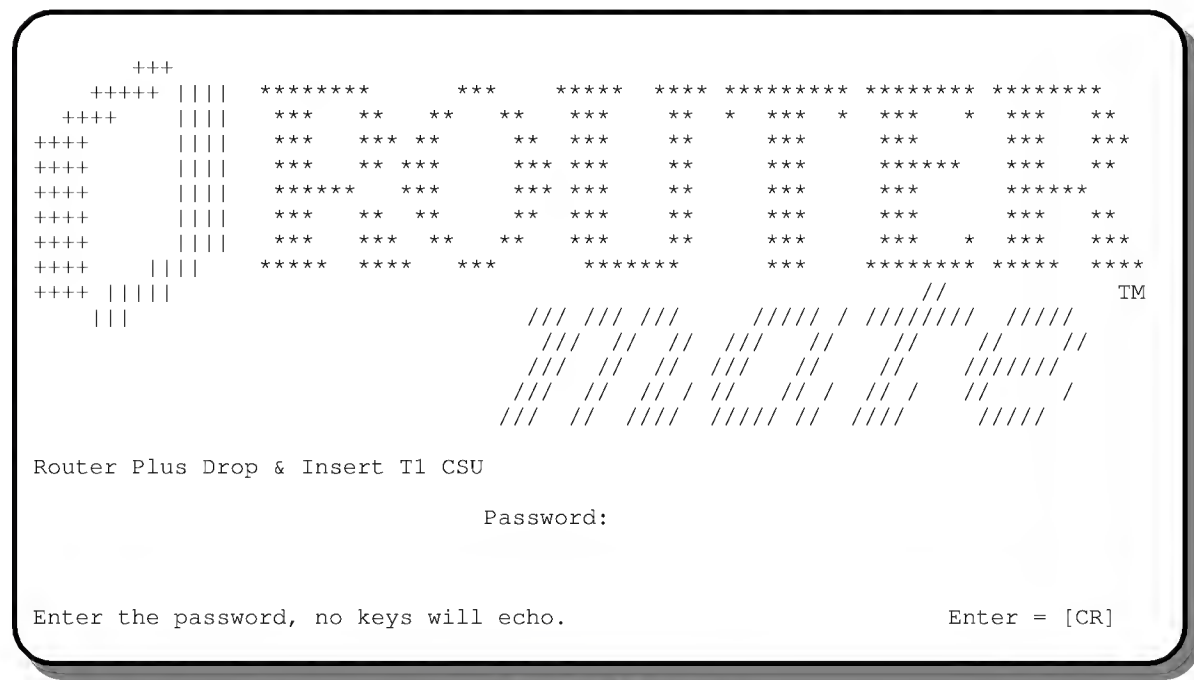

Password Screen

Configure the passwords on the [Unit screen](#).

To access the management screens, enter either the console password or the key password at the prompt.

If no password has been configured, simply press [CR].

The Main Menu is displayed.

If an incorrect password is entered, access is denied and the password prompt is re-displayed.


Telnet: When a Telnet connection is used to access the management screens, the terminal type usually can be determined automatically. If so, the banner screen and password prompt are displayed. If the user must select a terminal type, the password prompt is displayed after the terminal is selected.

NOTE

The Telnet user has 30 seconds from the time the Telnet session is connected to enter the password, or the session is disconnected.


3.5 Main Menu

The Main Menu is the top level screen from which you select other screens to manage and configure the router and CSU.

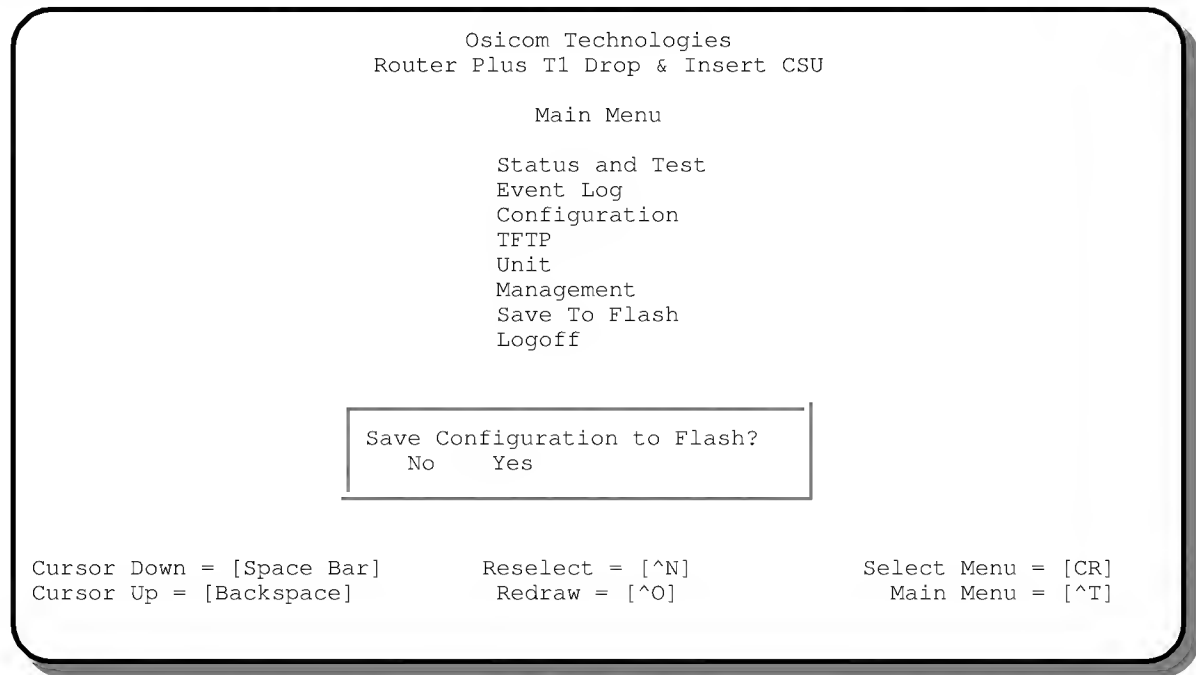

Main Menu

Screen Path

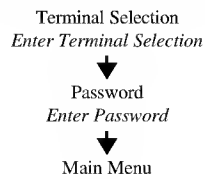

To make a selection from the Main Menu:

Press [Space Bar] or [Back Space] to move the cursor to the desired selection.

Press [CR]; the selected menu appears.

3.5.1 Save To Flash

After the current configuration checks out to be satisfactory, you can save it to Flash as the permanent configuration. To save the current configuration to flash:

1. Position the cursor on Save To Flash.
2. Press [CR]; a message box is displayed indicating the status of save.

If *Yes* is selected, *"Saving Configuration, please wait"* is displayed, followed by *"Save to flash complete"* with the cursor next to a choice of *OK*.

While *"Saving Configuration, please wait"* is displayed, keyboard input is ignored.

3.5.2 Logoff

Select Logoff to return to the Terminal Selection screen. Access to the management screens is then restricted to users who can enter either the console password or the key password.

NOTE

Configuration changes are lost if the unit is reset or power is turned off without first saving the configuration to flash.

Telnet: Selecting Logoff disconnects the Telnet connection.

3.5.3 Screen Path

To help the user navigate through the menus and screens, a Screen Path is illustrated next to each screen. Screen names are inside boxes. Commands and on-screen selections that lead to a screen are written in *italics*.

For example, as seen in the screen path for the Main Menu, at the Terminal Selection screen enter the terminal selection [A - F] to display the Password screen. Enter the password to display the Main Menu.

4. STATUS AND TEST SCREENS

Start of Document

- [4.1 Screen Structure, Status and Test](#)
- [4.2 Status and Test Menu](#)
- [4.3 Router Summary](#)
- [4.4 T1 CSU Status and Test](#)
 - [4.4.1 Loopback Tests](#)
 - [4.4.2 Alarms](#)
 - [4.4.3 Alarm Indicators](#)
 - [4.4.4 Error Counters](#)
 - [4.4.5 Interface Test](#)
 - [4.4.5.1 Loopback Tests](#)
 - [4.4.5.2 Counters](#)
 - [4.4.6 Register Summary](#)
 - [4.4.7 User Registers](#)
 - [4.4.8 Carrier Registers](#)
- [4.5 Interface Status Summary](#)
 - [4.5.1 LAN Status](#)
 - [4.5.2 WAN Status \(Frame Relay\)](#)
 - [4.5.2.1 Lower Layer Status \(WAN\)](#)
 - [4.5.2.2 Annex D Status](#)
 - [4.5.2.2.1 DLCI Status Table](#)
 - [4.5.3 WAN Status \(PPP\)](#)
- [4.6 Port Status Summary](#)
 - [4.6.1 Port Status \(LAN - Ethernet\)](#)
 - [4.6.2 Port Status \(WAN, Frame Relay\)](#)
 - [4.6.3 Port Status \(WAN, PPP\)](#)
 - [4.6.3.1 LCP Status](#)
 - [4.6.3.1.1 LCP Negotiable Options](#)
 - [4.6.3.2 IPCP Status](#)
 - [4.6.3.3 IPXCP Status](#)
 - [4.6.3.4 BCP Status](#)
- [4.7 TCP/IP Status and Test Menu](#)
 - [4.7.1 Ping/Trace Route](#)
 - [4.7.2 IP Status](#)
 - [4.7.2.1 IP Port Counters](#)
 - [4.7.3 ICMP Status](#)
 - [4.7.4 TCP and UDP Status](#)
 - [4.7.4.1 TCP Connection Table](#)
 - [4.7.5 SNMP Status](#)
 - [4.7.6 ARP Table](#)


- [4.8 IPX Status](#)
 - [4.8.1 IPX Status \(LAN and WAN\)](#)
 - [4.8.1.1 IPX RIP/SAP Status \(LAN and WAN\)](#)
 - [4.8.1.2 IPXWAN Status](#)
- [4.9 Bridging Status](#)
 - [4.9.1 Port Bridging Status](#)
- [4.10 IP Routing Table](#)
- [4.11 IPX Routing Table](#)
- [4.12 IPX Services Table](#)
- [4.13 Bridging Table](#)
- [4.14 Event Log](#)

This section illustrates and describes the router's status and test screens and the event log. Basically, this text serves as a reference tool for defining the various parameters and options appearing on the screens.

After reading this section, the user will be able to navigate through the interface and port status and test screens and understand the contents and function of each.

4.1 Screen Structure, Status and Test

The organization of the Status and Test screens is shown below. Access the Event Log from the Main Menu.

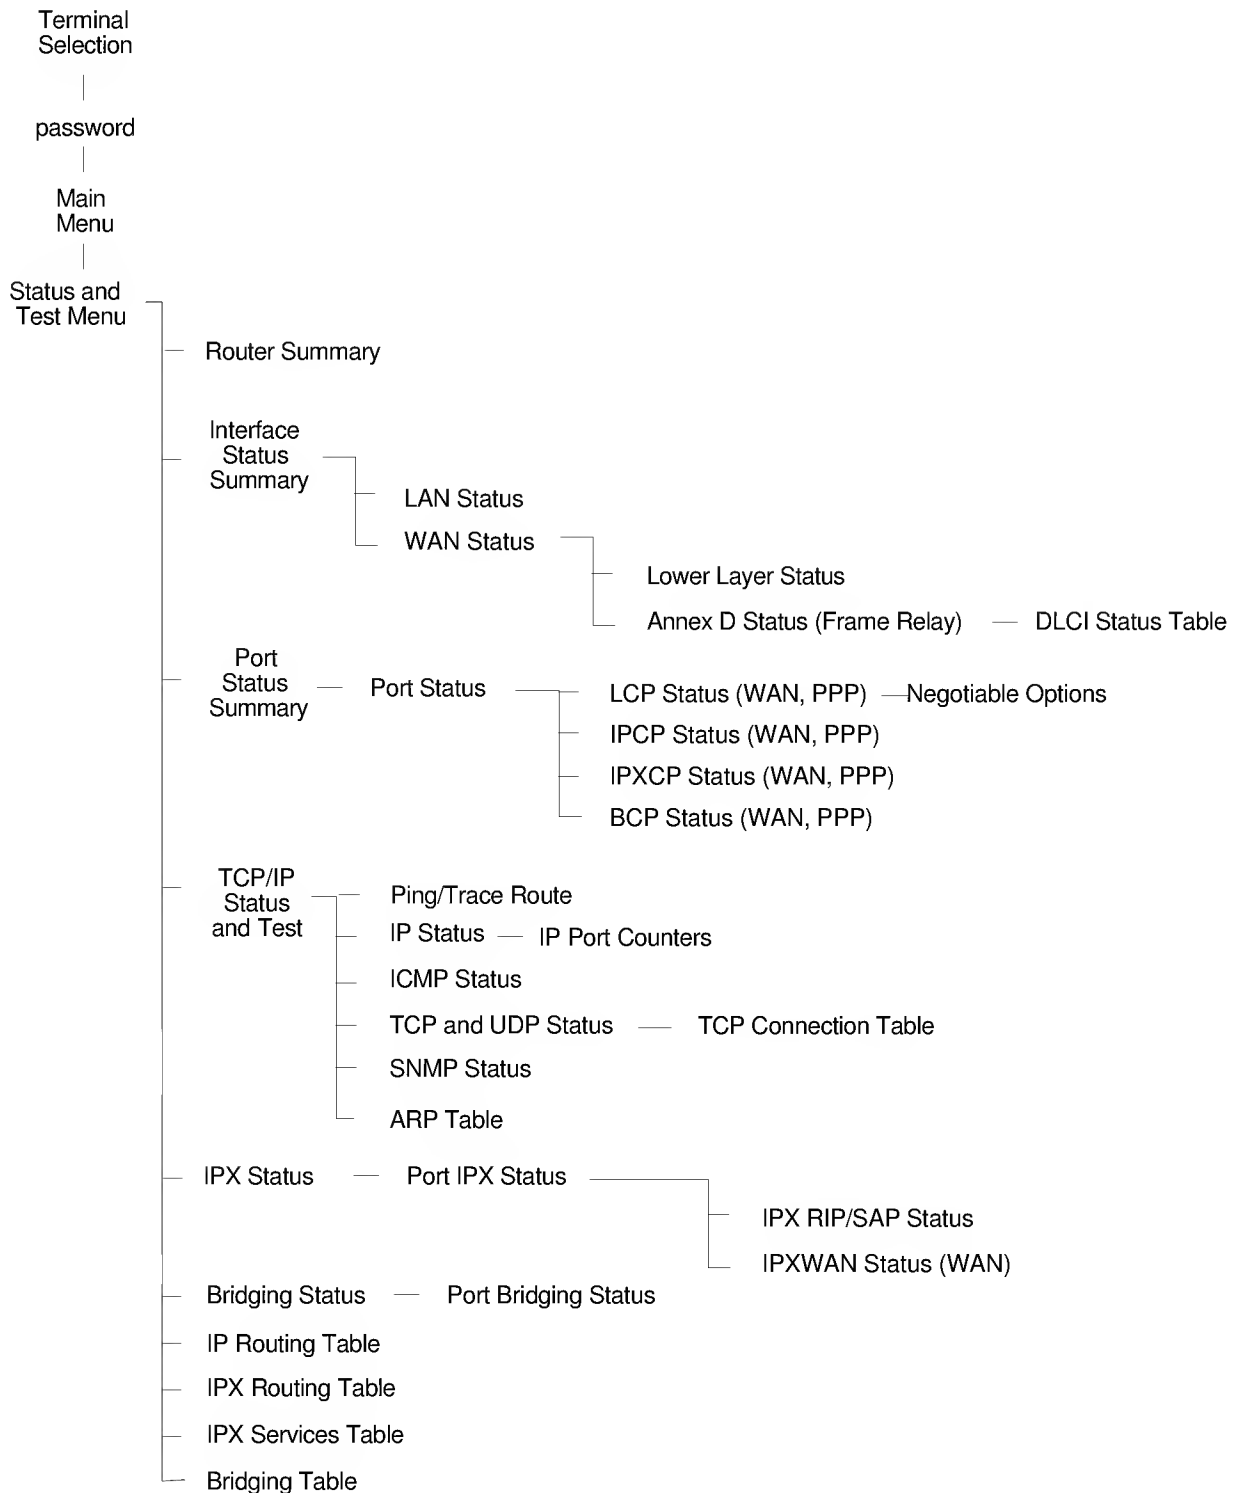

Screen Structure, Status and Test

The Status and Test screens and the Event Log are described below.

Router Summary - view the major configured options and parameters of all the ports defined on the router, including: interface, operational status, DLCI (frame relay), IP address, IPX network number, and IPXWAN and bridging status.

Interface Status Summary - view the configured protocol for the LAN and WAN interfaces and the operational status of each. Access the interface-specific screens below.

LAN Status - view the configured and operational condition of the LAN interface; monitor counters and statistics.

WAN Status - view the configured and operational condition of the WAN interface; monitor counters and statistics; access the screens below.

Lower Layer Status - monitor statistics of errored frames transmitted and received over the WAN interface; monitor WAN utilization.

Annex D Status (Frame Relay only) - monitor RFC 1315 error and status messages; access the DLCI Status Table.

DLCI Status Table (Frame Relay only) - view the status of all Data Link Connection Identifiers (DLCIs).

Port Status Summary - view the status of all the virtual ports configured on the router; includes port name, corresponding interface, protocol, and condition (up, down, or disabled). Access the port-specific status screens below.

Port Status (LAN) - view the status and monitor counters and statistics for the LAN interface.

Port Status (WAN) - view the status and monitor counters and statistics for each port on the WAN interface. If the protocol is PPP, access the screens below.

LCP Status (PPP only) - view the status of the Link Control Protocol, which is used to configure, maintain, and terminate a point-to-point link.

LCP Negotiable Options - view the values of LCP negotiable options in configuration requests sent and received by the router.

IPCP Status (PPP only) - view the status of the IP Control Protocol, which is responsible for configuring and establishing the PPP IP protocol modules on both ends of a point-to-point link.

IPXCP Status (PPP only) - view the status of the IPX Control Protocol, which is responsible for configuring and establishing the PPP IPX (Internetwork Packet eXchange) protocol modules on both ends of a point-to-point link.

BCP Status (PPP only) - view the status of the Bridging Control Protocol, which is responsible for configuring and establishing the PPP bridge protocol modules on both ends of a point-to-point link.

TCP/IP Status - access the screens below.

Ping/Trace Route - use the ping command to determine if a gateway (router) or host in the **network is reachable or use** the trace route command to determine the routes used from your router to a specified host or gateway (router).

IP Status - view information and statistics for the Internet Protocol (IP) for all ports on the router which are configured for IP routing.

IP Port Counters - view the number of datagrams received and transmitted each port configured for IP routing.

ICMP Status - view information and statistics for the Internetwork Control Message Protocol (ICMP) for all ports on the router which are configured for IP routing.

TCP and UDP Status - view information and statistics for the TCP (Transmission Control Protocol) and UDP (User Data Protocol) for all ports on the router which are configured for IP routing; access the screens below.

TCP Connection Table - view MIB II information about the router's existing TCP connections.

SNMP Status - view input and output statistics and counters for Simple Network Management Protocol.

ARP Table - view the physical address and corresponding network address used in Address Resolution Protocol.

IPX Status - view a summary of information and statistics for all ports on which IPX (Internetwork Packet eXchange) routing has been enabled; access the screens below.

Port IPX Status (LAN and WAN) - view information and statistics of each ports on which IPX routing has been enabled.

Port IPX RIP/SAP Status (LAN and WAN) - view input and output RIP (Routing Information Protocol) and SAP (Service Advertising Protocol) message counters.

Port IPXWAN Status (WAN only) - view the status of counters for IPXWAN protocol, which is used for establishing connections across point-to-point (WAN) links.

Bridging Status - view a summary of information and statistics for each port on which bridging is enabled; access the port-specific screens.

Port Bridging Status - view counters for various types of received and transmitted frames.

IP Routing Table - view the IP Routing Table.

IPX Routing Table - view the IPX Routing Table.

IPX Services Table - view the Service Advertising Protocol (SAP) Table. SAP is an IPX protocol that is used to advertize various Novell application services offered by such devices as file servers, printer servers, and gateways.

Bridging Table - view the Bridging Table.


Event Log - view network messages that occur during startup and operation of the router.

4.2 Status and Test Menu

Access the Status and Test Menu from the Main Menu. This is the top-level menu from which you select other screens to view the status and statistics of the LAN and WAN interfaces.


To make a selection:

1. Press [Space Bar] or [Back Space] to move the cursor to the desired selection.
2. Press [CR]; the selected menu appears.

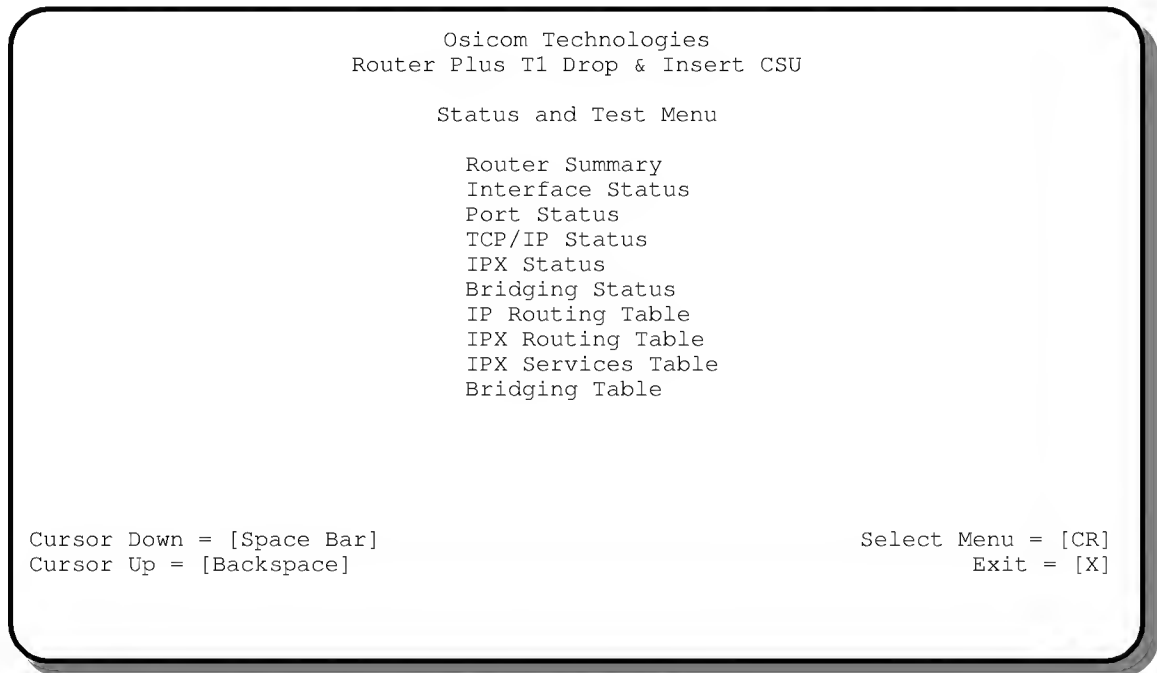


Status and Test Menu

Screen Path



4.3 Router Summary

The Router Summary screen provides an informational and operational status report on all the ports configured on the router. You can view the status of up to 15 logical ports configured. See [Router Summary, Frame Relay application](#) and [Router Summary, PPP application](#).

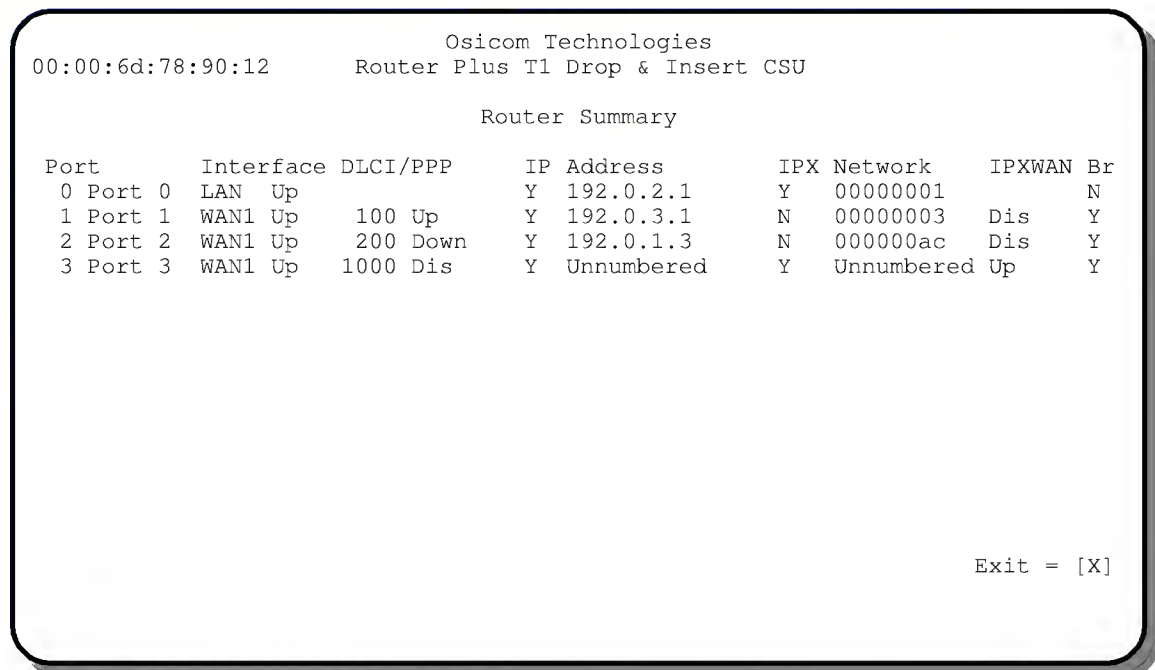

00:00:6d:78:90:12 Osicom Technologies
Router Plus T1 Drop & Insert CSU

Router Summary

Port	Interface	DLCI/PPP	IP Address	IPX Network	IPXWAN	Br
0 Port 0	LAN Up		Y 192.0.2.1	Y 00000001		N
1 Port 1	WAN1 Up	100 Up	Y 192.0.3.1	N 00000003	Dis	Y
2 Port 2	WAN1 Up	200 Down	Y 192.0.1.3	N 000000ac	Dis	Y
3 Port 3	WAN1 Up	1000 Dis	Y Unnumbered	Y Unnumbered	Up	Y

Exit = [X]

Router Summary (Frame Relay)

Screen Path

Main Menu
Status and Test



Router Summary

Port 0 is always assigned to the LAN interface and ports 1 through 14 are available for the WAN interface.

This screen is updated every two seconds.

The MAC address is permanently displayed in upper left corner of the screen.

Port - identifies the port number and the first 8 characters of the port name.

Interface - identifies the interface (LAN or WAN 1) to which the port is configured and whether the interface is *Up*, *Down*, or *Dis* (Disabled).

DLCI/PPP - identifies the Data Link Connection Identifier or Point-to-Point NCP (Network Communications Protocol) status. This field is blank for LAN.

Frame Relay: the DLCI number and (*Up*, *Down*, or *Dis* (Disabled)).

PPP: Any NCPs that are up are displayed (in the example shown in [Router Summary, PPP application](#), IP and IPX are up). NCPs that are not up are not displayed.

```

                                Osicom Technologies
00:00:6d:78:90:10      Router Plus T1 Drop & Insert CSU

                                Router Summary

Port      Interface  DLCI/PPP      IP Address      IPX Network      IPXWAN Br
0 Port 0   LAN      Up            Y 192.0.2.1      Y 00000001        N
1 Port 1   WAN1    Up      Ip IPX      Y 192.0.3.1      Y 00000003      Dis  N

Exit = [X]

```

Router Summary (PPP)

Screen Path

```

Main Menu
Status and Test
↓
Router Summary

```

IP Address - Internet protocol enabled (Y) or disabled (N) and local IP address assigned to the port.

IP Address and IPX Network - the IP Address and the IPX Network fields display Unnumbered when a WAN port set to Unnumbered. If IPXWAN is enabled, the network number may be a number assigned by IPXWAN instead of the number configured for the port. IPXWAN assigns the primary network number based on the master/slave relationship. If the local and remote router's WAN ports have different IPX network numbers, then the master unit will assign an IPX network number to the slave.

(Y) is protocol enabled; (N) is disabled.

IPXWAN - IPXWAN status: *Up*, *Down*, or *Disabled*. (WAN only) - a protocol developed by Novell and specified in RFC1634. The purpose of IPXWAN is to provide a common way of exchanging router to router information across different type of wide area links. RFC1634 describes how Novell IPX operates over various WAN media using the IPXWAN protocol.

Support for IPXWAN is provided only to allow the router to be compatible with Novell routers. It is not required to route IPX and should be disabled unless it is required. Default is disabled.

NOTE

IPXWAN must be set to the same value on both ends of a connection. If it is not set to the same value, then the router will not be able to communicate across the link.

Br - bridging enabled (Y) or disabled (N).

4.4 T1 CSU Status and Test

Use the T1 CSU Status and Test screen (below) to perform diagnostics and monitor alarm conditions on the CSU. The tests and statistics on this screen reflect all 24 DS0s. This screen is updated every two seconds. Also access the [Interface Test](#), [Register Summary](#), [User Registers](#), and [Carrier Registers](#) screens

NOTE

Register Summary, User Registers, Carrier Registers, and CRC6 counters appear only if the NI Format is set to ESF. NCTE CRC6 counters appear only if the NCTE Format is set to ESF.

Oiscom Technologies
Router Plus T1 Drop & Insert CSU

T1 CSU Status and Test

Local NI Loop:	Off-No	Test Pattern:	Off	Interface Test:	>>
Remote NI Loop:	Off-No	Insert Bit Error:	Off	Register Summary:	>>
Line Loop:	Off-No			User Registers:	>>
Payload Loop:	Off-No	Seconds In Test:	000000	Carrier Registers:	>>
Local NCTE Loop:	Off-No	Seconds In Error:	000000		
				Last Reset Time: 00:00	

NI

Alarm	Rx	Tx			
Red:	Yes	1234	Out Of Frame:	Yes	0000
Blue:	No	0000	Loss of Signal:	No	0000
Yellow:	No	0000			
				BPV:	12345
				Density:	00000
				CRC6:	00000

NCTE

Alarm	Rx	Tx			
Red:	Yes	1234	Out Of Frame:	Yes	1234
Blue:	No	0000	Loss of Signal:	No	0000
Yellow:	No	0000			
				BPV:	12345
				Density:	00000
				CRC6:	00000

Cursor Down = [Space Bar] Select = [CR]
Cursor Up = [Backspace] Clear = [C] Exit = [X]

T1 CSU Status and Test

Screen Path

Status and Test Menu
CSU Status and Test



T1 CSU Status and Test

Press [C] to clear all the counters on this screen and the user ESF Error Event counter and the Unavailable Signal State counter on the Register Summary screen. These counters are also cleared when a test is selected.

Loopback states are shown in two columns that correspond to the SNMP 'admin' and 'state' equivalents.

On or *Off* (admin) – set by the user to indicate the desired state of the loopback test.

Yes or *No* (state) – the actual state of the loopback test.

When a test is set to *On* and has responded, the 'state' column indicates *Yes*. *Off* - *Yes* indicates that the loopback was set by the remote unit.

4.4.1 Loopback Tests

Local NI Loop - a local loop of the CSU. All DS0s are looped back when a Local NI Loop is set.


Remote NI Loop - a full-rate inband test pattern generated toward the network, putting the remote unit in Line loopback. All DS0s are looped back when a Line loopback is set.

If the pattern does not come back, either:

- a remote loopback has not occurred,
- the remote unit is configured not to respond to remote loop commands, or
- the local unit can not recognize the pattern.

NOTE

The Interface Status for WAN 1 is shown as down when any of the loopbacks are set or the test pattern is engaged (see figure below).

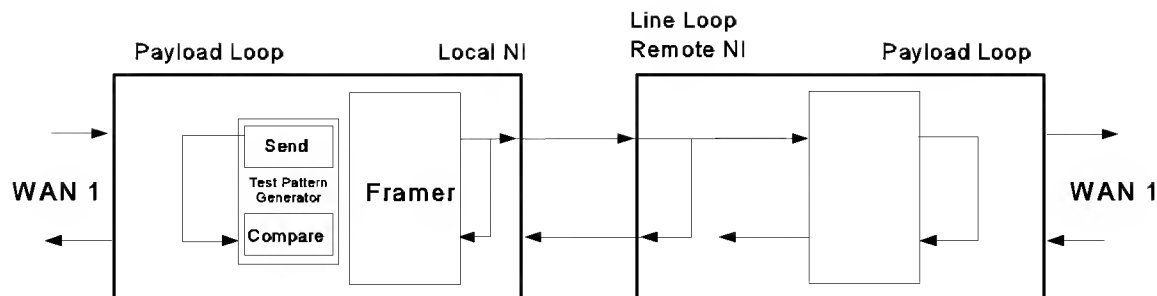

Test Pattern Generator, Loopback, and Framers Locations

Line Loop - transmits back to the network exactly what is received, unchanged. A Line Loopback can also be set by a bit pattern sent from the carrier or the remote CSU, or by a message sent by the carrier on the ESF Data Link.

Off-No - a Line Loopback is *not* set.

Off-Yes - a Line Loopback was set by the carrier or remote CSU.

On-Yes - a Line Loopback was set locally.

Payload Loop - transmits back to the network what is received on all 24 DS0s, but the signal is reframed. A Payload Loop can also be set by a message sent by the carrier on the ESF Data Link.

Off-No – a Payload Loop is not set.

Off-Yes – a Payload Loop was sent by the carrier.

On-Yes – a Payload Loop was set locally.

Local NCTE Loop - this bi-directional loopback test makes sure the NCTE is operating properly. Only DS0s assigned to the NCTE port are looped back when an NCTE loopback is set. An NCTE Loopback transmits back to the network what is received. Press **Enter** to toggle the test ON and OFF.

If the admin field shows the loop is off, but the state field shows the loop is on, the NCTE loop was generated by the device at the other end of the link.

Remote NCTE Loop - turning on this test generates a proprietary in-band bit pattern (to the NI side) for six seconds, putting the remote unit in Local NCTE loopback.

If the pattern does not come back, either a remote loopback has not occurred or the local unit cannot recognize the pattern. In this case, the admin field remains on and the state field displays *No*, indicating that the local unit cannot determine the remote unit's loopback state.

The same is true in reverse. That is, if you set the admin field to *Off* (to turn the test off), but the state field still displays *Yes*, the remote unit might still be in loopback.

Test Pattern - a diagnostic pattern used with the loopbacks. Select:

- QRSS
- Framed 1's
- Min Den (Minimum Density)
- Off

Press [CR] to toggle through the test patterns.

The QRSS test pattern will cause density errors if the coding is AMI and the density is AT&T 62411.

Insert Bit Error - bit errors inserted for all tests. Typically used to verify that the test pattern generator will detect errors.

To insert a bit error, press [CR]; *On* will appear, letting you know that the bit error was inserted. After about half a second, the display automatically toggles to *Off*.

If the bit error does not come back, there is a problem on the line.

Seconds In Test - the length of time the selected test pattern has been enabled.

Valid range: 0 to 999999 seconds

Seconds In Error - the number of seconds during which an error was detected in the test pattern.

Valid range: 0 to 999999 seconds

Last Reset Time - the time, in hours and minutes (hh:mm) since the counters were reset (cleared).

Valid range: 00:00 to 99:59

4.4.2 Alarms

There are three alarm conditions for the NI and NCTE interfaces: Red, Blue, and Yellow. Each alarm has an indicator and a counter. The indicator (No or Yes) reports if the alarm currently exists. The counter indicates the number of seconds the alarm statistic has existed since the last reset.

NOTE

NCTE alarm indicators, alarm counters, and error counters display dashes (- - -) if the NCTE is disabled.

The Receive side refers to the receive pair from the carrier and the Transmit side refers to the transmit pair to the network. This screen shows you exactly where the alarm is occurring.

Valid range: 0 to 9999

Red – a condition that occurs when there is a loss of signal or the incoming signal is out of frame for at least 2.5 seconds. In the Red Alarm state, a Yellow Alarm signal is transmitted toward the source of the Red Alarm until the Red Alarm no longer exists.

NOTE

If the NCTE interface is in red alarm, it transmits a yellow alarm only if the network interface is receiving a yellow alarm.

Blue – occurs when an unframed All Ones signal is transmitted or received.

Yellow – exists when a repeating pattern of eight ones followed by eight zeroes is sent on the data link for a minimum of one second (ESF mode).

In D4 mode, a Yellow Alarm is a condition that occurs when bit two in each DS0 is set to zero. A Yellow Alarm indicates the equipment at the opposite end of the line from the interface receiving the yellow alarm is out-of-frame or out-of-sync on its receive pair (in Red Alarm).

4.4.3 Alarm Indicators

The alarm indicators refer to the signals received on the NI or NCTE interface. Each alarm has an indicator and a counter. The indicator (No or Yes) reports if the alarm currently exists. The counter indicates the number of seconds the alarm statistic has existed since the last reset.

Out of Frame - results when the unit senses errors in the framing pattern. This occurs when any 2 of 4, any 2 of 5, or any 3 of 5 consecutive framing bits received contain bit errors in the framing pattern. OOF condition clears when reframeing occurs.

Loss of Signal - occurs when the unit detects 175 (± 75) successive pulse positions with no pulse of either positive or negative polarity.

4.4.4 Error Counters

Error counters display the number of times a particular error event has occurred since the last reset.

BPV - the number of Bipolar Violations in the received signal. This condition is declared when consecutive pulses are of the same polarity.

Valid range: 0 to 99000

Density - the number of Bit Density Errors detected in the data received from the DS0s. If NI Coding is *AMI-62411*, the CSU will insert ones to ensure that the signal transmitted towards the network meets the minimum density requirements.


Valid range: 0 to 99000

CRC6 (ESF mode) - the number of CRC errors generated. A Cyclic Redundancy Check (CRC) is performed on each received extended superframe to make sure it agrees with the CRC6 field transmitted by the network. A CRC6 error results if they are not the same. CRC6 is not supported in D4 mode.

Valid range: 0 to 99000


4.4.5 Interface Test

Access the Interface Test screen (below) to perform diagnostics and monitor error counters for each DS0 that is mapped to the WAN interface ([see Bandwidth Allocation](#)). This screen is updated every two seconds.

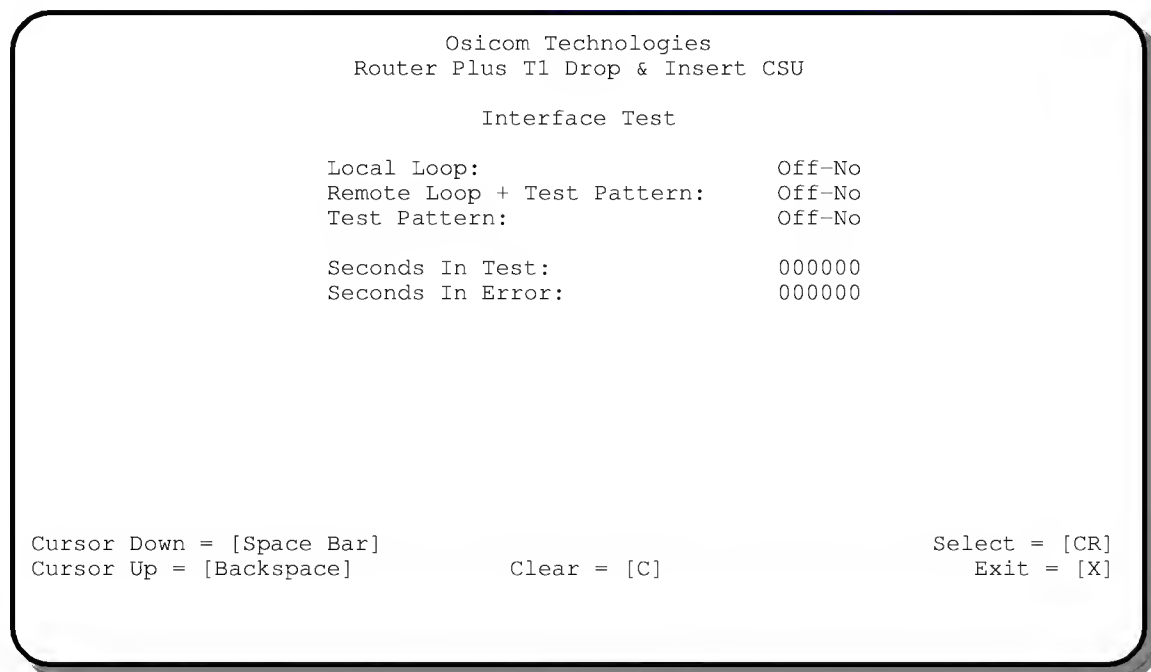

Interface Test

Screen Path

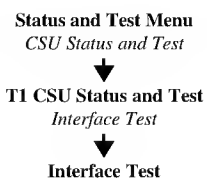

Loopback states are shown in two columns that correspond to the SNMP 'admin' and 'state' equivalents.

On or *Off* (admin) – set by the user to indicate the desired state of the loopback test.

Yes or *No* (state) – the actual state of the loopback test.

When a test is set to *On* and has responded, the 'state' column indicates *Yes*. *Off* - *Yes* indicates that the loopback was set by the remote unit.

4.4.5.1 Loopback Tests


Local Loop - a uni-directional loopback towards the NI that verifies all the DS0s are operating properly.

Remote Loop + Test Pattern - a V.54 loop up pattern, which puts the remote unit's DS0s in local loop. Once the remote unit is in local loop, the 511 test pattern is sent.

Test Pattern - 511 test pattern generator. Press [CR] to send the test pattern towards the remote unit.

NOTE

The Interface Status for WAN 1 is shown as down when any of the loopbacks are set or the test pattern is engaged (see figure below).

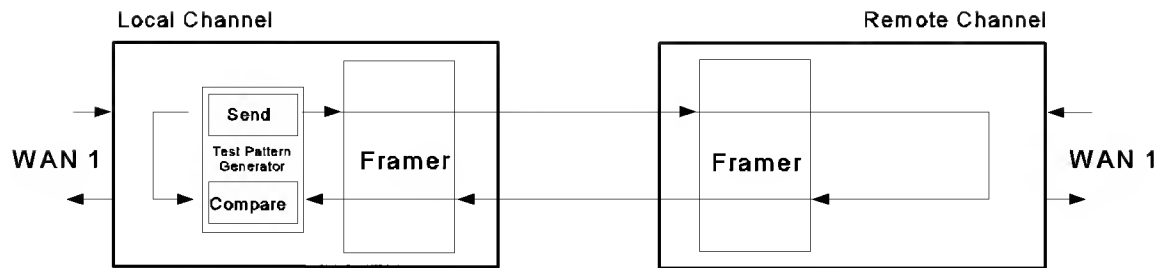

Pattern Generator and Channel Loopbacks

4.4.5.2 Counters

Error and test counters display the number of times a particular event has occurred since the last reset.

Seconds In Test - the length of time the test pattern has been enabled.

Valid range: 0 to 999999 seconds

Seconds In Error - the number of seconds during which an error was detected in the test pattern.

Valid range: 0 to 999999 seconds

4.4.6 Register Summary

The Register Summary screen is an informational display that shows all the user and carrier registers. It is displayed only if the NI Format is ESF.

```

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Register Summary

Valid Interval:      User   Carrier
Elapsed Second:     00      00
                    243    244

ESF Error Event:     00001  00001
Unavialable Signal State: 1

Current              24 Hour
User   Carrier      User   Carrier
Errored Seconds:     001    001    00000  00000
Unavailable Errored Seconds: 000    000    00000  00000
Severely Errored Seconds: 001    001    00000  00000
Bursty Errored Seconds:  000    000    00000  00000
Loss of Frame Count:   00      00      000    000

Exit = [X]

```

Register Summary

Screen Path

Status and Test Menu

CSU Status and Test



T1 CSU Status and Test

Register Summary



Register Summary

SNMP note: The MIB includes an NCTE Unavailable Signal State counter, which is not displayed on the console.

Valid Interval - the number of complete-15 minute (900 second) periods that have occurred. Range is 0-96.

Elapsed Seconds - the number of seconds that have passed in the current interval. Range is 0-900.

ESF Error Event - an ESF (Extended Super Frame) that contains either a CRC6 error, an Out of Frame (OOF), or both. Range is 0-65,535.

Unavailable Signal State (ESF mode) - indication of Severely Errored Seconds (SES) occurring. A '1' indicates that more than 10 seconds of SES are occurring *right now*. A '0' indicates normal operation. Valid range: 0 or 1

Errored Seconds - the number of errored seconds that contained one or more ESF error events. Current range is 0-900; 24 hour range is 0-65,535.

Unavailable Errored Seconds - the number displayed after ten consecutive Severely Errored Seconds. Current range is 0-900; 24 hour range is 0-65,535.

Severely Errored Seconds - the number of errored seconds that have at least 320 CRC 6 errors or one or more OOF (Out Of Frame) errors. Current range is 0-900.; 24 hour range is 0-65,535.

Bursty Errored Seconds - the number of errored seconds that have more than one but less than 320 CRC 6 errors. Current range is 0-900; 24 hour range is 0-65,535.

Loss Of Frame Count - the accumulation of the number of times a Loss of Frame has occurred. Current range is 0-90; 24 hour range is 0-255.

4.4.7 User Registers


The User Registers screen is an informational display that allows you to view the status of the ESF link over a 24-hour period in 15 minute intervals. The screen displays a summary of the error events as discussed in the Registers Summary screen.

Osicom Technologies Router Plus T1 Drop & Insert CSU																	
User Registers																	
In	ES	UAS	SES	BES	LOFC	In	ES	UAS	SES	BES	LOFC	In	ES	UAS	SES	BES	LOFC
01	000	900	000	000	001	17	-	-	-	-	-	33	-	-	-	-	-
02	000	900	000	000	000	18	-	-	-	-	-	34	-	-	-	-	-
03	000	900	000	000	000	19	-	-	-	-	-	35	-	-	-	-	-
04	000	000	000	000	000	20	-	-	-	-	-	36	-	-	-	-	-
05	-	-	-	-	-	21	-	-	-	-	-	37	-	-	-	-	-
06	-	-	-	-	-	22	-	-	-	-	-	38	-	-	-	-	-
07	-	-	-	-	-	23	-	-	-	-	-	39	-	-	-	-	-
08	-	-	-	-	-	24	-	-	-	-	-	40	-	-	-	-	-
09	-	-	-	-	-	25	-	-	-	-	-	41	-	-	-	-	-
10	-	-	-	-	-	26	-	-	-	-	-	42	-	-	-	-	-
11	-	-	-	-	-	27	-	-	-	-	-	43	-	-	-	-	-
12	-	-	-	-	-	28	-	-	-	-	-	44	-	-	-	-	-
13	-	-	-	-	-	29	-	-	-	-	-	45	-	-	-	-	-
14	-	-	-	-	-	30	-	-	-	-	-	46	-	-	-	-	-
15	-	-	-	-	-	31	-	-	-	-	-	47	-	-	-	-	-
16	-	-	-	-	-	32	-	-	-	-	-	48	-	-	-	-	-

Next Page = [P] Clear = [C] Exit = [X]

User Registers

Screen Path

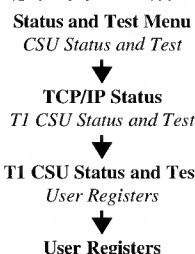

4.4.8 Carrier Registers

The Carrier Registers screen is an informational display that allows you to view the status of the ESF link over a 24-hour period. This is the same information that would be sent to the carrier (Telco) if requested. The screen is virtually identical to the [User Registers screen](#).

NOTE


The numbers on the carrier screens are cleared only by Telco.

Press [C] to reset all the counters on this screen.

Press [P] to view registers 49 to 96.

4.5 Interface Status Summary

Access the Interface Status Summary screen to view the condition of the LAN and WAN interfaces.

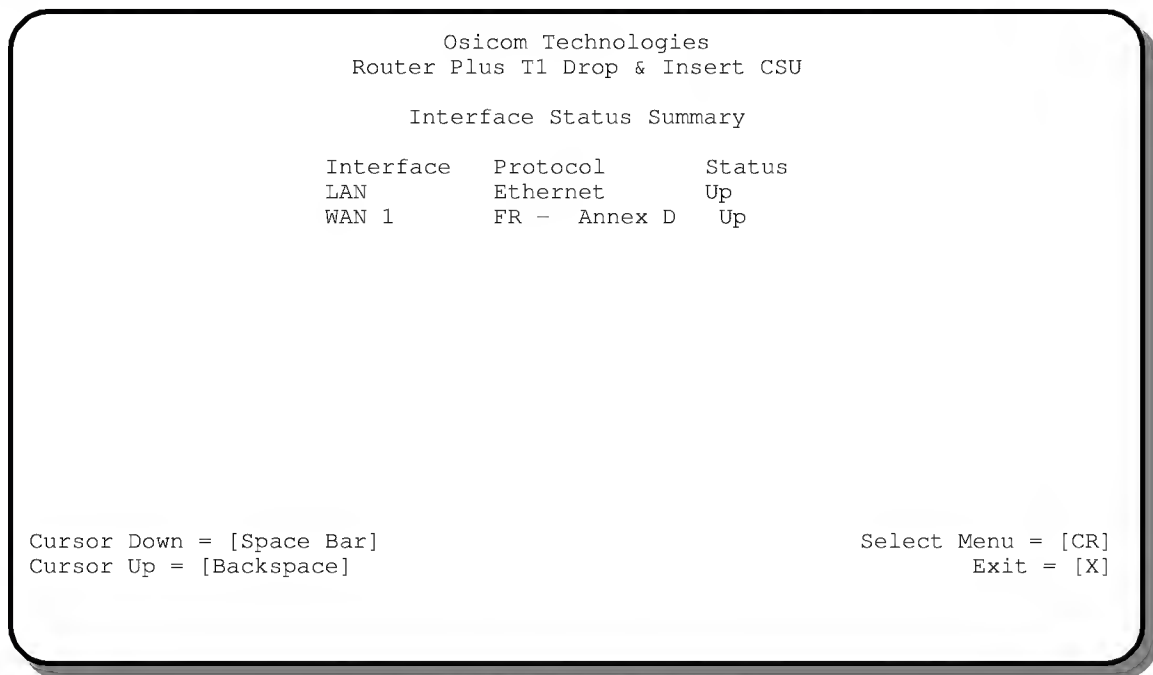

Interface Status Summary

Screen Path

Status and Test Menu
Interface Status



Interface Status Summary

[Interface status](#) corresponds to MIB II Interface operational state.

This screen is updated every two seconds.

See [WAN Configuration](#) for descriptions of protocols.

Interface Status		
PROTOCOL	STATUS	CONDITION
Ethernet	Up Down Disabled	Link is up Link is down Interface State set to disabled
PPP (Point-to-Point)	Up Down Disabled	The LCP (Link Control Protocol) is up The LCP is not up Interface State set to disabled
FR-No LMI (Local Management Interface)	Up Down Disabled	Flags are present and CSU Line Status is up Flags are missing or CSU Line Status is down or in test Interface State set to disabled
FR-Annex D	Up Down Disabled	Network is responding to LMI request * Network is <u>not</u> responding to LMI request * Interface State set to disabled
* Determined by Error Threshold option (see WAN protocol options for Frame Relay).		

4.5.1 LAN Status

Access the LAN Status screen to view the operational condition of the LAN interface. The protocol for the LAN interface is fixed at Ethernet. This screen is updated every two seconds.

Press [C] to clear all counters.

Osicom Technologies
Router Plus T1 Drop & Insert CSU

LAN Status

Protocol: Ethernet
State: Enabled
Status: Up
System Up Time: ddd hh:mm:ss.xx
Last Change: ddd hh:mm:ss.xx
Link Downs: 1234567890

InputOutput

Octets: 12345678901234567890

Unicast Packets: 12345678901234567890

Non Unicast Packets: 12345678901234567890

Discards: 12345678901234567890

Errors: 12345678901234567890


Unknown Protocol: 1234567890

Clear = [C]

Exit = [X]

LAN Status

Screen Path

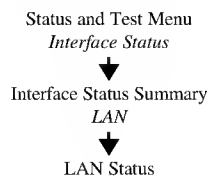

The counters are based on MIB II RFC 1213.

Protocol - the configured protocol for the LAN interface. Fixed at Ethernet.

State - the configured state (Enabled/Disabled) of the LAN interface.

Status - the operational status (Up/Down) of the LAN interface.

System Up Time - the amount of time the unit has been operational (days:hours:minutes:seconds).

Last Change - the system up time value when the interface entered its current operational state.

Link Downs - number of times the LAN interface has entered the link down state.

Octets - number of octets (bytes) in each frame, including the Ethernet header, but excluding the CRC.

Unicast Packets - Input: all frames received from the ethernet chip including any frames containing unknown protocols (frames received in error are not counted). When bridging is disabled, only received frames with the ethernet chip's MAC address are counted; when bridging is enabled, all frames on the LAN are counted. Output: all frames transmitted to the ethernet chip including all bridged, routed, and frames sourced by the router.

Non Unicast Packets - number of subnetwork broadcast (all destinations) or multicast (multiple destination) packets received (input) or to be transmitted (output) on the LAN interface, including those that were discarded or not sent.

Discards - Input: number of error-free frames received that could not be forwarded because of no buffer space. Output: number of frames that the router or bridge could not forward because of no buffer space.

Errors - Input: the total number of Ethernet frames received in error. These errors are detected by the Ethernet chip and cause the appropriate input error counter on the LAN Port status screen to increment. Frames containing errors are not passed up to a higher layer protocol. Output: the total number of Ethernet frames that an error occurred while transmitting. These errors are detected by the Ethernet chip and also cause the appropriate output error counter on the LAN Port status screen to increment.


Unknown Protocol (Input only) - the total number of frames received with the Ethernet protocol field set to a protocol that is not supported or is not enabled. Supported protocol field values are IP and IPX. The protocol field is checked for the encapsulation types selected on the IP and IPX routing options screen. Note that IP and IPX can be set to different encapsulation types which requires the Unknown Protocol test to be performed in both encapsulation types. The Unknown Protocol test is not performed on bridged frames. Frames containing Unknown Protocols are not passed up to a higher layer protocol.

4.5.2 WAN Status (Frame Relay)

Use the WAN status screen to view statistical information for the WAN link. Annex D Status is available only if the protocol on the WAN Configuration screen is set for FR – Annex D. This screen is updated every two seconds.


See the previous section, LAN Status, for parameters and counters not defined here.

Press [C] to clear all counters.

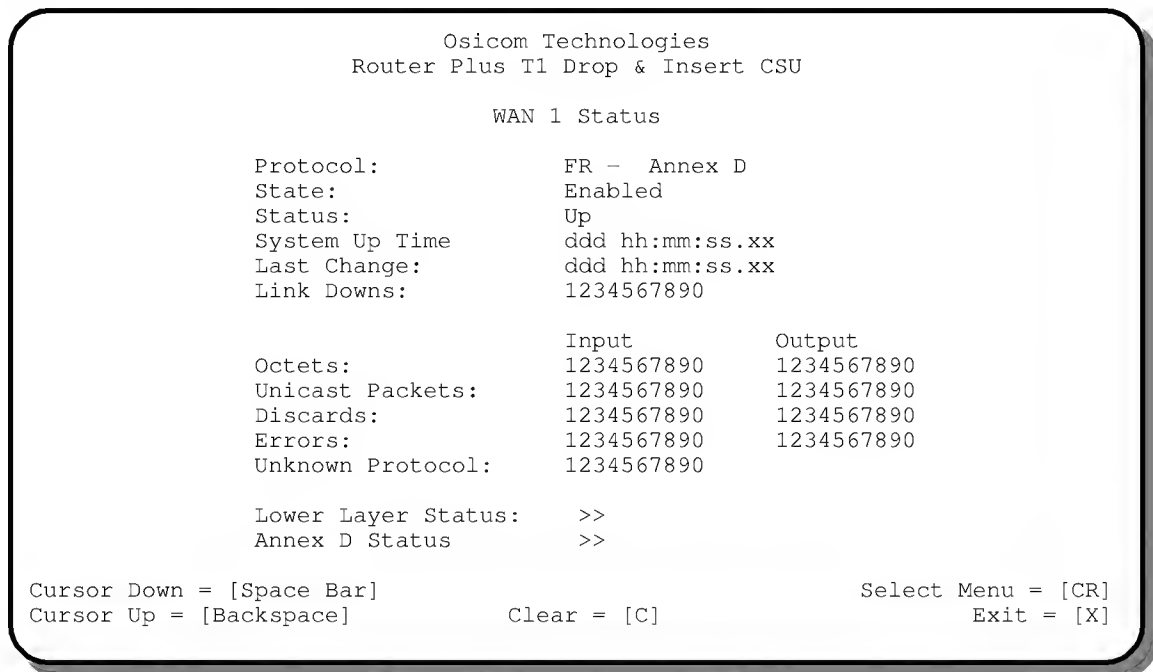

WAN 1 Status (Frame Relay)

Screen Path

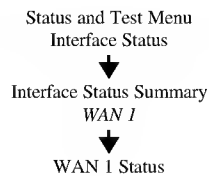

The counters are based on MIB II RFC 1213.

Protocol - the configured protocol for the WAN interface.

Status -

Annex D (Determined by Error Threshold option)

Up - Network is responding to LMI request.

Down - Network is not responding to LMI request.

No LMI

Up - flags are present and CSU Line Status is UP.

Down - flags are missing or CSU Line Status is down or in test.

Octets - Input: number of octets (bytes) in each received frame, including the DLCI address and control fields, but excluding the CRC. The value reported by the SCC (Serial Communications Controller) includes the CRC but the CRC octets are subtracted before the counter increments. Output: all bytes in each frame transmitted to the SCC including the DLCI address and control fields, but excluding the CRC (the CRC is added after the frame is counted or sent).

Unicast Packets - Input: all frames received from the SCC including LMI frames. Output: all frames transmitted to the SCC including LMI frames.

Errors - Input: the total number of frames received in error. This includes any frames received with HDLC errors. HDLC errors (CRC, aborts, overruns, and too longs) are detected by the SCC and cause the appropriate error counter on the Lower Layer screen to increment. Frames containing errors are not passed up to a higher layer protocol. Output: the total number of frames that an error occurred while transmitting. These errors are detected by the SCC and also cause the Underrun counter on the Lower Layer screen to increment

Unknown Protocol - the total number of frames received with Frame Relay protocol field set to a protocol that is not supported or is not enabled. Supported Frame Relay NLPID/PID field values are LMI, IP, IPX, and bridging. Frames containing Unknown Protocols are not passed up to a higher layer protocol.

4.5.2.1 Lower Layer Status (WAN)

Use this screen to view statistics of errored frames transmitted and received over the WAN interface and also monitor WAN utilization. The screen is the same for PPP and Frame Relay.


This screen is updated every two seconds.

Incrementing any of these error counters also causes the Input Errors or Output Errors counters to increment on the Interface Status screen.

Osicom Technologies		
Router Plus T1 Drop & Insert CSU		
WAN 1 Lower Layer Status		
	Input	Output
CRC Errors:	1234567890	
Aborts:	1234567890	
Too Longs:	1234567890	
Overruns:	1234567890	
Underruns:		1234567890
Utilization 2 s:	00	00
Utilization 60 s:	00	00
Clear = [C]		
Exit = [X]		

WAN 1 Lower Layer Status

Screen Path

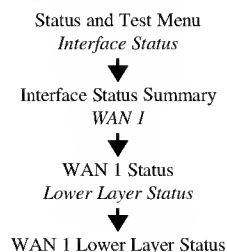

CRC Errors - received frames detected by the Serial Communications Controller (SCC) that contained HDLC Cyclic Redundancy Check (CRC) errors.

Aborts - aborted received frames detected by the SCC.

Too Longs - HDLC frames received that exceeded the maximum permitted frame size. The WAN interface can accept frames up to 2048 bytes long.

Overruns - received overrun frames reported by the SCC.

Underruns - transmitted underrun frames reported by the SCC.

Utilization - percent usage of available WAN link bandwidth during, as indicated, either 2 seconds or 60 seconds.

4.5.2.2 Annex D Status

Use the Annex D Status screen to view operational information for Frame Relay. This option is displayed only if the protocol on the WAN Configuration screen is set for FR – Annex D. Also access the DLCI Status Table. The screen is updated every two seconds.

Osicom Technologies
Router Plus T1 Drop & Insert CSU

WAN 1 Annex D Status

Error Type:
Error Time:
Error Data:

RFC 1315 Error Messages
ddd hh:mm:ss.xx
00 11 22 33 44 55 66 77 88 99
00 11 22 33 44 55 66 77 88 99
00 11 22 33 44 55 66 77 88 99
00 11 22 33 44 55 66 77 88 99
00 11 22 33 44 55 66 77 88 99

Status Messages:
Full Status Messages:

Input
1234567890
1234567890

Output
1234567890
1234567890

DLCI Status Table:


>>

Clear = [C]

Exit = [X]

WAN Annex D Status (Frame Relay)

Screen Path

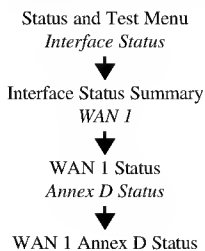

The counters are based on Frame Relay MIB RFC 1315.

Error Type - the type of error that was last seen on this interface, as follows:

Unknown Error
Receive Short
Receive Long
Illegal DLCI
Unknown DLCI
DLCMI Proto Err
DLCMI Unknown IE
DLCMI Sequence Err
DLCMI Unknown Rpt
No Error Since Reset

DLCMI is Data Link Connection Management Interface

Error Time - the system time when the last error condition was detected.


Error Data - a hexadecimal string containing as much of the packet as possible for the last packet containing an error that was seen on the interface.

Status Messages - Status Enquiry (output) frames sent to the network provider (the Frame Relay switch) or Status Response (input) frames received from the network provider. A Status Enquiry is sent to the network provider at intervals defined by the Polling Interval WAN protocol parameter (default is 10 seconds).

Full Status Messages - Full Status Enquiry (output) frames sent to the network provider (the Frame Relay switch) or Full Status Response (input) frames received from the network provider. A Full Status Enquiry is sent to the network provider at intervals defined by the Full Enquiry Interval WAN protocol parameter (default is 6 seconds). The Full Status Response also contains information on the status of the Permanent Virtual Circuits (PVCs).

4.5.2.2.1 DLCI Status Table

Access the DLCI Status Table to view the status of the DLCIs. (Fr - Annex D protocol only). This status is based on the LMI response received from the network (frame relay switch). This screen is updated every two seconds.

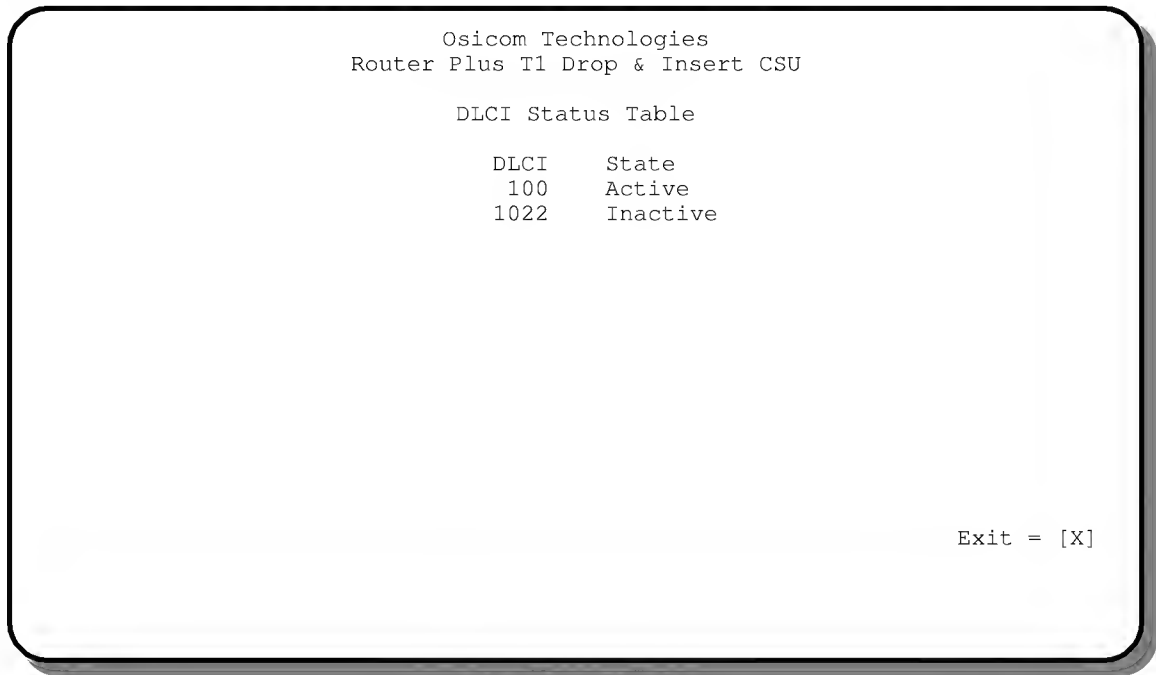


Osicom Technologies Router Plus T1 Drop & Insert CSU	
DLCI Status Table	
DLCI	State
100	Active
1022	Inactive

Exit = [X]

DLCI Status Table

Screen Path

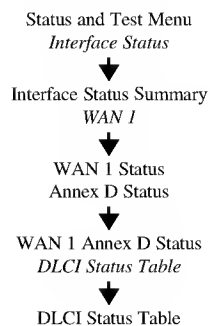

Page Down/Up prompts are displayed if there are more than 15 entries.

All DLCIs reported in LMI response are displayed.

DLCI - a Data Link Connection Identifier. The DLCI identifies the logical link on a Frame Relay network and is assigned by the network provider. Range is 0 to 1023.

State - the state of the DLCI as reported by the switch in response to the router's polls.

Active - the normal operating state; the DLCI is up.

Inactive - the DLCI is down.

Invalid - displayed if the switch reports a DLCI as active and the DLCI is configured on a port, but the DLCI State is set to disabled.

New - a newly-detected logical link.

4.5.3 WAN Status (PPP)

On the WAN Status screen for PPP protocol, the contents are identical to the WAN Status screen for Frame Relay except the Annex D Status selection is not available. This screen is updated every two seconds.

Press [C] to clear all counters.

Osicom Technologies
Router Plus T1 Drop & Insert CSU

WAN 1 Status

Protocol: PPP (sync)
State: Enabled
Status: Up
System Up Time ddd hh:mm:ss.xx
Last Change: ddd hh:mm:ss.xx
Link Downs: 1234567890

Input
1234567890

Output
1234567890

Octets: 1234567890
Unicast Packets: 1234567890
Discards: 1234567890
Errors: 1234567890
Unknown Protocol: 1234567890


Lower Layer Status: >>

Clear = [C]

Select Menu = [CR]
Exit = [X]

WAN Status (PPP)

Screen Path

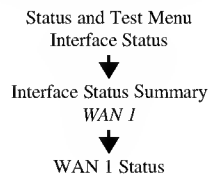

The counters are based on MIB II RFC 1213.

Protocol - the configured protocol for the WAN interface.

Status - *Up* indicates the LCP is up.

Down indicates the LCP is down.

Octets - Input: all octets in each frame received from the SCC including the address and control fields but excluding the CRC. The value reported by the SCC includes the CRC. The CRC octets are subtracted before the counter is incremented. Output: all octets in each frame transmitted to the SCC including the address and control fields but excluding the CRC (the CRC is added by the SCC after it is received).

Unicast Packets - Input: all frames received from the SCC including LCP and NCP frames. Output: all frames transmitted to the SCC including LCP and NCP frames.

Discards - Input: the number of error free frames received by the SCC that the SCC could not forward because of no buffers. Output: the number of frames that the router or bridge could not forward because of no buffers.

Errors - Input: the total number of frames received in error. This includes any frames received with HDLC errors and format errors. HDLC errors (CRC, aborts, overruns, and too longs) are detected by the SCC and cause the appropriate error counter on the Lower Layer screen to increment. PPP format errors (bad address and bad control) are detected by software cause the appropriate error counter on the PPP Port Status screen to increment. Frames containing errors are not passed up to a higher layer protocol. Output: the total number of frames that an error occurred while transmitting. Output errors are detected by the SCC and also cause the Underrun counter on the Lower Layer screen to increment.

Unknown Protocol - Input only: the total number of frames received with the PPP protocol field set to a protocol that is not supported or is not enabled. Supported PPP protocol field values are LCP, IPCP, IPXCP, and BCP. Frames containing unknown protocols are not passed up to a higher layer protocol.

4.6 Port Status Summary

The Port Status Summary screen displays the operational status of ports configured on the router. You can view the status of up to 15 logical ports defined. Port 0 is always the LAN interface and ports 1 through 14 are always available for the WAN interface. This screen is updated every two seconds.

Osicom Technologies Router Plus T1 Drop & Insert CSU			
Port Status Summary			
Port	Port Name	Interface	Protocol
0	Local Site	LAN	Ethernet
1	Remote Site 1	WAN 1	FR-1000 Up
2	Remote Site 2	WAN 1	FR-1001 Down
3	Remote Site 3	WAN 1	FR-1002 Disabled

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Select Menu = [CR]
Exit = [X]

Port Status Summary

Screen Path

Status and Test Menu
Port Status
↓
Port Status Summary

The table below defines [port status for Frame Relay](#).

To view the status of a specific port, position the cursor on the port number and press [CR]; the port-specific screen is displayed. See [Port Status \(LAN\)](#), [Port Status \(WAN, Frame Relay\)](#), and [Port Status \(WAN, PPP\)](#).

The contents of the port-specific status screen depends on two factors:

- LAN or WAN interface
- Protocol selected

Port - number of the port (0 through 14).

Port Name - a name to identify this port when configuring and managing the router.

Interface - identifies the interface (LAN or WAN 1) to which the port is mapped. Port 0 is fixed at LAN.

Protocol - the configured LAN or WAN 1 connect protocol. For Frame Relay, the protocol field also displays the DLCI number and DLCI status.

Port Status (Frame Relay)

PROTOCOL	STATUS	CONDITION
Fr-No LMI	Up/Down Disabled	Follows Inter face Status DLCI state se t to disabled *
FR-Annex D	Up Down Disabled	DLCI LMI status up DLCI LMI status down DLCI state set to disabled *
* See Port Status screen .		

NOTE

Only ports configured are shown.

4.6.1 Port Status (LAN - Ethernet)

The screen below illustrates the Port Status screen for port 0, which is always the LAN interface. The protocol is fixed at Ethernet. This screen is updated every two seconds.

When any of the Input error counters increment, the Input error counters on the Interface Status screen also increment.

Incrementing any of the input error counters also causes the Input Errors counters to increment on the Interface Status screen. Incrementing the Excessive Collisions, Internal MAC Transmit Errors, or Carrier Sense Errors output error counters also causes the Output Errors counters to increment on the Interface Status screen.

See the [Port Status Summary](#) screen for screen entries not defined here.

```

                                Osicom Technologies
                                Router Plus T1 Drop & Insert CSU

                                Port 0 Status


Port Name:                      Local Site
Interface:                      LAN
Protocol:                      Ethernet

                                Input          Output
Alignment Errors:              1234567890
FCS Errors:                    1234567890
Frame Too Longs:              1234567890
Internal MAC Receive Errors:   1234567890
Single Collision Frames:      1234567890
Multiple Collision Frames:    1234567890
Deferred Transmissions:       1234567890
Late Collisions:              1234567890
Excessive Collisions:         1234567890
Internal MAC Transmit Errors:  1234567890
Carrier Sense Errors:         1234567890

Clear = [C]                      Exit = [X]
```

Port Status (LAN)

Screen Path

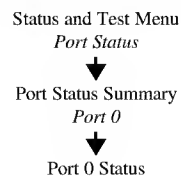

The counters are based on MIB RFC 1643.

Alignment Errors - received frames that are not an integral number of octets in length and do not pass the Frame Check Sequence (FCS) test.

FCS Errors - received frames that are an integral number of octets in length but do not pass the Frame Check Sequence (FCS) test.

Frame Too Longs - received frames that exceed the maximum permitted frame size.

Internal MAC Receive Errors - received frames discarded due to an internal MAC sublayer receive error (Out of Buffers, Overruns).

Single Collision Frames - successfully transmitted frames on this interface for which transmission is inhibited by exactly one collision.

Multiple Collision Frames - successfully transmitted frames for which transmission is inhibited by more than one collision.

Deferred Transmissions - number of frames for which the first transmission attempt is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.

Late Collisions - number of times that a collision is detected on this interface later than 512 bit-times into the transmission of a frame. 512 bit-times corresponds to 51.2 microseconds on a 10 Mbit/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.

Excessive Collisions - number of frames for which transmission fails due to excessive collisions. Retry limit is exceeded.

Internal MAC Transmit Errors - number of frames for which transmission fails due to an internal MAC sublayer transmit error.

Carrier Sense Errors - number of times that the carrier was not sensed (Carrier Lost, Tx Underrun, Tx Heartbeat) when attempting to transmit a frame on this interface. The count is incremented at most once per transmission attempt, even if the carrier fluctuates during a transmission attempt.

4.6.2 Port Status (WAN, Frame Relay)

See the Port Status screen for a port on the WAN interface. The protocol selected is Frame Relay. This screen is updated every two seconds.

See the [Port Status Summary screen](#) for screen entries not defined here.

12:00:00

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 Status


Port Name:	Remote Site 1	
Interface:	WAN 1	
Protocol:	FR - Annex D	
DLCI:	0025	
DLCI State:	Enabled	
DLCI Status:	Up	
System Up Time:	ddd hh:mm:ss.xx	
Creation Time:	ddd hh:mm:ss.xx	
Last Change:	ddd hh:mm:ss.xx	
Link Downs:	1234567890	

	Input	Output
FECNs:	1234567890	
BECNs:	1234567890	
Frames:	1234567890	1234567890
Octets:	1234567890	1234567890
Encrypted Frames:	0000000000	0000000000

Clear = [C]Exit = [X]

Port Status (Frame Relay)

Screen Path

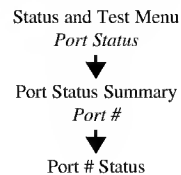

The counters are based on MIB RFC 1315.

DLCI - the Frame Relay Data Link Connection Identifier configured for the specified port. The DLCI identifies the logical link on a Frame Relay network and is assigned by the network provider.

DLCI State - the configured status of the DLCI.

DLCI Status - the operational status of the DLCI.

System Up Time - the amount of time the unit has been operational (days:hours:minutes:seconds).

Creation Time - the system time when DLCI was established (days:hours:minutes:seconds). If protocol is FR - No LMI, this is the first time the DLCI came up after being defined.

Last Change - the system time when the DLCI was most recently changed.

Link Downs - the number of times the DLCI has entered the link down state. This is mapped to the interface link downs counter for Frame Relay No LMI.

FECN - frames with the Forward Explicit Congestion Notification bit set. This bit is set when congestion (excess traffic) occurs between the router and the network.

BECN - frames with the Backward Explicit Congestion Notification bit set. This bit is set when congestion (excess traffic) occurs within the network.

Frames - all valid frames for this DLCI. This includes known protocol routed frames and bridged frames.

Octets - all octets (bytes) in each frame, including the DLCI, control field, and RFC 1490 encapsulation, but excluding the CRC.

Encrypted Frames - number of encrypted frames on this port (only displayed if encryption hardware is present).

4.6.3 Port Status (WAN, PPP)

The screen below is the Port Status screen for a port on the WAN interface. The protocol selected is PPP. This screen is updated every two seconds.

Also view the LCP (Link Control Protocol), IPCP (IP Control Protocol), IPXCP (IPX Control Protocol), and BCP (Bridging Control Protocol) status screens.

When any of these error counters increment, the Errors counters on the WAN Interface Status screen also increment.

Encrypted Frames and the real time system clock are displayed only if encryption daughter card is present.

See the [Port Status Summary screen](#), for screen entries not defined here.

```
Osicom Technologies                               12:00:00
Router Plus T1 Drop & Insert CSU

Port 1 Status

Port Name:      Port 1
Interface:      WAN 1
Protocol:       PPP (sync)

Bad Addresses:   Input      Output
                0000000000
Bad Controls:   0000000000
Encrypted Frames: 0000000000 0000000000

LCP Status:     >> Closed
IPCP Status:    >> Closed
IPXCP Status:   >> Closed
BCP Status:     >> Closed


Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Clear = [C]

Select Menu = [CR]
Exit = [X]
```

Port Status (PPP)

Screen Path

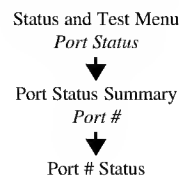

The counters are based on MIB RFC 1471.

Bad Addresses - LCP or NCP (Network Control Protocol) frames received with an incorrect Address Field. The address field should have a value of FF.

Bad Controls - LCP or NCP frames received with an incorrect Control Field. The control field should have a value of 03.

See [LCP State](#) for an explanation of the status conditions.

4.6.3.1 LCP Status

Access the Port LCP Status screen to view the status of the Link Control Protocol (LCP) on ports with Point-to-Point Protocol selected. This screen is updated every two seconds.

```

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 LCP Status

      Input      Output
Configure Requests: 0000000000 0000000000
Configure Acks:     0000000000 0000000000
Configure Nacks:    0000000000 0000000000
Configure Rejects:  0000000000 0000000000
Terminate Requests: 0000000000 0000000000
Terminate Acks:     0000000000 0000000000
Code Rejects:       0000000000 0000000000
Protocol Rejects:   0000000000 0000000000
Discard Requests:   0000000000 0000000000
Echo Requests:      0000000000 0000000000
Echo Replies:       0000000000 0000000000


LCP State:          Closed
Negotiable Options: >>

Clear = [C]
Exit = [X]

```

Port LCP Status (PPP)

Screen Path

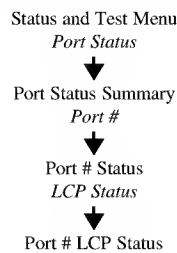

The counters on the LCP Status screen are based on RFC 1661. LCP allows negotiation of certain characteristics of a point-to-point link. When a configuration option is not included in a *Configure Request* packet, the default value for that option is assumed.

Three classes of LCP packets that configure, terminate, and maintain a link are described below.

ESTABLISH AND CONFIGURE A LINK

The following link configuration packets are used to establish and configure a link:

Configure Requests - packets sent to open a connection. If a configuration option is not included in the packet, the default value for that configuration option is assumed.

Configure Acks - responses to Configure Request indicating all values are recognizable and acceptable.

Configure Nacks - responses to Configure Requests indicating all values are recognizable, but some are not acceptable.

Configure Rejects - responses to Configure Requests indicating some values are not recognizable or acceptable.

TERMINATE A LINK

The following link termination packets are used to terminate a link:

Terminate Requests - packets sent to close a connection.

Terminate Acks - responses to *Terminate Requests*.

MANAGE AND DEBUG A LINK

The following link maintenance packets are used to manage and debug a link:

Code Rejects - LCP packets with an unknown code.

Protocol Rejects - PPP packets with an unknown or unsupported protocol.

Discard Requests - packets which provide a Data Link Layer sink mechanism used for debugging and performance testing.

Echo Requests - packets which provide a mechanism used to determine if the remote unit is operational.

Echo Replies - messages sent in response to Echo Requests.

LCP State - the state of Link Control Protocol (based on RFC 1661).

Initial - the lower layer is unavailable (Down), and no Open has occurred. The Restart timer is not running.

Starting - the Open counterpart to the Initial state. An administrative Open has been initiated, but the lower layer is still unavailable (Down).

Closed - the link is available (Up), but no Open has occurred.

Stopped - the Open counterpart to the Closed state. It is entered when the system is waiting for a Down event or after sending a Terminate-Ack.

Closing - an attempt made to terminate the connection. A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received.

Stopping - the Open counterpart to the Closing state. A Terminate-Request has been sent and the Restart timer is running, but a Terminate-Ack has not yet been received.

Request Sent - an attempt made to configure the connection. A Configure-Request has been sent and the Restart timer is running, but a Configure-Ack has not yet been received.

Ack-Received - a Configure-Request has been sent and a Configure-Ack has been received. The Restart timer is still running, since a Configure-Ack has not yet been sent.

Ack-Sent - a Configure-Request and a Configure-Ack have both been sent, but a Configure-Ack has not yet been received. The Restart timer is running, since a Configure-Ack has not yet been received.

Opened - a Configure-Ack has been both sent and received.

Illegal - an event has occurred which has an internal error.

4.6.3.1.1 LCP Negotiable Options


Access the LCP Negotiable Options screen to view the values of LCP negotiable options in configuration requests sent and received by the router.

Negotiable options are based on RFCs 1661 and 1570.

Negotiable option status is determined after negotiation has been completed and Interface Status is up.


The Local field displays the option values in the last configuration request sent by the router.

The Remote field displays the option values in the last configuration request received by the router.

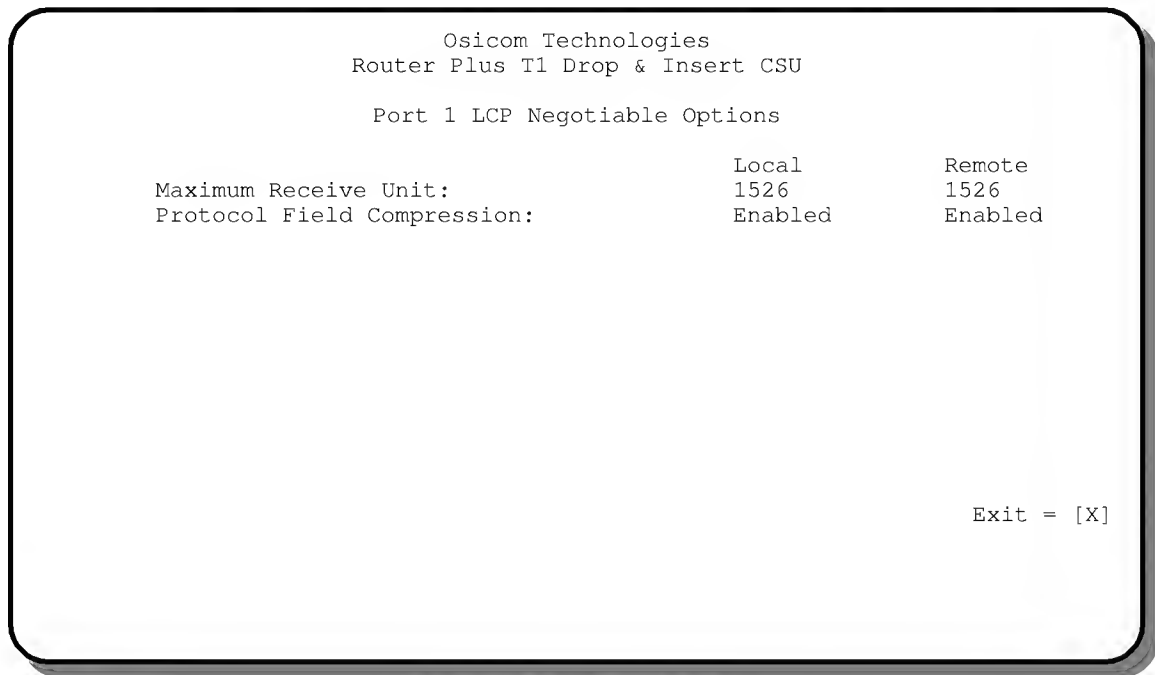

Port LCP Negotiable Options

Screen Path

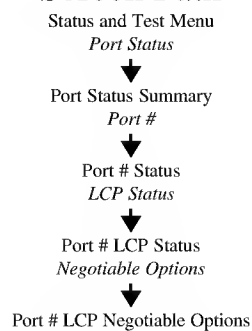

Maximum Receive Unit - specifies the maximum number of octets in the Information and Padding fields. It does not include the framing, Protocol field, FCS, nor any transparency bits or bytes. It is currently fixed at 1526.

Protocol Field Compression - provides a method to negotiate the compression of the PPP Protocol field. By default, all implementations must transmit packets with two-octet PPP Protocol fields.

4.6.3.2 IPCP Status

IP Control Protocol (IPCP) is responsible for configuring, enabling, and disabling the IP protocol modules on both ends of a point-to-point link.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 IPCP Status


          Input      Output
Configure Requests: 0000000000 0000000000
Configure Acks:      0000000000 0000000000
Configure Nacks:      0000000000 0000000000
Configure Rejects:    0000000000 0000000000
Terminate Requests:  0000000000 0000000000
Terminate Acks:       0000000000 0000000000
Code Rejects:        0000000000 0000000000

IPCP State:          Closed

Clear = [C]                                Exit = [X]
```

Port IPCP Status (PPP)

Screen Path

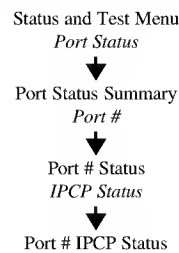

IPCP uses the same packet exchange mechanism as the Link Control Protocol (LCP). IPCP packets are not exchanged until PPP has reached the Network-Layer Protocol phase. IPCP packets received before this phase is reached are discarded.

The router sends the configured IP Address in the IPCP configure requests.

If the remote peer rejects it, the router will stop insisting on it and remove the IP Address from the configure requests.

The router does not attempt to assign an IP address to its peer and does not request or accept an IP address from its peer. In no event will the router force the remote to use the IP Address configured for its PPP port. That is, the router won't NAK the IP Address specified by the remote.

If the two addresses do not match, then the link will work, IPCP will open, but IP may not route properly. If the remote peer Naks the IP Address, then it is stating that it wants the router to use the address it is specifying. In this case, the router will remove the IP Address from its IPCP configure requests but will not use the IP Address in the Peer's configure requests.

See [LCP Status](#) for descriptions of counters.

See [LCP State](#) for an explanation of the various State conditions.

This screen is updated every two seconds.

4.6.3.3 IPXCP Status

View the [IPXCP Status screen](#) to monitor IPX Control Protocol (IPXCP), which is responsible for configuring, enabling, and disabling the IPX protocol modules on both ends of the point-to-point link.

```

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 IPXCP Status

      Input      Output
Configure Requests: 0000000000 0000000000
Configure Acks:     0000000000 0000000000
Configure Nacks:    0000000000 0000000000
Configure Rejects:  0000000000 0000000000
Terminate Requests: 0000000000 0000000000
Terminate Acks:     0000000000 0000000000
Code Rejects:       0000000000 0000000000


IPXCP State:        Closed

Clear = [C]
Exit = [X]

```

Port IPXCP Status (PPP)

Screen Path

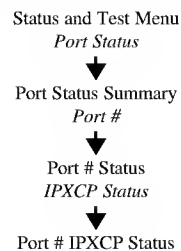

IPXCP uses the same packet exchange mechanism as the Link Control Protocol. IPXCP packets are not exchanged until PPP has reached the Network-Layer Protocol phase. IPXCP packets received before this phase is reached are discarded.

IPXCP Configuration Options allow modifications to the standard characteristics of the network-layer protocol to be negotiated. If a Configuration Option is not included in a Configure-Request packet, the default value for that Configuration Option is assumed.

See [LCP Status](#) for descriptions of counters.

See [LCP State](#) for an explanation of the various State conditions.

4.6.3.4 BCP Status

The Bridging Control Protocol (BCP) is responsible for configuring, enabling and disabling the bridge protocol modules on both ends of the point-to-point link.

BCP uses the same packet exchange mechanism as the Link Control Protocol. BCP packets are not exchanged until PPP has reached the Network-Layer Protocol phase. BCP packets received before this phase is reached are discarded.

See [LCP Status](#) for descriptions of counters.

See [LCP State](#) for an explanation of the various State conditions.

This screen is updated every two seconds.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 BCP Status


          Input      Output
Configure Requests: 0000000000 0000000000
Configure Acks:      0000000000 0000000000
Configure Nacks:     0000000000 0000000000
Configure Rejects:   0000000000 0000000000
Terminate Requests:  0000000000 0000000000
Terminate Acks:      0000000000 0000000000
Code Rejects:        0000000000 0000000000

BCP State:          Closed

Clear = [C]                                Exit = [X]
```

Port BCP Status (PPP)

Screen Path

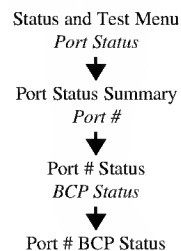


4.7 TCP/IP Status and Test Menu

The TCP/IP Status and Test menu is the top-level screen from which the user selects:

- [Ping/Trace Route](#)
- [IP Status](#)
- [ICMP Status](#)
- [TCP and UDP Status](#)
- [SNMP Status](#)
- [ARP Table](#)

Select Ping/Trace Route to display the command line interface.

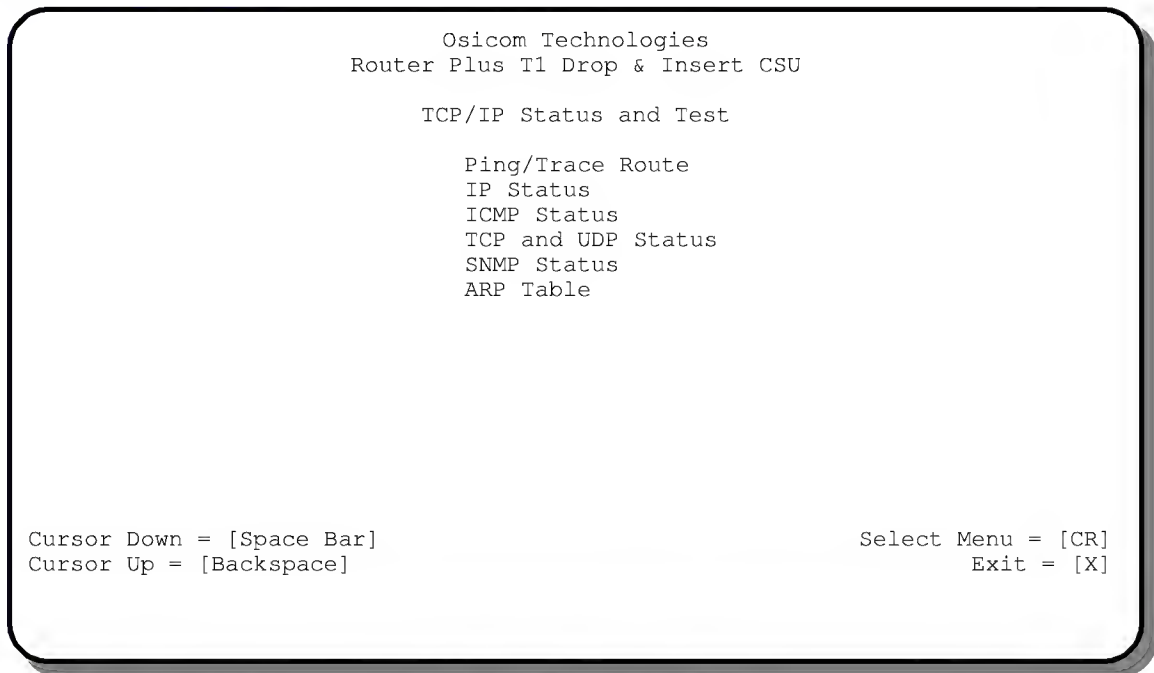

TCP/IP Status and Test

Screen Path


Status and Test Menu
TCP/IP Status and Test
↓
TCP/IP Status and Test

4.7.1 Ping/Trace Route

Use the ping command to verify if a gateway (router) or host is reachable from your router.

Use the traceroute command to record (trace) routes from your router to a specified host or gateway (router).

When you select *Ping/Trace Route* from the TCP/IP Status and Test Menu, the Ping/Trace Route screen appears.

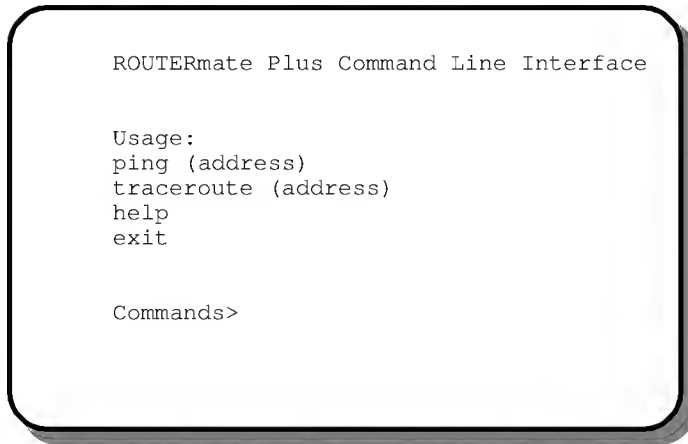

Ping/Trace Route Screen

Invalid Commands

If an invalid command is entered, the following message appears:

Command is invalid. Type 'exit' to exit.

Ping Command

The format for the ping command is:

```
ping <address>
```

where <address> is an IP address in either dotted decimal notation or hex notation (x7d00006d=125.0.0.109).

When the ping command is entered and a response is received, the following is displayed:

```
PING 125.0.0.109
125.0.0.109 is alive, RTT=5ms.
```

If no response is received within 5 seconds, the following message appears:

```
PING 125.1.2.3
Ping: No reply.
```

If the destination is unreachable (i.e., no route), the following message appears:

```
PING 1.2.3.4
Destination unreachable (1.2.3.4)
```

If you type *ping* without an address, the address from the last ping command will be used. If there is no previous ping in the current session, the [invalid command message](#) appears (see above).

Traceroute Command

The format for the traceroute command is:

```
traceroute <address>
```

where <address> is an IP address in either dotted decimal notation or hex notation (x7d00006d=125.0.0.109).

When you enter *traceroute <address>*, a UDP message is sent out to a bad port (33467). Packets are sent in groups of 3. The first group has its TTL set to 1. This causes the first router to send back a ICMP TTL EXCEEDED message. The source address of the ICMP message and how long it took for it to come back is recorded. This same message is sent two more times to get a set of three round-trip-times to the first router. Then, the second group of three UDP messages is sent with a TTL of 2. This causes the second router in the trace to send back ICMP TTL EXCEEDED messages. This continues until the reply that we receive is an ICMP PORT UNREACHABLE instead of a ICMP TTL EXCEEDED. This indicates that the final destination has been reached.

If a reply is not received within 5 seconds, the next packet is sent and a * is displayed in the time entry for the missed packet. Note the following examples.

A simple traceroute of a host on the same network as the router would show something like:

```
TRACEROUTE 125.0.0.109
1  125.0.0.109      4 ms   3 ms   4 ms
```

This indicates that the 3 packets in the group took 4, 3, and 4 ms. respectively.

For a host that is multiple hops away, an output may look like:

```
TRACEROUTE 131.143.16.1
1  125.0.0.75       3 ms   4 ms   3 ms
2  131.143.16.9     91 ms  91 ms  90 ms
3  131.143.16.1     95 ms  95 ms  95 ms
```

If the third packet from 131.143.16.1 had not been received, the last line of the output would look like:

```
3  131.143.16.1     95 ms  95 ms
   0.0.0.0          * ms
```

It is possible that all three packets in a group may not be received from the same router. This can occur if a router goes down during the traceroute. In this case, an output like this may appear:

```
2  131.143.16.9     95 ms
   131.143.16.8     98 ms  99 ms
```

This indicates that, for the second hop of the trace, a reply was received from 131.143.16.9 for the first packet in the group. The second and third packet replies came from 131.143.16.8.

Help

Enter help to re-display the command line interface.

Exit

Enter exit to return to the TCP/IP Status and Test Menu.

4.7.2 IP Status

The IP Status screen displays information and statistics for the Internet Protocol (IP) for all ports on the router which are configured for IP routing. Also access the IP Port Counters screen. This screen is updated every two seconds.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

IP Status

Input Datagrams
Received:      1234567890
Forwarded:     1234567890
Header Error:  1234567890
Address Error: 1234567890
Unknown Protocol: 1234567890
Delivered:     1234567890
Reassembly Timeout: 1234567890
Reassembly Required: 1234567890
Reassembled OK: 1234567890
Reassembly Failed: 1234567890
BootP Rx Messages: 1234567890
BootP Discards: 1234567890


Output Datagrams
Request:      1234567890
No Route:     1234567890
Fragmented Ok: 1234567890
Fragment Failed: 1234567890
Fragment Created: 1234567890

IP Port Counters    >>

Clear = [C]                                Exit = [X]
```

IP Status

Screen Path

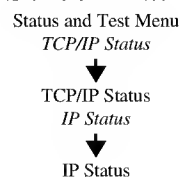

The counters are based on MIB II RFC 1213.

INPUT DATAGRAMS

Received - input datagrams received, including those received in error.

Forwarded - datagrams forwarded.

Header Error - input datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, etc.

Address Error - input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at the local router. This count includes invalid addresses (e.g., 0.0.0.0) and addresses of unsupported classes (e.g., Class E).

Unknown Protocol - locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.

Discarded - input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (e.g., for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.

Delivered - input datagrams successfully delivered to IP user-protocols (including ICMP, UDP, BootP, and TCP).

Reassembly Timeout - the maximum number of seconds during which received fragments are held while they are awaiting reassembly.

Reassembly Required - IP fragments received that are waiting to be reassembled.

Reassembly Ok - fragmented IP datagrams received and successfully re-assembled.

Reassembly Failed - failures detected during the re-assembly of fragmented datagrams.

BootP Rx Messages - counter for received BootP Messages processed by the BootP Relay. This includes BootP requests from the client which are addressed to the BootP server UDP port. The BootP replies from the server are Routed to the Gateway router (the first router to receive the BootP request message from the Client) so the only router that counts BootP responses from the server is the Gateway Router.

BootP Tx Messages - counter for forwarded BootP messages processed by the BootP Relay. This includes BootP requests from the client which are addressed to the BootP server UDP port. The BootP replies from the server are Routed to the Gateway router (the first router to receive the BootP request message from the Client) so the only router that counts BootP responses from the server is the Gateway Router.

BootP Discards - counter for BootP messages discarded by the BootP Relay. This includes BootP messages discarded because of the BootP Threshold Seconds or BootP Threshold Hops options. It also counts BootP messages discarded because of errors.

OUTPUT DATAGRAMS

Request - IP datagrams which local IP user protocols (including ICMP) supplied to IP in requests for transmission. This counter does not include any datagrams counted in Input Datagrams Forwarded.

Discarded - output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (e.g., for lack of buffer space). This counter includes datagrams counted in Input Datagrams Forwarded if any such packets met this discard criterion.

No Routes - IP datagrams discarded because no route could be found to transmit them to their destination. This counter includes any packets counted in Input Datagrams Forwarded which meet this 'no-route' criterion. It also includes any datagrams not routed because the default route is down.

Fragmented Ok - IP datagrams that have been successfully fragmented for transmission.

Fragment Failed - IP datagrams that have been discarded because they needed to be fragmented but could not be (e.g., because their Don't Fragment flag was set).

Fragment Created - fragments that have been created from the fragmented datagrams.

4.7.2.1 IP Port Counters

Access the IP Port Counters screen from the IP Status screen. Use this screen to view the number of datagrams received and transmitted on each port configured for IP routing.


This screen is updated every two seconds.

Osicom Technologies Router Plus T1 Drop & Insert CSU				
IP Port Counters				
Port	Port Name	Address	Datagrams In	Datagrams Out
0	Local Site	111.123.123.123	0000000000	0000000000
1	Remote Site 1	123.121.131.141	0000000000	0000000000
4	Remote Site 4	Unnumbered	0000000000	0000000000

Clear = [C] Exit = [X]

IP Port Counters

Screen Path

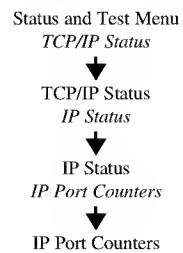

Address - the address configured for the port is displayed or *Unnumbered* is displayed if a WAN port is in Unnumbered mode.

Total IP Datagrams In - IP packets received on the specified port.

Total IP Datagrams Out - IP packets transmitted out the specified port.


4.7.3 ICMP Status

The ICMP Status screen displays information and statistics for the Internetwork Control Message Protocol (ICMP) for all ports on the router which are configured for IP routing. This screen is updated every two seconds.

ICMP allows gateways (routers) to send error or control messages to other gateways or hosts; ICMP provides communication between the IP software on one machine and the IP software on another.

Osicom Technologies Router Plus T1 Drop & Insert CSU		
ICMP Status		
	Input Messages	Output Messages
Total:	1234567890	1234567890
Errored:	1234567890	1234567890
Destination Unreachable:	1234567890	1234567890
Time Exceeded:	1234567890	1234567890
Parameter Problem:	1234567890	1234567890
Source Quench:	1234567890	
Redirect:	1234567890	1234567890
Echo Request:	1234567890	1234567890
Echo Reply:	1234567890	1234567890
Timestamp Request:	1234567890	
Timestamp Reply:	1234567890	
Address Mask Request:	1234567890	
Address Mask Reply:	1234567890	
Clear = [C] Exit = [X]		

ICMP Status

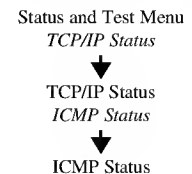

The counters are based on MIB II RFC 1213.

Errored - ICMP messages with ICMP-specific errors (bad ICMP checksums, bad length).

Destination Unreachable - a message sent to the source indicating the datagram cannot be routed or delivered.

Time Exceeded - a message sent to the source when a datagram is discarded because its hop count has reached zero. Each IP datagram contains a time-to-live counter, called a *Hop Count*. To prevent datagrams from circling the Internet forever, each router/gateway decrements the count and discards the datagram when it reaches zero.

Parameter Problem - a message sent to the source indicating a problem with the datagram header. This message is only sent when the problem is so severe that the datagram must be discarded.

Source Quench - a message sent to the original source requesting that it slow down its rate of sending datagrams. When datagrams arrive too quickly for a gateway or router to process, the datagrams are discarded.

Redirect - a message sent by a gateway to a router on a directly-connected network indicating a non-optimum route has been used.

Echo Request - a message sent to test whether a destination is alive and reachable (Ping Request).

Echo Reply - a message sent in response to an Echo Request (Ping Reply).

Timestamp Request - a message sent requesting the destination device return its current value for the time of day.

Timestamp Reply - a message returned to the device making a Timestamp Request.


Address Mask Request - a message sent to request the subnet mask of a device. The router does not send this message.

Address Mask Reply - a message returned to the device making an Address Mask Request.

4.7.4 TCP and UDP Status


The TCP and UDP Status screen displays protocol information and statistics for all router ports that are configured for IP routing. Also access the TCP Connection Table. This screen is updated every two seconds.

The protocols are TCP (Transmission Control Protocol) and UDP (User Datagram Protocol).

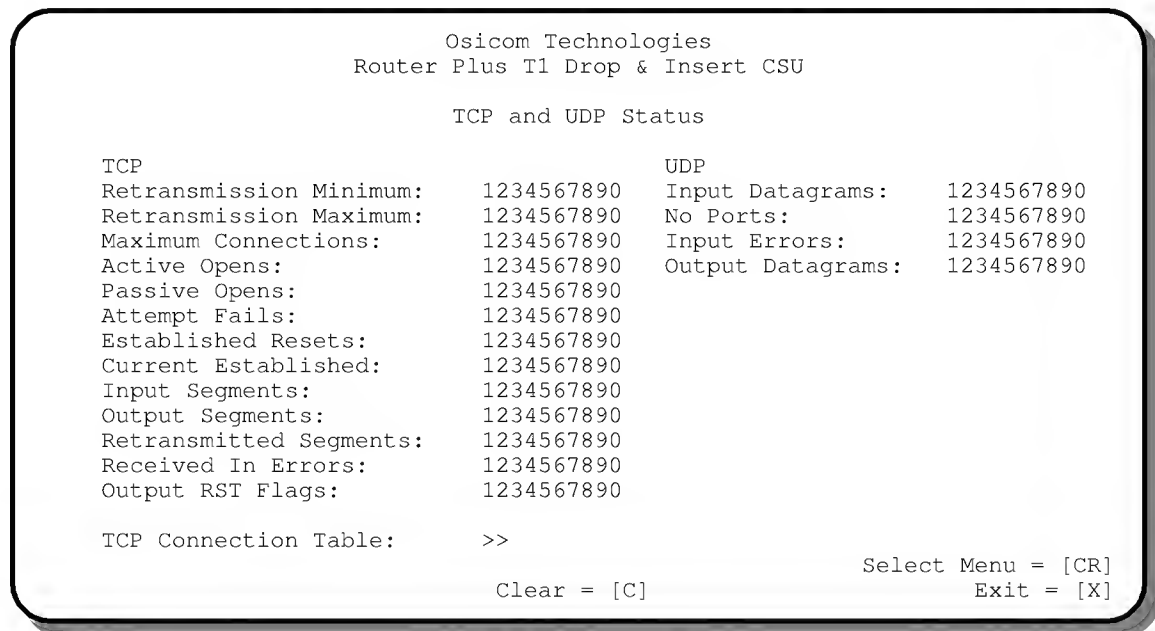

TCP and UDP Status

Screen Path

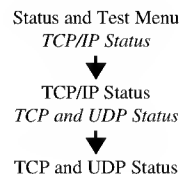

The counters are based on MIB II RFC 1213.

TCP COUNTERS: (Transmission Control Protocol)

Retransmission Minimum - the minimum value permitted for the retransmission timeout value (milliseconds).

Retransmission Maximum - the maximum value permitted for the retransmission timeout value (milliseconds).

Maximum Connections - the limit on the total number of TCP connections supported.

Active Opens - TCP connections made by the router.

Passive Opens - TCP connections made to the router.

Attempt Fails - attempted TCP connections that failed, including both those attempted by the router and to the router.

Established Resets - resets received from established connections (a reset is made if the remote end is not connected).

Current Established - active TCP connections.

Input Segments - segments received, including those received in error. This count includes segments received on currently established connections.

Output Segments - segments sent, including those on current connections but excluding those containing only retransmitted octets.

Retransmitted Segments - segments retransmitted - that is, the number of TCP segments transmitted containing one or more previously transmitted octets.

Received in Errors - segments received in error (e.g., bad TCP checksums).

Output RST Flags - resets sent from the router.

UDP COUNTERS: (User Datagram Protocol)

Input Datagrams - UDP datagrams received and delivered to UDP users.

No Ports - received UDP datagrams for which there was no known application at the destination port.

Input Errors - received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.

Output Datagrams - UDP datagrams sent from the local router.

4.7.4.1 TCP Connection Table


Access the TCP (Transport Control Protocol) Connection Table from the TCP and UDP Status screen. This screen displays MIB II information about the router's existing TCP connections.

This screen is updated every five seconds.

Osicom Technologies				
Router Plus T1 Drop & Insert CSU				
TCP Connection Table - Page 1				
	Local		Remote	
Connection State	Address	Port	Address	Port
Listen	0.0.0.0	23	0.0.0.0	0
Exit = [X]				

TCP Connection Table

Screen Path

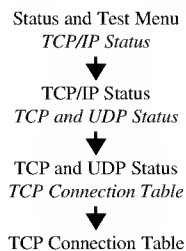

The counters are based on MIB II RFC 1213.

Connection State - status of this TCP connection.

Closed
Listen
SynSent
SynReceived
Established
FinWait1
FinWait2
CloseWait
LastAck
Closing
TimeWait
Delete TCB (connection terminated)

Local Address - local IP address assigned to the link. A connection in the listen state that is willing to accept connections for any port is set to 0.0.0.0.

Local Port - local port number for this TCP connection.

Remote Address - remote IP address for this TCP connection.

Remote Port - remote port number for this TCP connection.

4.7.5 SNMP Status


Use the SNMP Status screen to view the status of SNMP (Simple Network Management Protocol) messages. This screen is updated every two seconds.

Press [C] to reset the counters to zero.

Osicom Technologies		
Router Plus T1 Drop & Insert CSU		
SNMP Status		
	Input	Output
Packets:	1234567890	1234567890
Bad Versions:	1234567890	
Bad Community Names:	1234567890	
Bad Community Uses:	1234567890	
ASN Parse Errors:	1234567890	
Too Bigs:	1234567890	1234567890
No Such Names:	1234567890	1234567890
Bad Values:	1234567890	1234567890
Read Onlys:	1234567890	
Gen Errors:	1234567890	1234567890
Get Requests:	1234567890	
Get Nexts:	1234567890	
Set Requests:	1234567890	
Get Responses:		1234567890
Traps:		1234567890
Total Request Variables:	1234567890	
Total Set Variables:	1234567890	
Clear = [C]		Exit = [X]

SNMP Status

Screen Path

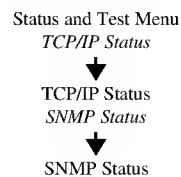

In the following descriptions, an SNMP Protocol Data Unit (PDU) is SNMP information that is encapsulated in a UDP datagram.

The counters are based on MIB II RFC 1213.

Packets - SNMP messages delivered between the local router and the transport service.

Bad Versions - SNMP messages which were delivered that were for an unsupported SNMP version.

Bad Community Names - SNMP messages delivered which used an unknown SNMP community name.

ASN Parse Errors - the total number of ASN.1 or BER errors encountered by the SNMP protocol entity when decoding received SNMP messages.

Bad Community Uses - SNMP messages delivered that represented an SNMP operation which was not allowed by the SNMP community named in the message.

Too Bigs - SNMP PDUs for which the value of the error-status field is 'too big.'

No Such Names - SNMP PDUs for which the value of the error-status field is 'noSuchName.'

Bad Values - SNMP PDUs for which the value of the error-status field is 'badValue.'

Read Onlys - valid SNMP PDUs that were delivered for which the value of the error-status field is 'readOnly.' It is a protocol error to generate an SNMP PDU which contains the value 'readOnly' in the error-status field, as this object is provided as a means of detecting incorrect implementations of the SNMP Working Group.

Gen Errors - SNMP PDUs for which the value of the error-status field is 'genErr.'

Get Requests - SNMP Get-Request PDUs.

Get Nexts - SNMP Get-Next PDUs.

Set Requests - SNMP Set-Request PDUs.

Get Responses - SNMP Get-Response PDUs.

Traps - the number of traps sent.

Total Request Variables - MIB objects delivered successfully as the result of receiving valid SNMP Get-Request and Get-Next PDUs.

Total Set Variables - MIB objects which have been altered successfully as the result of valid SNMP Set-Request PDUs.

4.7.6 ARP Table

Access the ARP Table to view IP addresses and corresponding MAC addresses for devices with which the router has communicated recently.

The router uses Address Resolution Protocol (ARP) to dynamically learn the MAC address of a destination router or host on the same physical network. A receiver updates its ARP table before processing an ARP packet. This screen is updated every five seconds.


Page Down/Up prompts appear when there are more than 15 entries in the table.

Press [F] to clear the table.

Osicom Technologies Router Plus T1 Drop & Insert CSU			
ARP Table - Page 1			
Physical Address	Network Address	Type	Age
08:00:20:0F:F5:ED	125.0.1.1	Dynamic	0060
08:00:20:0F:F5:E0	125.0.0.1	Dynamic	0060
08:00:20:0F:F5:E1	125.0.0.2	Dynamic	0060
08:00:20:0F:F5:E2	125.100.0.88	Dynamic	0120
08:00:20:0F:F5:E3	125.0.1.4	Dynamic	0180
08:00:20:0F:F5:E4	125.0.0.5	Dynamic	3480
08:00:20:0F:F5:E5	125.0.0.6	Dynamic	0120
08:00:20:0F:F5:E6	100.80.10.5	Dynamic	0009
08:00:20:0F:F5:E7	125.0.1.7	Dynamic	0060
08:00:20:0F:F5:E8	125.0.0.8	Dynamic	0120
08:00:20:0F:F5:E9	125.0.0.9	Dynamic	0180
08:00:20:0F:F5:02	125.125.125.125	Dynamic	0180
08:00:20:0F:F5:03	125.10.1.1	Dynamic	0060
08:00:20:0F:F5:04	125.1.1.1	Dynamic	0060
08:00:20:0F:F5:05	125.0.0.32	Dynamic	0060

ARP Table

Screen Path

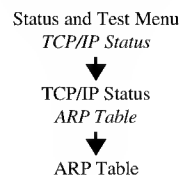

The counters are based on MIB II RFC 1213.

Physical Address (48-bit hex) - the physical Media Access Control (MAC) address.

Network Address - IP address corresponding to the physical MAC address.

Type - the address as one of the following:

Invalid - no response to an ARP request was received.

Dynamic - the IP address for this router was learned automatically from an ARP message.

Age - number of seconds since the last ARP packet was received.

- The ARP timer is incremented once a minute for Dynamic entries and once a second for Invalid entries.
- An Invalid entry is one that is waiting for an ARP reply.
- The timeout for Invalid entries is set at 2 seconds with 3 retries. Dynamic entries are maintained in the list for 60 minutes. If they are not updated within that limit, they are deleted.

Packets In - total IPX packets received on the specified interface.

Packets Out - total IPX packets transmitted out the specified interface.

4.8.1 IPX Status (LAN and WAN)

The Port IPX Status screen (LAN and [WAN](#)) displays information and statistics for the Internetwork Packet eXchange Protocol (IPX) for ports on the LAN and WAN interfaces. This screen is updated every two seconds.

NOTE

The screens for LAN and WAN are identical except for the parameters indicated.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 0 IPX Status


Total IPX Packets:      Input      Output
Packets To Route:      00000000  0000000000
No Route:               00000000
Hop Count Too Large:    00000000
Packets In Error:       00000000
Packets Too Long:       00000000
Type 20 Packets:        00000000  0000000000
Type 20 Hop Count Too Large: 00000000
Diagnostic Packets Filtered: 00000000
Serialization Packets Filtered: 00000000

RIP/SAP Status:        >>

Clear = [C]                                     Select Menu = [CR]
                                                Exit = [X]
```

Port IPX Status (LAN)

Screen Path

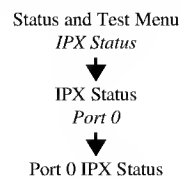

Two columns display various counters for received or transmitted frames, as follows:


- Input - applies to received IPX packets.
- Output - applies to transmitted IPX packets.

This screen also provides access to the RIP/SAP Status and IPXWAN Status screens (WAN only).

Total IPX Packets - IPX Packets on this port. This counter does not include Packets In error or Packets Too Long.


Packets To Route - total packets received that required routing.

No Route - packets received via the port that could not be forwarded because a path to the network is not known.

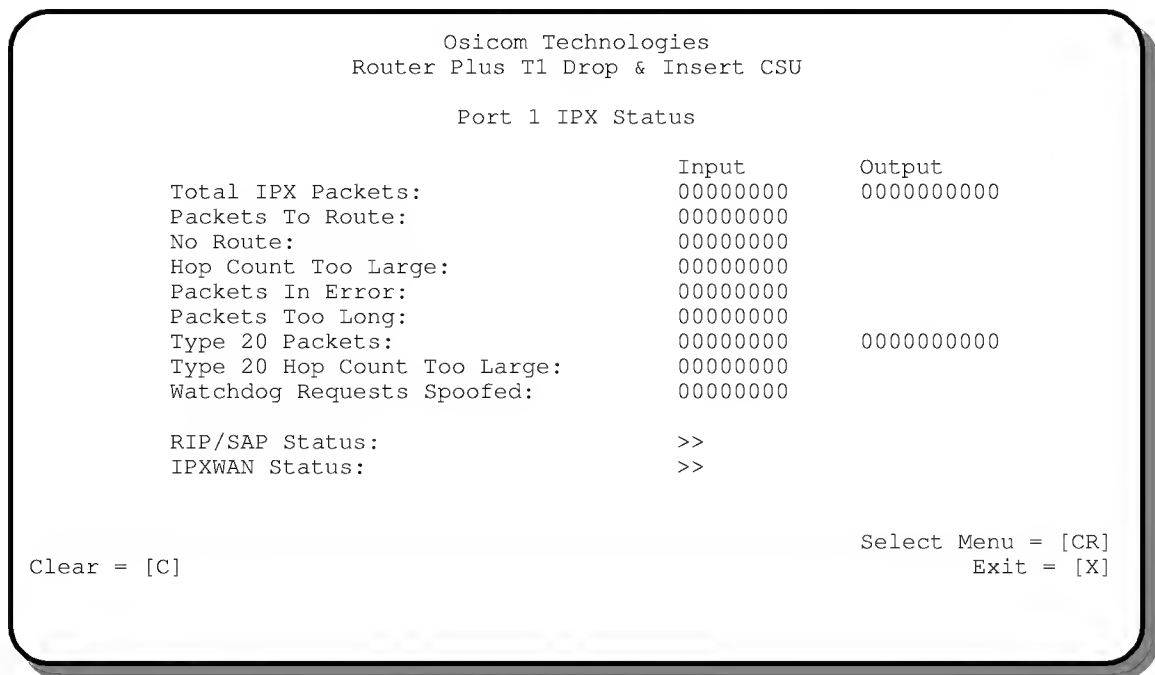

Port IPX Status (WAN)

Screen Path

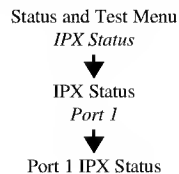

Hop Count Too Large - packets received on the port that were discarded because the transport control field (hop count) was greater than 14.

Packets In Error - packets with an invalid Type field or an incorrect packet length field.

Packets Too Long - packets received that were too long (based on the IPX header length field and the actual packet length).

Type 20 Packets - Novell encapsulated Netbios packets on the specified virtual IPX port.

Type 20 Hop Count Too Large - Netbios packets received on the port that were discarded because the hop count was too large. Type 20 packets received with a Transport Control field of 8 or greater are discarded.

Diagnostic Packets Filtered (LAN only) - diagnostic packets filtered due to the Diagnostic Packets option on the port IPX Filters screen.

Serialization Packets Filtered (LAN only) - serialization packets filtered due to the Serialization Packets option on the port IPX Filters screen.

Watchdog Requests Spoofed (WAN only) - the number of Watchdog Requests received on this port which were not forwarded due to watchdog spoofing. See the Watchdog Packets option on the port [IPX Filters screen](#).

4.8.1.1 IPX RIP/SAP Status (LAN and WAN)

The [Port IPX RIP/SAP Status screen](#) displays statistics counters on SAP (Service Advertising Protocol) and RIP (Routing Information Protocol) packets for ports on the LAN and WAN interfaces. This screen is updated every two seconds.


SAP/RIP Responses Input: the total number of RIP/SAP responses received.

SAP/RIP Responses Output: the total number of solicited RIP/SAP responses (sent in response to a general and specific requests). This does not include unsolicited responses such as triggered updates or periodic updates.

Osicom Technologies		
Router Plus T1 Drop & Insert CSU		
Port 0 IPX RIP/SAP Status		
	Input	Output
SAP General Requests:	0000000000	0000000000
SAP Specific Requests:	0000000000	
SAP Responses:	0000000000	0000000000
SAP Get Nearest Requests:	0000000000	
SAP Get Nearest Responses:		0000000000
SAP Periodic Update:		0000000000
SAP Triggered Update:		0000000000
RIP General Requests:	0000000000	0000000000
RIP Specific Requests:	0000000000	
RIP Responses:	0000000000	0000000000
RIP Periodic Update:		0000000000
RIP Triggered Update:		0000000000
Clear = [C]		Exit = [X]

Port IPX RIP/SAP Status (LAN and WAN)

Screen Path

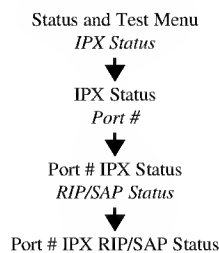

SAP/RIP General Requests - general queries.

SAP/RIP Specific Requests - specific queries.

SAP/RIP Responses - general responses.

SAP Get Nearest Requests - nearest queries.

SAP Get Nearest Responses - nearest responses.

SAP/RIP Periodic Update - periodic router broadcasts.

SAP/RIP Triggered Update - update router broadcasts.


4.8.1.2 IPXWAN Status

IPXWAN is a protocol developed by Novell and specified in RFC1634. The purpose of IPXWAN is to provide a common way of exchanging router to router information across different type of wide area links. RFC1634 describes how Novell IPX operates over various WAN media using the IPXWAN protocol.

Support for IPXWAN is only provided to allow the router to be compatible with Novell routers. It is not required to route IPX and should be disabled unless it is required. Default is disabled.


NOTE

IPXWAN must be set to the same value on both ends of a connection. If it is not set to the same value, then the router will not be able to communicate across the link.

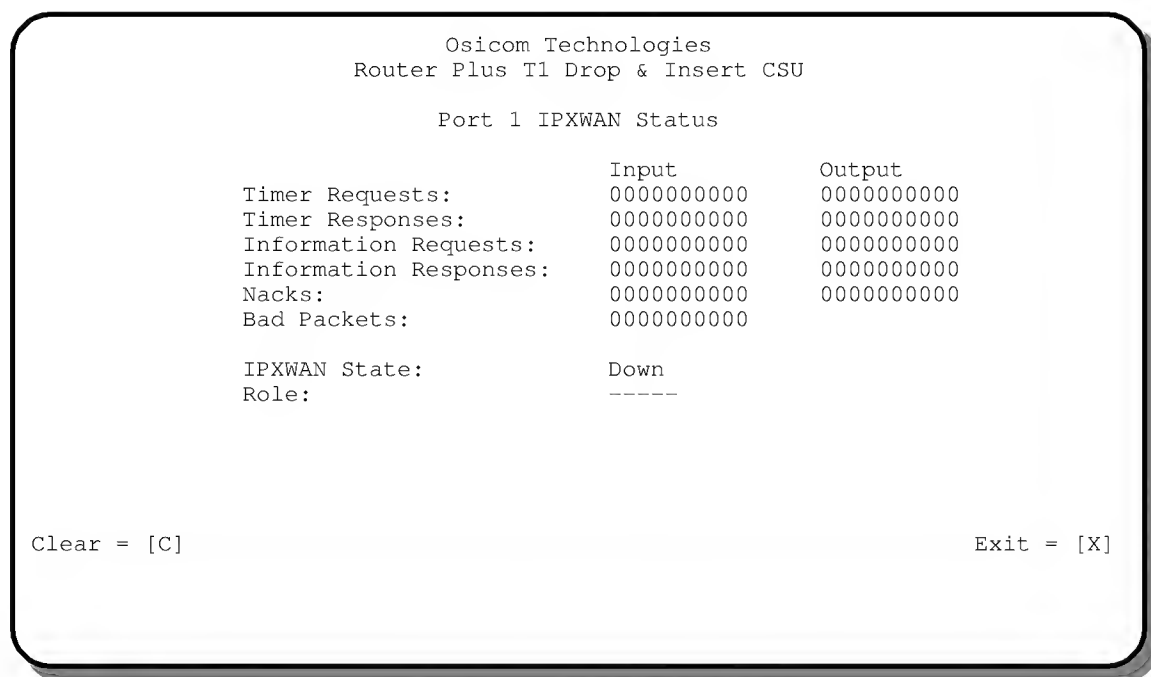

Port IPXWAN Status (WAN)

Screen Path

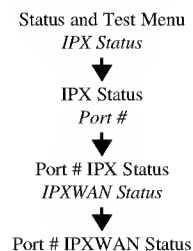

There are two steps in the IPXWAN operation:

1. Negotiate master/slave role.
2. Exchange router configuration information.

After these steps are concluded, transmission of IPX routing packets begins.

This screen is updated every two seconds.

Counter definitions are based on RFC 1634.

Timer Requests - a packet sent from both sides after link establishment which starts a timer and waits for a Timer Response. These packets are exchanged every 20 seconds until a response is received or a decision is made that the remote node is not responding.

Timer Responses - the reply to a Timer Request. This packet verifies each option in the Timer Request packet.

Information Requests - data packets sent (Master) after the peers have exchanged Timer Request and Response packets and negotiated options.

Information Responses - data packets received (Slave) after the peers have exchanged Timer Request and Response packets and negotiated options.

Nacks - received IPXWAN packets that were not acceptable. Either the received packet type was invalid or not recognized, or a badly-formed IPXWAN packet was received.

Bad Packets - illegal packets received.

IPXWAN State - status of the negotiation.

Disabled: the IPXWAN option is disabled.

Down: negotiation failed.

Negotiating Timer: negotiating timer packets.

Negotiating Information: negotiating Information packets.

Up: negotiation complete.

Role - function of the local router. Upon receiving a Timer Request packet, the router determines its role for the remainder of the IPXWAN exchanges. This parameter is only used during IPXWAN initial negotiation to determine master/slave roles. The router with the higher Internal Network Number is the master.

Master: the requestor in the packet exchange.

Slave: the responder in the packet exchange.


Dashes (-----) displayed when the State is not *Up*.

Refer to RFC 1634 for details of these counters.

4.9.1 Port Bridging Status


Access the Port Bridging Status screen to display bridging status information for a specific port. This screen is updated every two seconds.

- Input - Received bridged frames.
- Output - Transmitted bridged frames.

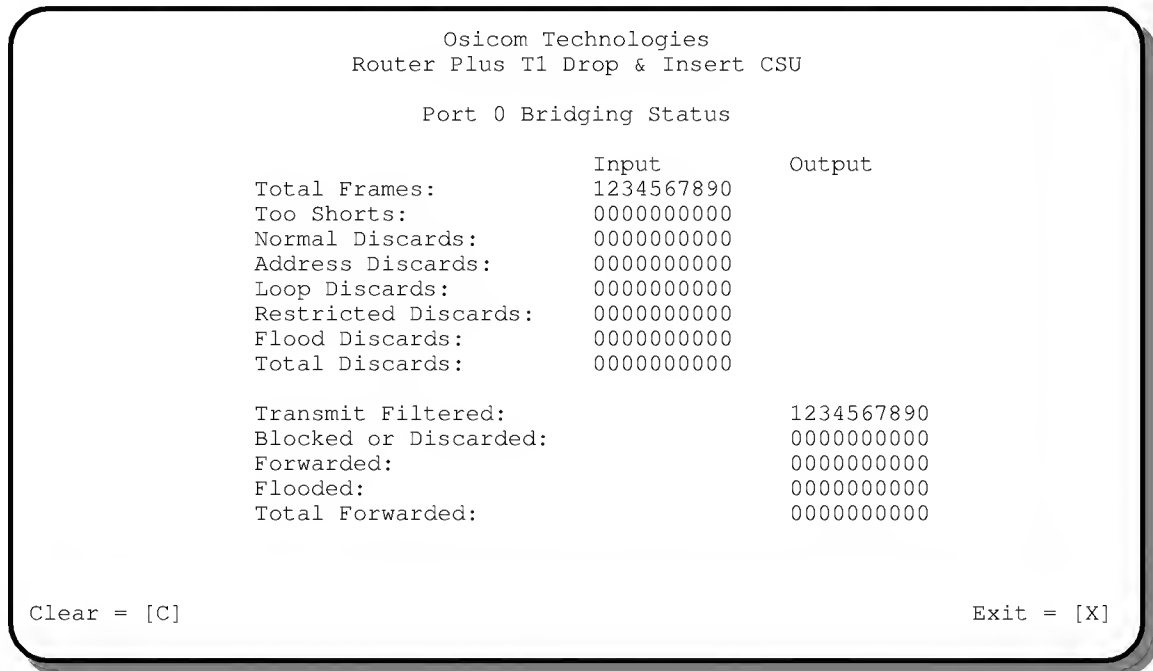

Port Bridging Status

Screen Path

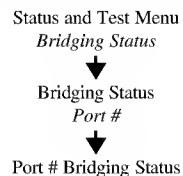

Total Frames - frames sent/received on this port.

Too Shorts - frames on this port that were discarded because they were too short.

Normal Discards - frames on this port that were destined for the same port. This is normal.

Address Discards - frames discarded due to source or destination entries in the address table being marked as 'filter.'

Loop Discards - frames received from the wrong port. The port that the frame was received on was different than the port the source address was associated with in the Bridging Table.

Restricted Discards - frames discarded due to setting the forwarding mode to 'restricted.' If a frame is received by the bridge and its header does not contain the address of a device in the forwarding table, the frame is discarded and this counter is incremented.

Flood Discards - frames discarded on this port due to Flood limiting. Flooding of received frames with an unknown destination address is 5 frames per second.

Total Discards - total frames discarded on this port.

Transmit Filtered - frames that were not forwarded on this port due to action of one of the 'type' filters.

Blocked or Discarded - frames that were dropped and not delivered on this port. The purpose of this counter is to attempt to count frames which are dropped by the high level WAN driver inside of the unit. This counter will tick when a frame is delivered toward a WAN port, but that port cannot deliver the frame because the port is down or congested.

Forwarded - frames forwarded to a destination on this port.

Flooded - frames transmitted on this port that were broadcast (flooded) to a destination with an unknown location.

Total Forwarded - frames forwarded on this port.

4.10 IP Routing Table

Access the IP Routing Table to view all of the known destination networks. All fields are read only. Static routes are configured from the [IP Global Configuration screen](#).

The IP routing table contains the information used to decide where to forward IP packets. If RIP (Routing Information Protocol) is enabled, this data is exchanged with adjacent routers.

For both RIP v1 and RIP v2, subnet routes are only advertised on ports that are on the same subnetted network. Subnet routes are hidden or summarized when advertised on a port that is on a different network. Host routes are not supported; any host routes received are discarded

This screen is updated every 30 seconds. Press [CR] to update the screen manually. The routes are listed in numerical order.

Page Down/Up prompts appear when there is more than one page of entries.

Type [F] to delete all learned entries.

Osicom Technologies Router Plus T1 Drop & Insert CSU						
IP Routing Table - Page 1						
Destination	Subnet Mask	Next Hop	Hops	Port	Type	Age
118.0.0.0	255.0.0.0		1	2	Dir	
117.0.0.0	255.0.0.0		1	3	Dir	
128.0.0.0	255.255.0.0	118.0.0.12	2	2	RIPv1	10
129.102.0.0	255.255.0.0	118.0.0.12	4	2	RIPv1	20
139.102.0.0	255.255.0.0	118.0.0.12	5	2	RIPv1	12
149.102.0.0	255.255.0.0	118.0.0.12	14	2	RIPv1	26
159.102.0.0	255.255.0.0	118.0.0.12	4	2	RIPv1	5
169.102.0.0	255.255.0.0	118.0.0.12	9	2	RIPv1	1
105.0.0.0	255.0.0.0	117.0.0.101	2	3	Stat	
108.0.0.0	255.0.0.0	117.0.0.101	2	3	Stat	
Cursor Down = [Space Bar]				Update = [CR]		
Cursor Up = [Backspace]			Flush = [F]		Exit = [X]	

IP Routing Table

Screen Path

Status and Test Menu

IP Routing Table



IP Routing Table

Destination - when an IP packet to be routed is received, its destination address is compared to the destination address in the routing table. The matching entry in the table is used to determine which port the packet will be forwarded on.

If no matching destination address is found in the IP routing table, the packet is sent to the default route address. The default route address is configured at the IP Global Configuration screen. If no default route address is configured, the packet is discarded.

Configure the destination address for a static entry at the Global IP Static Route screen.

Configure the destination address for a direct entry at the Port IP Routing Options screen. The destination address for a RIP entry is learned from the value contained in the RIP update message.

Subnet Mask - this is used in conjunction with the destination address to indicate if the route is a network, subnetwork, or host route. Configure the subnet mask for a direct entry at the Port IP Routing Options screen. Configure the subnet mask for a static entry at the Global IP Static Route screen.

The subnet mask for a RIP v1 entry is the default address class mask unless the entry is for the subnet that the router is directly connected to.

The subnet mask for a RIP v2 entry is the mask specified in the routing message.

Next Hop - the address of another router that leads to the destination network. The Next Hop address for a Direct route is blank since packets destined for a directly-connected network do not need to be sent to another router, they are delivered to the ultimate destination by the router.

The Next Hop address for a Static route that points out the LAN is configured in the IP Static Route Table screen. The Next Hop address is set to 0.0.0.0 for static routes that point towards the WAN for Unnumbered Mode and Numbered Mode.

The Next Hop address for a RIPv1 route learned from the LAN or a WAN in numbered mode is the source address of the packet the routing message was received from.

The Next Hop address for a RIPv2 route learned from the LAN or a WAN in numbered mode is the address specified in the routing message. If this address is not valid or 0.0.0.0, then the Next Hop address is the source address of the packet the routing message was received from.

The Next Hop address is set to 0.0.0.0 for a RIPv1 route learned on a WAN in Unnumbered Mode.

The Next Hop address for a RIPv2 route learned from a WAN in unnumbered mode is the address specified in the routing message.

Hops - this field indicates how many hops (intervening routers) it takes to reach the destination network. If multiple routes to a network are received, the Routermate Plus will select (learn) the one with the lowest number of hops. The Hops value for a Direct entry is configured on the Port IP Routing Options screen. The Hops value for a Static entry is configured on the IP Static Route Table screen. The Hops value for a RIP entry is the sum of the metric value configured for the port that the routing update message was received on and the metric value reported in the routing update message. The Hops value advertised is equal to the value shown. (Range is 1 - 16)

Port - the port used to reach the destination network. The port for a direct entry is determined by which port the destination address is associated with. The port for a static entry is determined by which port is entered on the Static Route configuration screen. The port for a RIP entry is the port that received the RIP update message.

Type - specifies the location of the destination network, whether it was configured or learned, and the route's status.

Dir (Direct) - the local router is directly connected to the destination network. Direct routes are configured at the Port IP Routing Options screen.

Stat (Static) - a route to a remote destination network; this route is configured in the local router and overrides RIP routes. Configure static routes on the Global IP Static Route screen.

RIPv1 or RIPv2 (Routing Information Protocol) - a route to a remote destination network; the route was learned from a RIP update message. The RIP version number (v1 or v2) indicates the version of routing update message the route was learned from.

INV (Invalid) - the garbage collection timer is running and the route is in the process of being deleted. The metric is always 16 for an invalid route.

Age - (range 1-999 seconds) the Age field counts the number of seconds since the last update for each RIP entry in the routing table. When an update is received, the Age field is reset to zero. When the Age reaches a value equal to the RIP Route Aging Timer the metric changes to a value of 16. When the Age reaches a value equal to the RIP Route Delete Delay Timer the entry is deleted from the routing table.

When the aging timer reaches 180 seconds, the metric for the route is set to 16, which results in the destination being advertised as un-reachable. If the aging timer reaches a value equal to an internal delete-delay timer (120-second 'Garbage Collection Timeout' the entry is deleted from the routing table.

4.11 IPX Routing Table

Access the IPX Routing Table to view all of the known destination networks. All fields are read only.

The IPX routing table contains information used to decide where to forward IPX packets. This information is also exchanged with adjacent routers using the IPX Routing Information Protocol (RIP).

The routes are listed in numerical order. This screen is updated every 30 seconds. Press [CR] to update the screen manually.

Page Down/Up prompts appear when there is more than one page of entries.

Type [F] to delete all learned entries.

Osicom Technologies							
Router Plus T1 Drop & Insert CSU							
IPX Routing Table - Page 1							
Destination	Next Hop	Hops	Delay	Port	Type	Age	
ABC00001		0	11	0	Dir		
ABC00002		0	11	1	Dir		
ABC00003	ABC00001.08000E000123	10	11	0	RIP	30	
ABC00004	ABC00001.08000E000123	10	11	0	RIP	1115	
ABC00005	AC000002.000000012e21	10	11	1	RIP	30	
ABC00006	AC000002.000000012e21	10	65535	1	RIP	1115	
Page Down = [+]				Update = [CR]			
Page Up = [-]				Flush = [F]			
				Exit = [X]			

IPX Routing Table

Screen Path

Status and Test Menu
IPX Routing Table
↓
IPX Routing Table

Destination - the 32-bit hex IPX network number for the network that can be accessed. When an IPX packet to be routed is received, its destination address is compared to the destination address in the routing table. The matching entry in the table is used to determine which port the packet will be forwarded on.

If no matching destination address is found in the IPX routing table, the packet is discarded.

Configure the destination address for a direct entry at the Port IPX Routing Options screen. The destination network for a RIP entry is learned from the value contained in the RIP update packet.

Next Hop - hex address of the next router in the path to the destination network in the form of 32-bit network number plus 48-bit node number. The Next Hop address for a Direct entry is blank since packets destined for a directly-connected network do not need to be sent to another router, they are delivered to the ultimate destination by the router. The Next Hop address for a RIP entry learned from the LAN or a WAN in numbered mode or unnumbered mode is the source address of the packet the routing message was received from.

Hops - this field indicates how many hops (intervening routers) it takes to reach the destination network. The range is 1 - 16. The hops value for a direct entry is 0. The hops value for a RIP entry is the value reported in the routing update message. The hops value advertised is equal to the value displayed, plus 1.

Delay - indicates an estimate of how much time, in ticks, that a 576-byte packet takes to reach the destination network. If multiple routes to a network are received, the Routermate Plus will select (learn) the one with the lowest number of ticks. If two routes exist with equal ticks, the route with the lowest number of hops will be selected. A time tick is approximately 1/18 second or 55ms. The range is 1 - 65535.

The Delay value for a LAN directly-connected route is configured by the Transport Time parameter on the Port IPX Routing Options screen.

The Delay value for a WAN directly-connected route depends on the setting of the IPXWAN option parameter on the Port IPX Routing Options screen. If IPXWAN is disabled (default), then the value configured by the Transport Time parameter on the Port IPX Routing Options screen is displayed. If IPXWAN is enabled, then the value calculated by IPXWAN is displayed.

The delay value for a RIP entry is equal to the value reported in the routing update message. The delay value advertised is equal to the value displayed plus the delay for the port it is advertised out.

Port - the port used to reach the destination network. The port for a direct entry is determined by which port the destination address is associated with. The port for a RIP entry is the port on which the RIP update packet was received.

Type - the type specifies the location of the destination network. Valid options:

Dir (Direct) - the local router is directly connected to the destination network. Direct routes are configured at the Port IPX Routing Options screen.

RIP (Routing Information Protocol) - a route to a remote destination network; the route was learned from a RIP update packet.

Age - the number of seconds since the last RIP update packet was received for each RIP entry in the routing table. When a RIP update packet is received, the timer for the age field is reset to zero. When the aging timer reaches the time configured for the RIP Age Timer at the Port IPX Routing Options screen, the entry is deleted from the routing table. The default is 180 seconds.


4.12 IPX Services Table

Access the IPX Services Table to view all of the known servers. SAP (Service Advertising Protocol) is an IPX protocol that is used to advertize various Novell application services offered by such devices as file servers and printer servers. Routers exchange service information, which is added to each router's service table. The service table is used to inform the clients about the available servers.

This screen is updated every 30 seconds. Press [CR] to update the screen manually.

Page Down/Up prompts appear when there is more than one page of entries.

Type [F] to delete all learned entries.

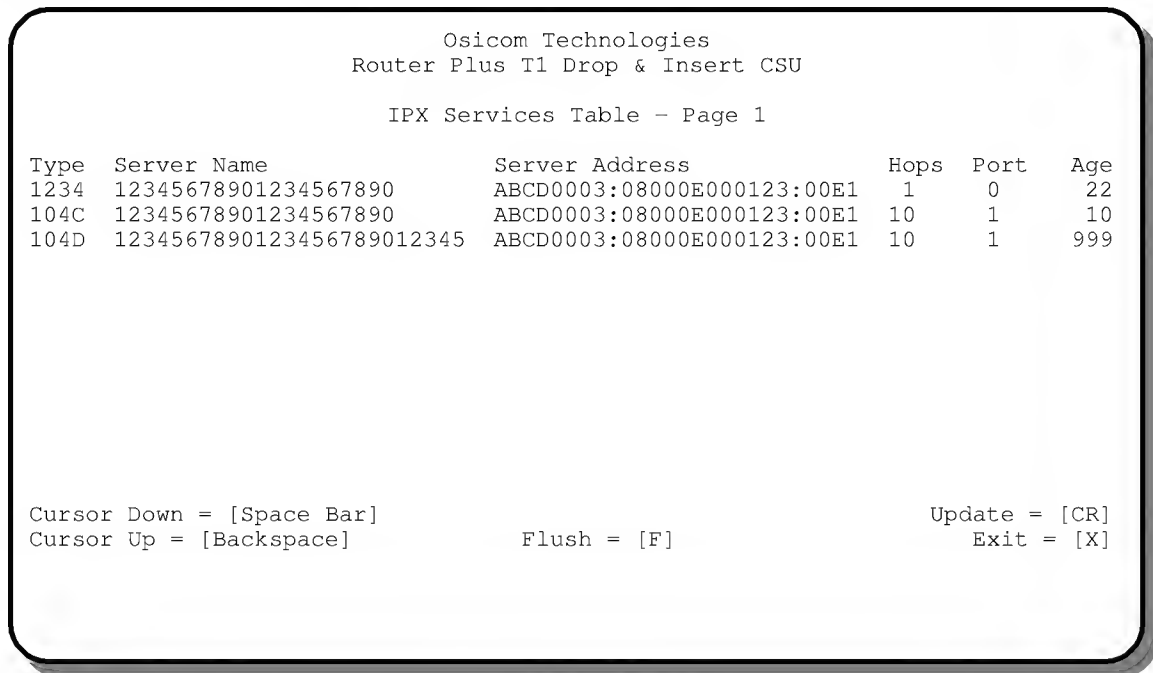

Type	Server Name	Server Address	Hops	Port	Age
1234	12345678901234567890	ABCD0003:08000E000123:00E1	1	0	22
104C	12345678901234567890	ABCD0003:08000E000123:00E1	10	1	10
104D	1234567890123456789012345	ABCD0003:08000E000123:00E1	10	1	999

Cursor Down = [Space Bar] Update = [CR]
Cursor Up = [Backspace] Flush = [F] Exit = [X]

IPX Services Table

Screen Path

Status and Test Menu
IPX Services Table
↓
IPX Services Table

Type - a 16-bit (4-character) hexadecimal value representing the type of service. Each server type is identified by a value assigned by Novell. There are values for standard types such as *file server* and *print server*, and for proprietary vendor's equipment such as *HP Laserjet*.

Server Name - a unique 48-character name assigned to the server type (e.g., *file server*, *print server*, *print queue server*).

The router retrieves this name from the incoming SAP update packet and displays the first 24 characters.

Server Address - the full IPX address of the destination server, in the form (hex):

32-bit network : 48-bit Node address : 16-bit Socket

This information is obtained from the incoming SAP update message.

Hops - the number of intervening routers to the destination service. The value displayed is equal to the value reported in the SAP update message. The hops value advertised is equal to the value displayed, plus 1.

Port - number for the port on which the SAP update message was received.

Age - the number of seconds since the last SAP update packet was received for each entry in the table. When a SAP update packet is received, the timer for the age field is reset to zero. When the aging timer reaches the time configured for the SAP Age Timer at the Port IPX Routing Options screen (default is 180 seconds), the entry is deleted from the IPX Services Table.

4.13 Bridging Table

Access the Bridging Table to display all learned and static MAC addresses for all ports for which bridging is enabled.

This screen is updated every 30 seconds. Press [CR] to update the screen manually.

Page Down/Up prompts appear when there are more than 12 entries in the table.

Press [F] to delete all learned entries.

Press [C] to reset Maximum Entries to the current value.

Osicom Technologies Router Plus T1 Drop & Insert CSU				
Bridging Table - Page 1				
Type	MAC Address	Action	Port	
Static	00:00:6d:00:30:00	Filter	--	
Static	00:00:6d:00:30:01	Filter	--	
Static	00:00:6d:00:30:02	Forward	2	
Static	00:00:6d:00:30:03	Forward	1	
Learned	00:00:6d:00:30:04	Forward	1	
Learned	00:00:6d:00:30:05	Forward	1	
Learned	00:00:6d:00:30:06	Forward	1	
Learned	00:00:6d:00:30:07	Forward	1	
Learned	00:00:6d:00:30:08	Forward	1	
Learned	00:00:6d:00:30:09	Forward	1	
Learned	00:00:6d:00:30:10	Forward	1	
Learned	00:00:6d:00:30:11	Forward	1	
Current Entries:		0020		
Maximum Entries:		0035		
Page Up = [-]		Clear = [C]	Update = [CR]	
Page Down = [+]		Flush = [F]	Exit = [X]	

Bridging Table

Screen Path

Status and Test Menu
Bridging Table
↓
Bridging Table

Type - how the address was entered, as follows:

Static - the address has been manually entered in the bridging Static Address Table.

Learned - the address is automatically learned.

MAC Address - the 48-bit hexadecimal Ethernet address that is permanently assigned to each device communicating on an Ethernet LAN.

Action - how the bridge handles frames that are either destined to, or sourced from, the specified MAC address, as follows:

Filter - all frames to or from the specified MAC address are filtered (not forwarded).

Forward - frames that contain the specified MAC address in the frame's destination field are forwarded to this port; frames that contain the specified MAC address in the source field should be received on this port.

Filtering is configured as a global bridging option in the bridging Static Address Table.

Port - location where frames are forwarded based on their destination address. Frames containing the specified MAC address in the source field will be received on this port. Frames received by the bridge containing the specified MAC address in the destination field will be forwarded to this port. The Port value is ignored and dashes (--) are displayed when the 'Action' is set to *Filter*.

Port numbers either are configured in the Static Address Table or are learned automatically.

4.14 Event Log

The Event Log screen records all statistical and error messages that occur during startup and operation. The maximum number of events is 45. The most recent event is shown first.

Osicom Technologies		
Router Plus T1 Drop & Insert CSU		
Event Log - Page 1		
	Time Since	Description
#	Last Event	
Last 1:	00:00:00:00	CSU Test Mode Terminated
2:		
3:		
4:		
5:		
6:		
7:		
8:		
9:		
10:		
11:		
12:		
13:		
14:		
15:		
Next Page = [Space Bar]		
Top Page = [Backspace]		
Clear Log = [C]		
Freeze = [Z]		
Toggle Time = [T]		
Exit = [X]		

Event Log

Screen Path

Main Menu
Event Log
↓
Event Log

5. CONFIGURATION SCREENS

Start of Document


- [5.1 Screen Structure, Configuration](#)
- [5.2 Configuration Menu](#)
- [5.3 T1 CSU Configuration](#)
 - [5.3.1 Bandwidth Allocation](#)
 - [5.3.2 Interface Configuration](#)
- [5.4 Interface Configuration Summary](#)
 - [5.4.1 LAN Configuration](#)
 - [5.4.2 WAN Configuration](#)
 - [5.4.2.1 WAN Protocol Options \(Frame Relay\)](#)
- [5.5 Port Configuration Summary](#)
 - [5.5.1 Port Configuration](#)
 - [5.5.1.1 IP Routing Options \(LAN\)](#)
 - [5.5.1.2 IP Routing Options \(WAN\)](#)
 - [5.5.1.3 IP Filters](#)
 - [5.5.1.3.1 IP RIP Input/Output Filters](#)
 - [5.5.1.4 IPX Routing Options](#)
 - [5.5.1.5 IPX Filters](#)
 - [5.5.1.5.1 IPX SAP Input/Output Filters](#)
 - [5.5.1.5.2 IPX RIP Input/Output Filters](#)
 - [5.5.1.6 Bridging Options](#)
 - [5.5.1.6.1 Transmit Filters](#)
 - [5.5.1.7 Encryption Options \(Frame Relay and PPP\)](#)
- [5.6 Global Configuration](#)
 - [5.6.1 IP Global Configuration](#)
 - [5.6.1.1 IP Static Routes](#)
 - [5.6.1.2 IP RIP Neighbor List Table](#)
 - [5.6.2 IPX Global Configuration](#)
 - [5.6.3 Bridging Global Configuration](#)
 - [5.6.3.1 Bridging Static Addresses](#)
 - [5.6.4 PPP Global Configuration](#)
 - [5.6.5 Encryption Global Configuration](#)

This section illustrates and describes the router's configuration screens. Access these screens to configure the router's operational parameters to suit your application. This text also serves as a reference tool for defining the parameters and options displayed on the screens.

After reading this section, the user will be able to locate specific configuration screens and understand the contents and purpose of each.

5.1 Screen Structure, Configuration

The organization of the Configuration screens is shown below.

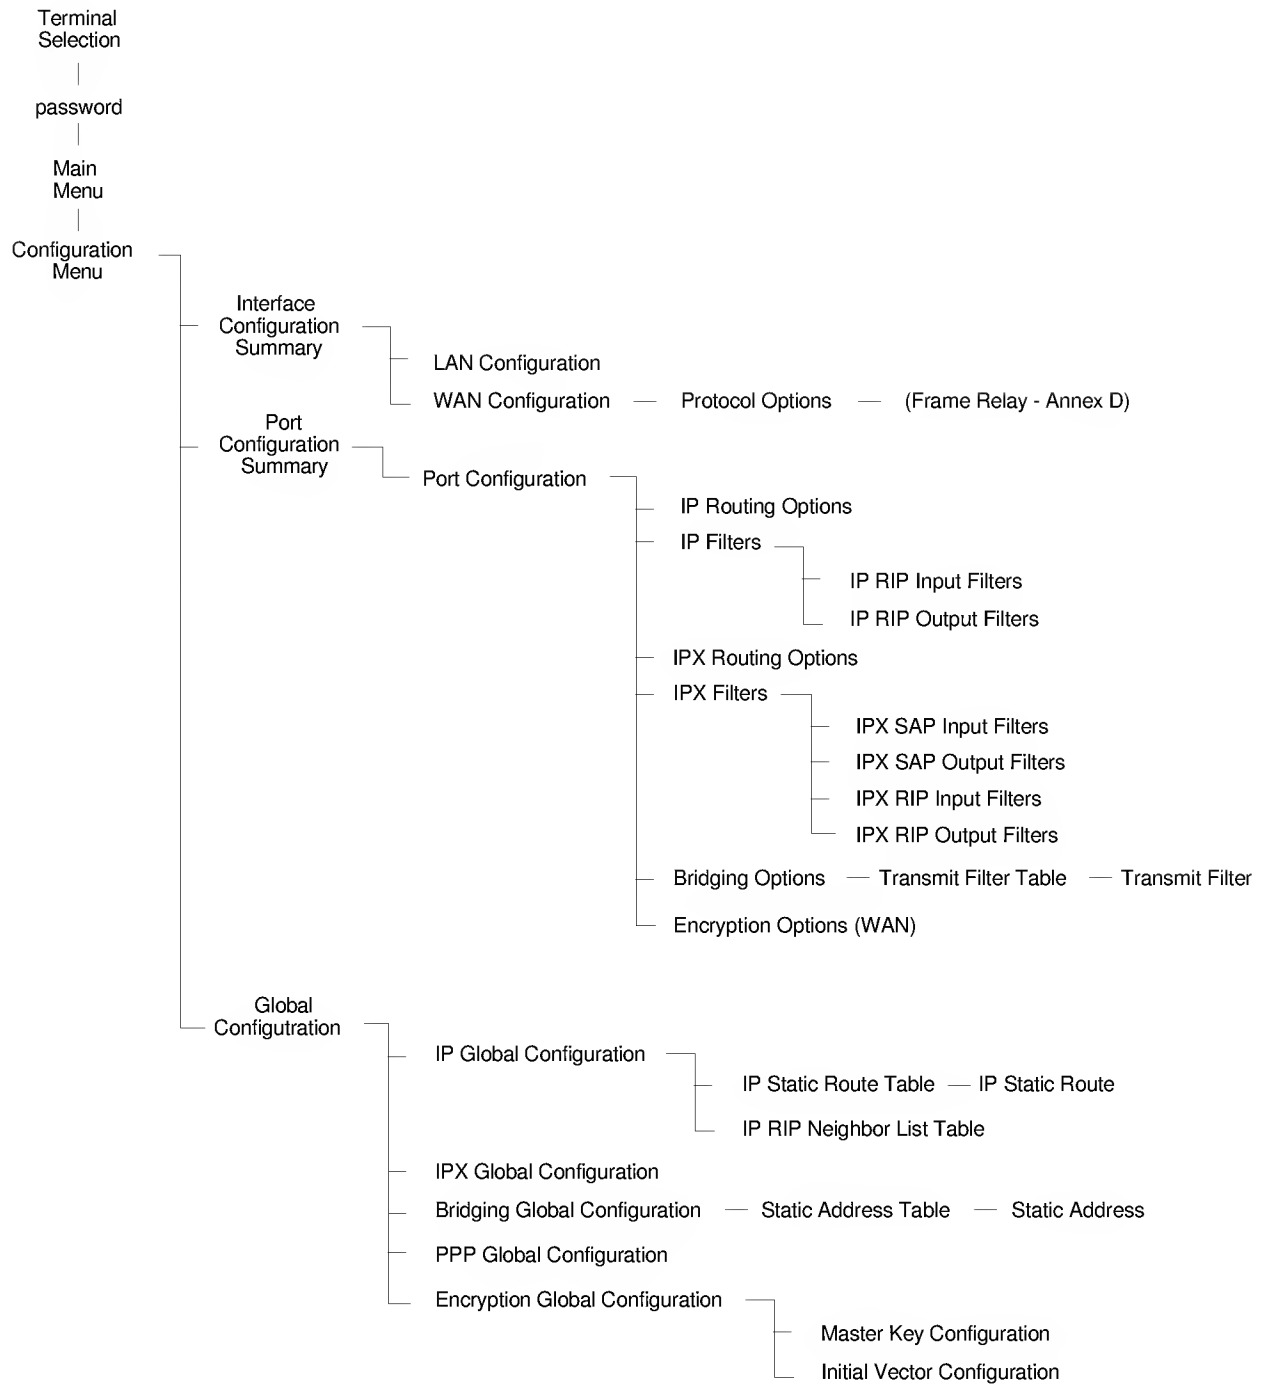

Screen Structure, Configuration

For convenience, the Router Plus T1 Drop & Insert CSU separates configuration parameters into three areas:

- *Interface Configuration*
- *Port Configuration*
- *Global Configuration*

This separation reflects the difference between hardware and software considerations, as follows:

Interface Configuration - applies to the protocol to be used on the physical interface:

- The LAN interface is permanently configured for Ethernet protocol.
- The WAN interface can be configured for either PPP (Point-to-Point) or Frame Relay. Specific connect service protocol options are configured depending on whether PPP or Frame Relay is selected.

Port Configuration - pertains to the router software, and the configuration of routing, bridging, and filtering options. The router can have up to 15 ports (numbered 0 through 14) as follows:

- Port 0 is permanently mapped to the LAN interface.
- If the WAN interface is configured for PPP, Port 1 is mapped to the WAN interface, and the maximum number of ports is 2 (port 0 and port 1).
- If the WAN interface is configured for Frame Relay service, from one to fourteen Permanent Virtual Circuits (PVCs) are mapped to the WAN interface, and the number of ports equals the number of PVCs plus one additional port (Port 0), which is mapped to the LAN interface.

Global Configuration - involves the configuration of parameters that apply to all configured ports; it is not port-specific.

A brief description of each screen follows.

Interface Configuration Summary - view the protocol and condition of the LAN and WAN interfaces. Access the interface-specific screens below.

LAN Configuration - enable/disable the LAN interface; view the local MAC address.

WAN Configuration - enable/disable the WAN interface; access the screens below.

WAN Protocol Options - configure protocol options for the WAN interface (Frame Relay - Annex D only).

Port Configuration Summary - view configuration parameters for all the virtual ports defined on the router; includes port number, name, corresponding interface, protocol, and the type of routing or bridging configured; access the port-specific configuration screens below.

Port Configuration - assign port numbers and corresponding interfaces (WAN only); configure IP, IPX, and bridging options; access IP and IPX Filters screens.

IP Routing Options - configure Internet Protocol options on this port.

IP Filters - configure IP filtering options on this port; access the screens below.

IP RIP Input Filter Table - configure networks that are not allowed to be learned on this port from the routing update packet.

IP RIP Output Filter Table - configure networks that are allowed to be advertised on this port in the routing update packet.

IPX Routing Options - configure IPX options on this port.

IPX Filters - configure IPX filtering options on this port; access the screens below.

IPX SAP Input Filter Table - display services that are not allowed to be learned on this port from Service Advertising Protocol (SAP) routing update packets.

IPX SAP Output Filter Table - display services that are allowed to be advertised on this port in SAP routing update packets.

IPX RIP Input Filter Table - display networks that are not allowed to be learned on this port from IPX Routing Information Protocol (RIP) routing update packets.

IPX RIP Output Filter Table - display networks that are allowed to be advertised on this port in IPX RIP routing update packets.

Bridging Options - enable/disable broadcast, multicast, and filtering options for this port. Access the screen below.

Transmit Filters - configure filtering of specific types of Ethernet frames.

Encryption Options - configure encryption options for the WAN interface.

Global Configuration - access the global configuration screens below.

IP Global Configuration - configure global IP parameters.

IP Static Route Table - view static routes configured on the IP Static Route screen.

IP Static Route - configure a user-defined route to a router or network in the IP Routing Table.

IP RIP Neighbor List Table - view and configure addresses of directly-connected routers (any adjacent router) from which IP RIP update packets will be accepted.

IPX Global Configuration - configure global IPX parameters.

Bridging Global Configuration - configure global bridging parameters. Access the screen below.

Static Address Table - view and delete specific addresses for forwarding or filtering.

Static Address - add or edit an entry in the Static Address Table.

PPP Global Configuration - configure global PPP (Point-to-Point Protocol) parameters.


Encryption Global Configuration - configure the Key Update Time for the Pending Key configured on the port-specific Encryption Configuration screen.

5.2 Configuration Menu

Access the Configuration Menu from the Main Menu. This is the top-level menu from which you select other screens to configure parameters for the LAN and WAN interfaces.


To make a selection:

1. Press the [Space Bar] or [Backspace] to move the cursor to the desired selection.
2. Press [CR]; the selected menu appears.

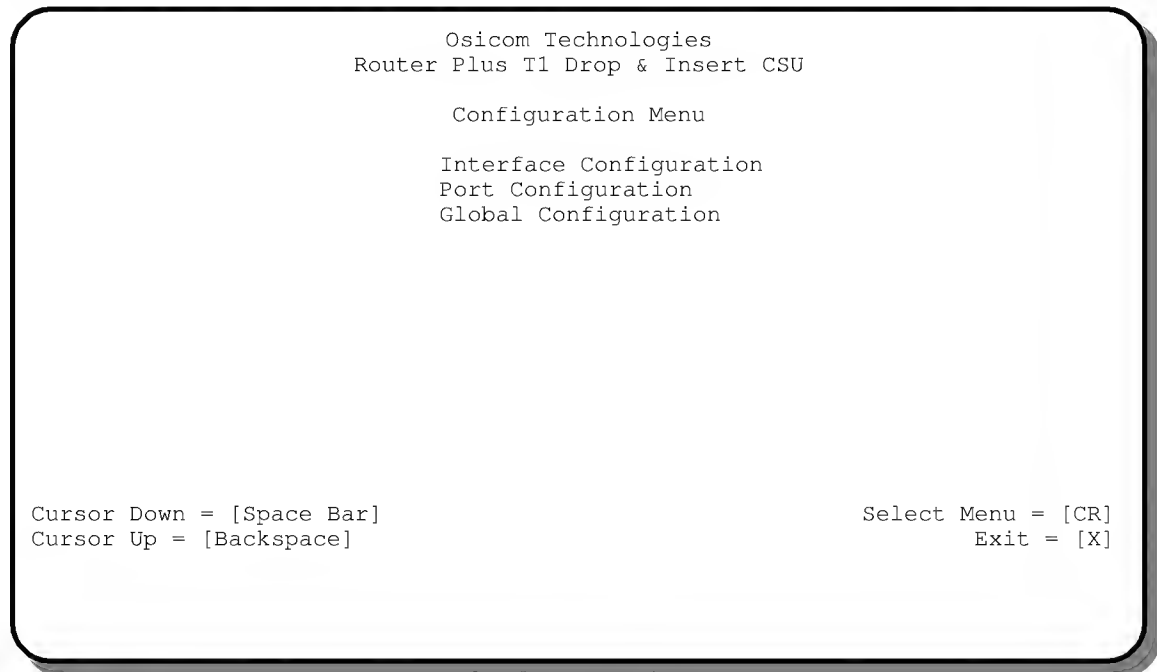


Configuration Menu

Screen Path



5.3 T1 CSU Configuration

Access the T1 CSU Configuration screen to configure parameters for the integral T-1 CSU, including the network and NCTE interfaces. Also access the [Bandwidth Allocation](#) and [Interface Configuration](#) screens.

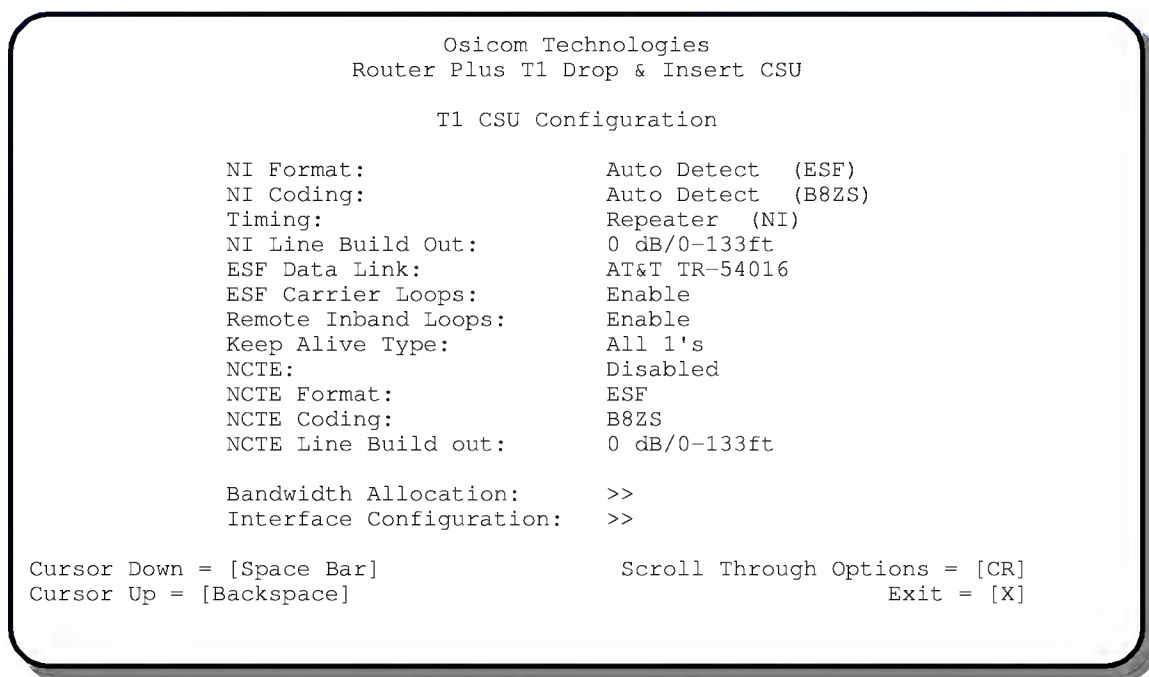

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

T1 CSU Configuration

NI Format:                Auto Detect  (ESF)
NI Coding:               Auto Detect  (B8ZS)
Timing:                  Repeater   (NI)
NI Line Build Out:       0 dB/0-133ft
ESF Data Link:           AT&T TR-54016
ESF Carrier Loops:       Enable
Remote Inband Loops:     Enable
Keep Alive Type:         All 1's
NCTE:                    Disabled
NCTE Format:              ESF
NCTE Coding:              B8ZS
NCTE Line Build out:     0 dB/0-133ft

Bandwidth Allocation:    >>
Interface Configuration: >>

Cursor Down = [Space Bar]      Scroll Through Options = [CR]
Cursor Up   = [Backspace]      Exit = [X]
```

T-1 CSU Configuration Menu

Screen Path

Configuration Menu
CSU Configuration



T1 CSU Configuration

To modify parameters:

1. Position the cursor on the desired parameter.
2. Press [CR] to scroll through the available options.

If you have made any changes to this menu, when you press X to exit, a confirmation box appears:

Confirm this configuration?

No Yes

The default is No. Press [CR] or N if you do not want to save your changes.

If you do want to save the changes, press Y.

NI Format - set the frame format for the network interface (WAN 1).

D4 - AT&T D4 Superframe standard, in which 12 T-1 frames make up a superframe.

ESF - AT&T TR 54016 Extended SuperFrame standard, in which 24 T-1 frames make up an extended superframe.

Auto Detect - automatically detects the type of framing on the line, so when the router is installed, the frame format is configured automatically. This option resets upon:

- power-up
- transition from loss of signal to no loss of signal
- when user selects this option and saves configuration

The frame format detected is displayed in parentheses next to the Auto Detect option.

Default: *Auto Detect*

NOTE

When two units are connected back-to-back, at least one end should be set for D4 or ESF, otherwise the *Auto Detect* feature may not be able to synchronize. Also in back-to-back applications, set one of the units for *Internal* timing.

NI Coding - select the line coding mode and density for the network interface output.

AMI - 62411 - Alternate Mark Inversion; this mode assures that the transmitted data meets bit density requirements specified in AT&T Technical Publication 62411.

Auto Detect - automatically detects the type of coding on the line, so when the router is installed, the NI coding is configured automatically. This option resets upon:

- power-up
- transition from loss of signal to no loss of signal
- when user selects this option and saves configuration

The coding detected is displayed in parentheses next to the Auto Detect option. B8ZS will not be displayed until the B8ZS encoding pattern is received from the network.

B8ZS - Bipolar 8 Zero Substitution; this mode formats the data in such a way that it avoids bit density errors. In B8ZS mode, any data pattern (including an indefinite period of zeroes) can be transmitted without causing bit density errors; this is known as Clear Channel operation.

Default: *Auto Detect*

Timing - set the timing for the WAN interface.

Internal - free-running

Repeater (NI) - always locked to the NI side

Default: *Repeater*

NI Line Build Out - varies the pulse shape and attenuation of the signal sent to the network.

0-133ft/0db 533-655ft

133-266ft 7.5 db

266-399ft 15 db

399-533ft 22.5 db

Default: *0-133ft/0db*

ESF Data Link - determines which data link protocol will be used. Select the protocol that matches the one used by the carrier. Contact your carrier to determine which protocol they are using.

ESF operation provides a 4 kbps data link channel transparent to user data. With ESF, the Telco Central Office can continuously monitor local loops, transmit and receive test messages, and retrieve performance statistics.

Valid input: *AT&T TR-54016* or *ANSI T1.403*

Default: *AT&T TR-54016*

ESF Carrier Loops - determines the CSU's response to Line or Payload Loop commands from the network via ESF data link messages.

Enabled - CSU responds to ESF loop commands from the network.

Disabled - CSU ignores ESF loop commands from the network.

Default: *Enabled*

Remote Inband Loops - determines the CSU's handling of Line Loop Up or Line Loop Down commands. The Telephone Company and a remote CSU can send a bit pattern causing the router to go into a Line Loop.

Enabled - local CSU will transmit and respond to these commands from the network.

Disabled - local CSU will not transmit or respond to these commands. When set to *Disabled*, the Remote NI Loop command at the T1 CSU Status and Test screen cannot be selected.

Default: *Enabled*

Keep Alive Type - a signal sent out the NI side when the NCTE side goes into Rx Red and/or NI Tx Blue alarm; as follows:

Disabled - D4 or ESF frames containing all ones in the data position are generated only in DS0s configured as *NCTE*. This setting also allows trunk processing options to be processed.

Framed Ones - D4 or ESF frames containing all ones in the data positions are generated in all 24 DS0s.

All Ones - An unframed signal of all ones is generated in all 24 DS0s.

Default: *Disabled*

Contact the carrier to determine which keep-alive signal type is required.

IMPORTANT

For trunk processing to operate, set the Keep Alive Type on the T1 CSU Configuration screen to *Disabled*; otherwise, the keep alive signal over-rides the selected trunk processing.

NCTE - enable or disable the NCTE interface.

Default: *Disabled*

NCTE Format - select ESF or D4. (See [NI Format](#) for a description of these options.)

- Default: *ESF*

NCTE Coding - select B8ZS or AMI-62411. (See [NI Coding](#) for a description of these options.)

Default: *B8ZS*

NCTE Line Build Out - varies the pulse shape and attenuation of the signal sent out the NCTE.

0-133ft/0db 533-655ft

133-266ft 7.5 db

266-399ft 15 db

399-533ft 22.5 db

Default: *0-133ft/0db*

5.3.1 Bandwidth Allocation

Use the Bandwidth Allocation menu (below) to assign DS0s to the NI and NCTE interface.

Contact your carrier to ensure that the DS0s you are using match the ones assigned by the carrier.

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Bandwidth Allocation

DS0	Interface	DS0	Interface
1	WAN 1	13	NCTE/A=0 B=0
2	WAN 1	14	Not Used
3	WAN 1	15	Not Used
4	WAN 1	16	Not Used
5	WAN 1	17	Not Used
6	WAN 1	18	Not Used
7	WAN 1	19	Not Used
8	WAN 1	20	Not Used
9	WAN 1	21	Not Used
10	WAN 1	22	Not Used
11	WAN 1	23	Not Used
12	NCTE/A=0 B=0	24	Not Used

Interface Speed: 616k (56k x 11)

Cursor Down = [Space Bar] Scroll Through Options = [CR]
Cursor Up = [Backspace] Exit = [X]

Bandwidth Allocation

Screen Path

Configuration Menu
CSU Configuration



T1 CSU Configuration
Bandwidth Allocation



Bandwidth Allocation

Position the cursor on the desired DS0 # and press [CR] to select:

Not Used - all ones are sent towards the network.

WAN 1 - data is passed between the T-1 line and the assigned DS0s.

<i>NCTE/A=0 B=0</i>	Voice is passed between the NCTE
<i>NCTE/A=0 B=1</i>	interface and the assigned DS0; in
<i>NCTE/A=1 B=0</i>	the event of a Red, Blue, or Yellow
<i>NCTE/A=1 B=1</i>	alarm, frames that have the A and B
	bits set as selected are sent toward
	the NI interface.

Default: *WAN 1* (all 24 DS0s)

The voice selections include trunk processing, which should be selected as follows to fit the application:

Application	Selection
E&M Busy	A=1 B=1
E&M Idle	A=0 B=0
GS and LS FXS Idle	A=0 B=1
GS FXO Busy No TG and Ringing	A=1 B=0
GS FXO Busy Tip Ground	A=0 B=1
GS FXO Busy TG and Ringing	A=0 B=0
GS FXO Idle	A=1 B=1
GS FXS Busy Ring Ground	A=0 B=0
GS FXS Busy Loop Closure	A=1 B=1
LS FXO Busy	A=0 B=0
LS FXO Idle	A=0 B=1
PLAR Busy	A=0 B=0
PLAR Idle	A=1 B=1

IMPORTANT


For trunk processing to operate, set the Keep Alive Type on the T1 CSU Configuration screen to *Disabled*; otherwise, the keep alive signal over-rides the selected trunk processing.

Interface Speed - the speed is determined by the number of DS0s assigned to the WAN 1 interface and the setting of the Data Rate parameter on the Interface Configuration screen (see [Interface Configuration](#)). The speed is automatically calculated as you edit the Bandwidth Allocation table.

In the Bandwidth Allocation screen, note that 11 DS0s are assigned to the WAN 1 interface. Therefore, the Interface Speed is 616k (56k x 11).

5.3.2 Interface Configuration

Use the Interface Configuration screen to set parameters for the T-1 line.

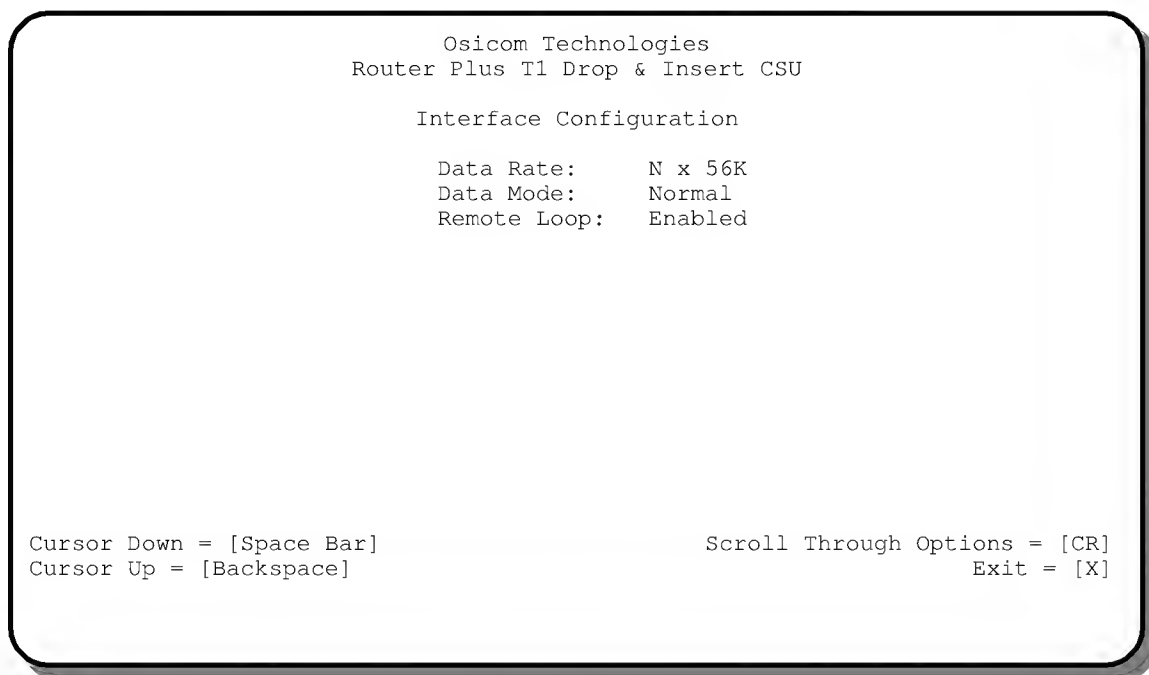

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Interface Configuration

Data Rate: N x 56K
Data Mode: Normal
Remote Loop: Enabled

Cursor Down = [Space Bar] Scroll Through Options = [CR]
Cursor Up = [Backspace] Exit = [X]

Interface Configuration


Screen Path

Configuration Menu
CSU Configuration
↓
T1 CSU Configuration
Interface Configuration
↓
Interface Configuration

To modify parameters:

1. Position the cursor on the desired parameter.
2. Press [CR] to scroll through the available options.

If you have made any changes to this menu, when you press X to exit, a confirmation box appears:

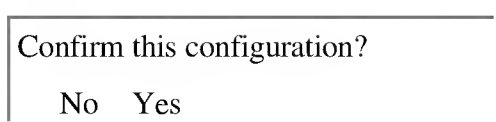

Confirm this configuration?

No Yes

The default is No. Press [CR] or N if you do not want to save your changes. If you do want to save the changes, press Y.

Data Rate - sets the speed of the WAN interface at either a multiple of 56 or 64 kbps.

N x 56K - selecting a multiple of 56 kbps positions user data in the first seven bits of every configured DS0. The eighth bit is forced to a one. This guarantees that the resulting data stream meets ones density requirements.

N x 64K - selecting a multiple of 64 kbps positions user data in all eight bits of every configured DS0. This does not guarantee that the resulting data stream meets ones density requirements.

Default: *N x 56*

NOTE

The **Data Rate** must match the remote CSU. Select *N x 64* only if the line is provisioned for B8ZS or the [Data Mode](#) is set for *Inverted*.

The available speeds in multiples of 56 kbps are:

56k (56k x 01)	504k (56k x 09)	952k (56k x 17)
112k (56k x 02)	560k (56k x 10)	1008k (56k x 18)
168k (56k x 03)	616k (56k x 11)	1064k (56k x 19)
224k (56k x 04)	672k (56k x 12)	1120k (56k x 20)
280k (56k x 05)	728k (56k x 13)	1176k (56k x 21)
336k (56k x 06)	784k (56k x 14)	1232k (56k x 22)
392k (56k x 07)	840k (56k x 15)	1288k (56k x 23)
448k (56k x 08)	896k (56k x 16)	1344k (56k x 24)

The available speeds in multiples of 64 kbps are:

64k (64k x 01)	576k (64k x 09)	1088k (64k x 17)
128k (64k x 02)	640k (64k x 10)	1152k (64k x 18)
192k (64k x 03)	704k (64k x 11)	1216k (64k x 19)
256k (64k x 04)	768k (64k x 12)	1280k (64k x 20)
320k (64k x 05)	832k (64k x 13)	1344k (64k x 21)
384k (64k x 06)	896k (64k x 14)	1408k (64k x 22)
448k (64k x 07)	960k (64k x 15)	1472k (64k x 23)
512k (64k x 08)	1024k (64k x 16)	1536k (64k x 24)

Data Mode - change the data to help meet the one's density requirement. Set this parameter the same at both ends of the network.

- *Normal* - data is not inverted.
- *Inverted* - data is inverted. Inverted data can only be used in transparent networks, which do not interpret user data. Inverted data cannot be used on frame relay networks or any other network that interprets user data.

Long strings of zeros occurring in HDLC protocols can violate one's density. Zero insertion, a characteristic of HDLC protocols, prevents long strings of ones from occurring by inserting a zero after a string of five contiguous ones within a frame. Therefore, selecting Inverted should allow HDLC protocols to run at n x 64 interface speeds without density errors when AMI line coding is used.

Default: *Normal*

Remote Loop - determines interface's response to V.54 loop commands.

Enabled - interface will respond to V.54 loop commands from the remote synchronous channel.


Disabled - interface will not respond to loop commands.

Default: *Enabled*

5.4 Interface Configuration Summary

Access the Interface Configuration Summary screen to view the protocol configuration on the router's LAN and WAN interfaces.

To reconfigure an interface, position the cursor on the desired interface and press [CR]; that interface's configuration screen is displayed.

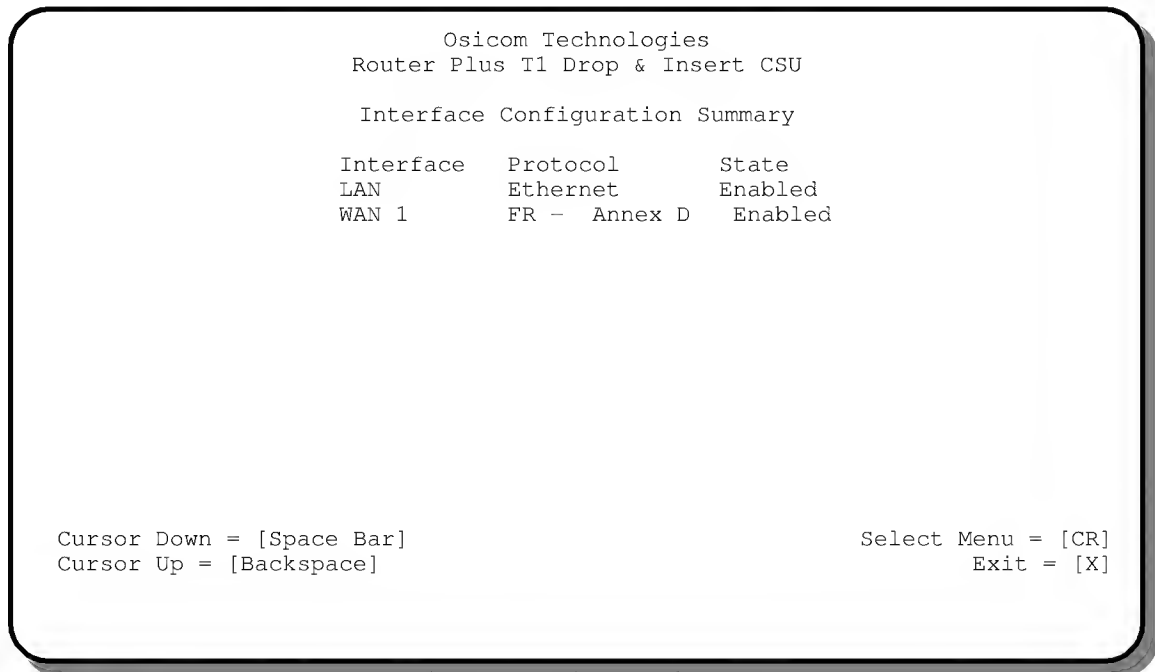


Interface Configuration Summary

Screen Path

Configuration Menu
Interface Configuration
↓
Interface Configuration Summary

5.4.1 LAN Configuration

Access the LAN Configuration screen to enable or disable the Local Area Network (LAN) interface and display the interface protocol and MAC Address. The LAN interface is the rear-panel interface labeled 10BaseT.

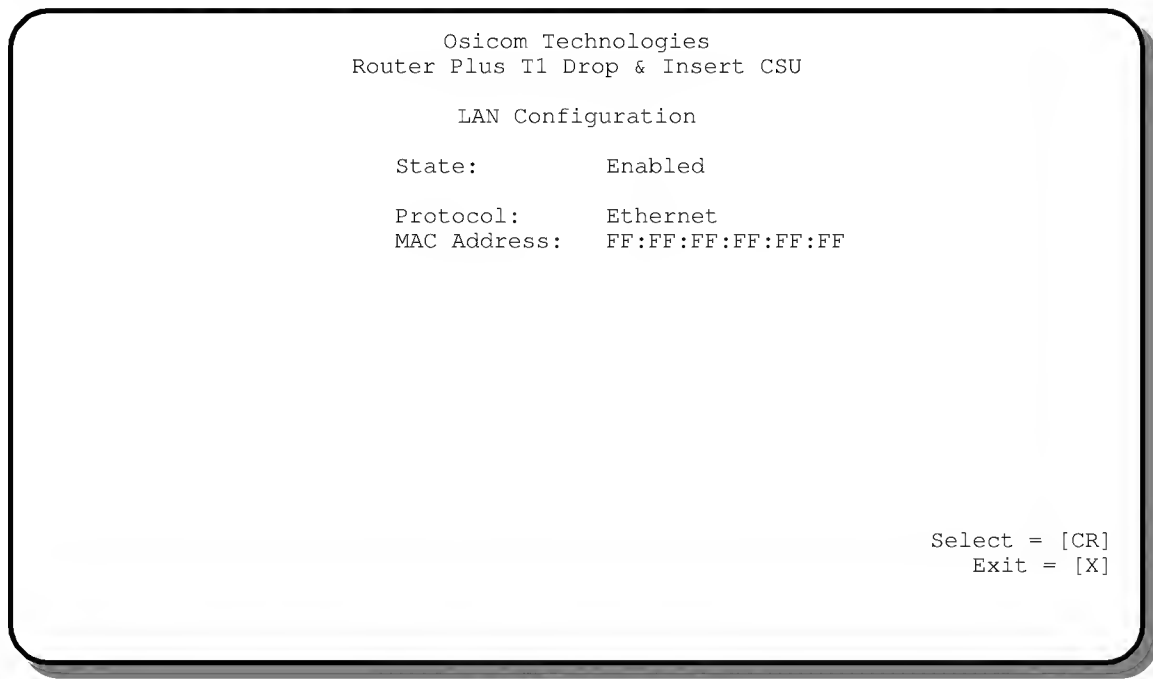

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

LAN Configuration


State:           Enabled

Protocol:        Ethernet
MAC Address:     FF:FF:FF:FF:FF:FF

Select = [CR]
Exit = [X]
```

LAN Configuration

Screen Path

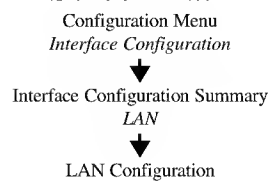

State - enable/disable the LAN interface.

Default: *Enabled*

Protocol - the LAN interface protocol is permanently configured for *Ethernet*.

MAC Address - this read-only field displays the 48-bit hexadecimal Media Access Control (MAC) address. The MAC address is permanently assigned to the LAN interface.


5.4.2 WAN Configuration

Access the WAN 1 Configuration screen to configure the state and protocol of the Wide-Area Network (WAN) interface. The WAN interface is the rear-panel interface labeled WAN 1.

To configure protocol options, position the cursor on Protocol Options and press [CR]; the protocol options screen for the selected protocol is displayed.


NOTE

Protocol Options is displayed only when WAN 1 is configured for Frame Relay - Annex D.

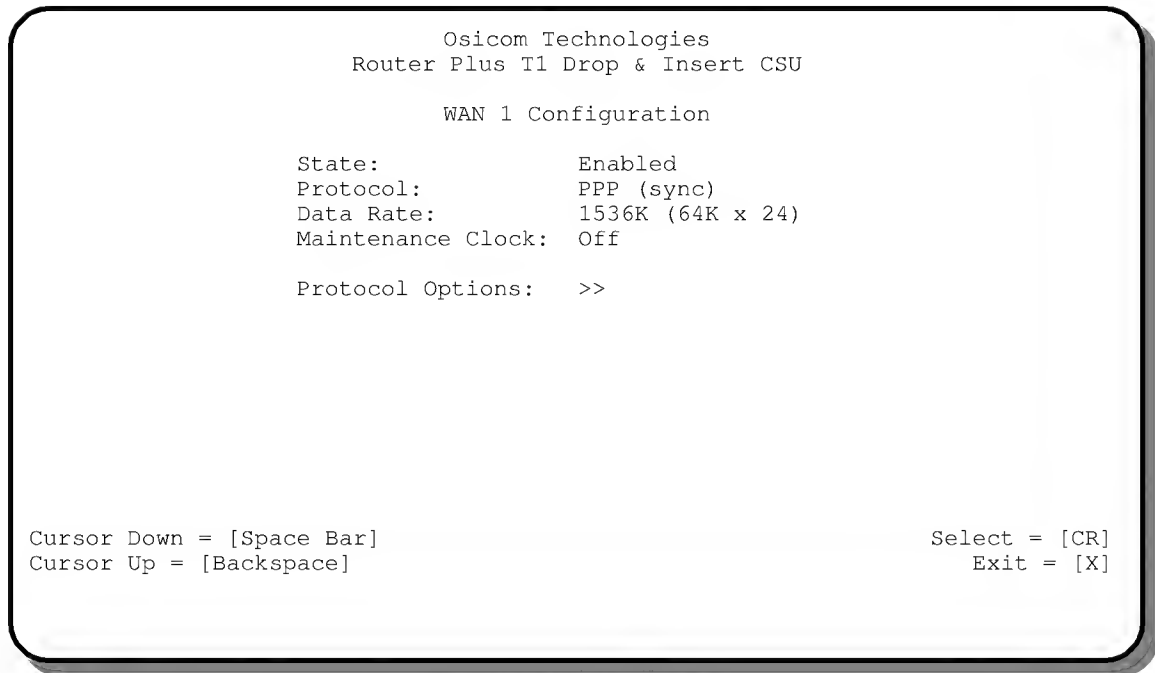

WAN Configuration

Screen Path

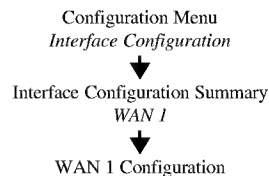

State - enable/disable the WAN 1 interface.

Default: *Enabled*

Protocol - configure the protocol for the WAN 1 interface. Select:

PPP (sync)

Frame Relay - Annex D

Frame Relay - No LMI

The router supports IP Routing, IPX Routing and Transparent Bridging over PPP or Frame Relay.

The PPP LCP RFC1661, IPCP RFC1332, IPXCP RFC1552, and BCP RFC1638 are supported.

The router treats Frame Relay as a series of point-to-point connections. In Numbered mode,

each port must be assigned a unique network or sub network number. RFC1490 and Cisco frame relay encapsulations are supported for IP Routing, IPX Routing, and Transparent Bridging. Osicom's 4802 Bridging Frame Relay encapsulation is also supported.

Inverse ARP is supported to provide compatibility with other vendor's routers that require Inverse ARP.

CRC recalculated mode is used for bridging over PPP and Frame Relay (RFC1490 and Cisco Encapsulation). CRC pass-through is not supported.

PPP (sync) - Point-to-Point Protocol, in accordance with RFC 1548, provides a standard method for transporting multi-protocol datagrams over point-to-point links.

Frame Relay - Annex D - uses the protocol defined by the American National Standards Institute (ANSI) publication *T1.617, Annex D*. Select this option when the WAN interface is connected to a frame relay service.

Frame Relay - No LMI - a Frame Relay protocol without Local Management Interface (LMI). Select this option for back-to-back testing.

NOTE

Frame Relay - No LMI is used primarily for test purposes.

Default: *PPP*

Data Rate - set this to match the speed of the attached CSU. It is required to calculate the Utilization statistics. Select:

64K (64K x 01)	1024K (64K x 16)
128K (64K x 02)	1088K (64K x 17)
192K (64K x 03)	1152K (64K x 18)
256K (64K x 04)	1216K (64K x 19)
320K (64K x 05)	1280K (64K x 20)
384K (64K x 06)	1344K (64K x 21)
448K (64K x 07)	1408K (64K x 22)
512K (64K x 08)	1472K (64K x 23)
576K (64K x 09)	1536K (64K x 24)
640K (64K x 10)	1600K (64K x 25)
704K (64K x 11)	1664K (64K x 26)
768K (64K x 12)	1728K (64K x 27)
832K (64K x 13)	1792K (64K x 28)
896K (64K x 14)	1856K (64K x 29)
960K (64K x 15)	1920K (64K x 30)

Default: *1536K (64K x 24)*

Maintenance Clock - factory test purposes only. Default is *Off*.

5.4.2.1 WAN Protocol Options (Frame Relay)

Access the WAN 1 Protocol Options screen to configure protocol options for the WAN interface. WAN protocol options only apply if the protocol is set for Frame Relay - Annex D.

The counters configured at this screen relate to frame relay polling and polling responses over the WAN link. Normally, these parameters can be left at their recommended default settings. The settings can be increased by a knowledgeable user who wishes to decrease WAN link overhead.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


WAN 1 Protocol Options

Full Enquiry Interval:           6
Error Threshold:                 3
Monitor Events:                  4
Polling Interval:                10 s
Polling Verification Timer Interval: 15 s

Cursor Down = [Space Bar]      Edit Field = [CR]
Cursor Up   = [Backspace]      Exit   = [X]
```

WAN Protocol Options (Frame Relay)

Screen Path

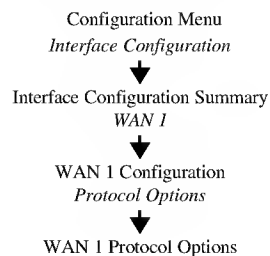

Full Enquiry Interval - the frequency at which the unit requests full status information relative to the number of regular status requests. With the default setting of 6, for example, 1 of every 6 status requests is a request for full status.

Valid range: 1 - 255

Default: 6

Error Threshold - number of either Local In-channel Signaling Link Reliability Errors or Local In-channel Signaling Protocol Errors that can occur during a sliding monitored events count defined by Monitor Events (see following parameter) before a channel or frame relay user device is declared inactive.

The value of this parameter must be less than the value for Monitored Events; entering a higher value is not permitted.

Valid range: *1 - 10*

Default: *3*

Monitor Events - count of monitored events (in number of messages). From the router's perspective, a monitored event is the transmission of a poll for status (see Polling Interval, following).

Monitor Events specifies the size of the sliding window used by the router to determine whether a channel or user device is active. After a channel or user device is declared inactive, the router waits the specified number of successful poll cycles before declaring the channel/user device active again. The user device can also wait the specified number of successful poll cycles to detect service restoration.

The value of this parameter must be greater than the value of the Error Threshold parameter; entering a lower value is not permitted.

Valid range: *2 - 11*

Default: *4*

Polling Interval - the frequency at which the network is polled for status. This setting must be smaller than the setting for Polling Verification Timer Interval; entering a higher value is not permitted.

Valid range: *5 - 30* seconds

Default: *10 s*

Polling Verification Timer Interval - the timer for verifying the polling cycle. This setting must be greater than the setting for Polling Interval; entering a lower value is not permitted.

Valid range: *6 - 31* seconds

Default: *15 s*

5.5 Port Configuration Summary

Access the Port Configuration Summary screen to view information about all the ports configured on the router. The maximum number of ports is 15, (1 for LAN and 14 for WAN 1).

To configure a specific port:

1. Position the cursor on the desired port number and press [CR].
2. The Port Configuration screen for the selected port is displayed.

The contents of the Port Configuration screen for an individual port depends on the protocol selected.

```

                                Osicom Technologies
                                Router Plus T1 Drop & Insert CSU

                                Port Configuration Summary

Port      Port Name              Interface  Protocol  Route/Bridge
0         Local Site              LAN        Ethernet  IP IPX BR
1         Remote Site 1          WAN 1      FR-1000   BR
2         Remote Site 2          WAN 1      FR-1001   IP IPX
3         Remote Site 3          WAN 1      FR-1002   IP
4         Remote Site 4          WAN 1      FR-1003   IP
5         Remote Site 5          WAN 1      FR-1004   IP
6         Remote Site 6          WAN 1      FR-1005   IP
7         Remote Site 7          WAN 1      FR-1006   IP
8         Remote Site 8          WAN 1      FR-1007   IP
9         Remote Site 9          WAN 1      FR-1008   IP
10        Remote Site 11         WAN 1      FR-1009   IP
11        Remote Site 11         WAN 1      FR-1010   IP
12        Remote Site 12         WAN 1      FR-1011   IP
13        Remote Site 13         WAN 1      FR-1012   IP
14        Remote Site 14         WAN 1      FR-1013   IP

Cursor Down = [Space Bar]
Cursor Up   = [Backspace]

                                Select Menu = [CR]
                                Exit       = [X]


```

Port Configuration Summary

Screen Path

Configuration Menu

Port Configuration



Port - displays the port number.

- Port 0 is always the LAN interface (the rear-panel interface labeled 10BaseT).
- If the WAN 1 interface is configured for PPP, Port 1 is mapped to the WAN 1 interface.
- If the WAN 1 interface is configured for Frame Relay, from 1 to 14 Permanent Virtual Circuits (PVCs) can be mapped to the WAN 1 interface.

Port Name - free-text port identifier configured at the Port Configuration screen (see following section).

Interface - interface (LAN or WAN) to which each port is mapped at the Port Configuration screen.

Protocol - the protocol used for the port (Ethernet, PPP, or FR). The protocol for the LAN interface (Port 0) is always Ethernet. The protocol for the WAN interface (ports 1 through 14) is configured at the WAN Interface screen.

If the protocol is either *Frame Relay - Annex D* or *Frame Relay - No LMI*, the unit displays FR followed by the DLCI (Data Link Connection Identifier) for this port. The DLCI is configured at the Port Configuration screen. The default DLCI is 25.

Route/Bridge - the method of routing or bridging that has been enabled at the Port Configuration screen for this port:

IP - IP routing

IPX - IPX Routing

BR - Bridging

5.5.1 Port Configuration

Use the Port Configuration screen to identify the port and to enable or disable the following:

- IP routing
- IPX routing
- Filtering
- Bridging
- Encryption (WAN only)

Configuration options for ports mapped to the LAN and WAN interfaces are identical except for the parameters noted. When Frame Relay is selected for the WAN interface, the additional options noted in the [Port 1 Configuration screen](#) are displayed.

To access any of the options screens, position the cursor on the desired selection and press [CR].

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 0 Configuration


Port Name:          Port 1
Interface:          LAN
IP Routing:         Enabled
IP Routing Options: >>
IP Filters:         >>
IPX Routing:        Disabled
IPX Routing Options: >>
IPX Filters:        >>
Bridging:           Disabled
Bridging Options:   >>

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Edit Field = [CR]
Exit = [X]
```

Port 0 Configuration (LAN)

Screen Path

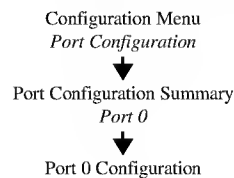

Port Name - a text name for this port.

Valid input: Maximum 24 alphanumeric characters.

Interface - the interface to which this port is mapped.

- Valid input: *LAN*, *WAN 1* or *None*. Selecting *None* blanks out all columns on the Port Configuration Summary screen.
- Default: Port 0 = *LAN*
- Port 1 = *WAN 1*
- Ports 2-14 = *None*

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 Configuration


Port Name:	Port 1
Interface:	WAN 1
IP Routing:	Enabled
IP Routing Options:	>>
IP Filters:	>>
IPX Routing:	Disabled
IPX Routing Options:	>>
IPX Filters	>>
Bridging:	Disabled
Bridging Options:	>>
Port State:	Enabled
DLCI:	25
Encapsulation:	RFC1490
Encryption:	Disabled
Encryption Options:	>>

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Edit Field = [CR]
Exit = [X]

Port 1 Configuration (WAN; Frame Relay)

Screen Path

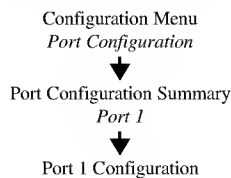

IP Routing - enable/disable IP routing on this port.

Default: *Enabled*

IPX Routing - enable/disable IPX routing on this port.

Default: *Disabled*

Bridging - enable/disable bridging on this port.

Enabled - incoming frames that are not routed are bridged.

Disabled - incoming frames that are not routed are discarded.

Default: *Disabled*

Port State (Frame Relay only) - enable/disable this port.

Default: *Enabled*

DLCI (Frame Relay only) - set the Data Link Connection Identifier for this port (provided by carrier).

Valid range: 0 - 1023

Default: 25

Encapsulation - This option is only displayed if the WAN protocol is set to Frame Relay (No LMI or Annex D).

RFC1490 - the router will receive IP routed, IPX routed, and bridged frames over frame relay in both RFC1490 and Cisco encapsulation. The router automatically changes the transmit encapsulation depending on the encapsulation received. Upon power up or link up, the router will default to transmitting in RFC1490 encapsulation. Upon receipt of a Cisco encapsulated frame, the router will automatically switch to transmitting in the Cisco encapsulation.

RFC4802 - the bridged traffic will be encapsulated in the 4802 format allowing interoperability with older 4802s that do not support RFC1490 encapsulation.

Default: *RFC1490*

Encryption - enable/disable encryption on this port.

NOTE

Encryption and Encryption Options are only displayed when the optional encryption daughter card is installed.

For units that include optional encryption hardware, the Encryption Options screen cannot be accessed and encryption options cannot be configured unless the Key Password is entered at the Password screen. This applies to terminal or Telnet access.

Default: *Disabled*

5.5.1.1 IP Routing Options (LAN)

Access the Port IP Routing Options screen to configure IP routing options for port 0 (LAN).

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 0 IP Routing Options


Address:      192.0.2.1
Subnet Mask:  255.255.255.0
RIP:          RIP v1 Compatible
Metric:       1
Frame Type:   TYPE II

Cursor Down = [Space Bar]
Cursor Up   = [Backspace]

Edit Field = [CR]
Exit       = [X]
```

Port 0 IP Routing Options (LAN)

Screen Path

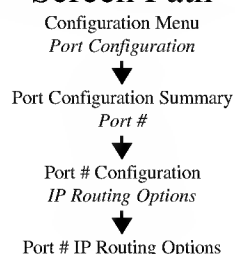

Address - the Internet Protocol (IP) address for this port expressed in dotted decimal notation. All zeros indicate no address defined.

The Address for each port must have an unique network number. The host portion of the Address can not be set to all zeros. The first and the last network address of each address class are reserved. The valid and invalid address are listed below. The user is not allowed to save changes with a duplicate, all zeros, or invalid address. The "Invalid Address" message is displayed if Yes is entered at the save configuration prompt.

NOTES

The default LAN address will allow a defaulted router to be accessed via its LAN or WAN ports. When defaulted, access via the WAN will require the remote router to be configured for **Unnumbered** links.

The default LAN address is only intended to allow initial Telnet access to the router so that it can be configured without attaching a terminal to the console port. The default address is not intended to be used during normal operation

0.0.0.0	reserved
1.0.0.0 - 126.0.0.0	available
127.0.0.0	reserved
128.0.0.0	reserved
128.1.0.0 - 191.254.0.0	available
191.255.0.0	reserved
192.0.0.0	reserved
192.0.1.0 - 223.255.254.0	available
223.255.255.0	reserved
224.0.0.0 - 239.255.255.255	reserved
240.0.0.0 - 255.255.255.254	reserved
255.255.255.255	reserved

Default: LAN = *192.0.2.1*

WAN = *192.0.3.1* (Numbered mode)

Subnet Mask - if IP subnetworking is used, identifies the parts of the IP address that are used for the network, subnetwork, and host numbers.

A mask that is smaller than the default mask value is not permitted but a mask that is larger than default is permitted. The default subnet masks are identified below.

Network Class	Subnet Mask
A	255.0.0.0
B	255.255.0.0
C	255.255.255.0

Default: *255.255.255.0*

Setting the subnet portion of the address to all ones is always allowed, but setting the subnet portion of the address to all zeros is only allowed if the global Subnet Zero option is Enabled. Setting the subnet portion of the address to all ones or all zeros is discouraged.

A subnet of all ones broadcast address is the same as the network broadcast address. For example, the broadcast address for network 130.110.0.0 is 130.110.255.255, which is the same as the broadcast address for subnet 130.110.255.0.

A route for a subnet of all zeros has the same address as a network route. For example, if network 130.110.0.0 is subnetted as 255.255.255.0, the subnet zero route would be 130.110.0.0, which is the same as the network route.

RIP - set Routing Information Protocol as described below. The key feature of RIP version 2 is inclusion of the subnet mask with the routing updates. This allows use of variable length subnet mask (VLSM).

Different ports on the router can use different RIP versions. In this case, the router will perform a conversion between the RIP versions. RIP version 2 should be used throughout a subnetted network if VLSM is used since RIP version 1 cannot interpret VLSM routes correctly.

Osicom's implementation of RIP version 2 does not support authentication.

For both RIP v1 and RIP v2, subnet routes are only advertised on ports that are on the same subnetted network. Subnet routes are hidden or summarized when advertised on a port that is on a different network. Host routes are not supported; any host routes received are discarded.

RIP v1 Only - RIP messages are advertised in the v1 format; only v1 format messages are learned. Broadcast and multicast v2 format messages are not learned.

RIP v1 Compatible - the RFC1058 complaint version of RIP. RIP messages are advertised in the v1 format; v1 format messages and v2 format messages that are broadcast are learned. V2 format messages that are multicast are not learned.

RIP v2 Compatible - RIP messages are advertised via broadcast messages in the v2 format. RIP v1 format messages, v2 format messages that are broadcast, and v2 format messages that are multicast are learned.

RIP v2 Only - RIP messages are advertised via multicast messages in the v2 format, and v2 format messages that are multicast are learned. V1 format messages and v2 format messages that are broadcast are not learned.

Disabled - RIP messages are not advertised or learned on this port.

Default: *RIP v1 Compatible*

Metric - sets the weight (number of hops) associated with this port. This determines the number of hops to enter in the IP Routing Table for the direct entry associated with this port. The metric value is added to the value received in the RIP message and the sum is placed in the IP routing packet for each route learned on this port.

Valid input: *1 to 30*

Default: *1*

Frame Type (LAN only) - the MAC layer frame encapsulation to be used for IP transmissions out the specified port. SNAP is used very seldom since the native frame type for IP is Type II.

Valid input: *Type II or SNAP* (see table below)

Default: *Type II*

Frame Type	MTU
TYPE II	1500
SNAP	1492

5.5.1.2 IP Routing Options (WAN)

Access the Port IP Routing Options screen to configure IP routing options for the WAN interface.

See [Port IP Routing Options](#) for the LAN in the previous section for parameters not defined here.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


Port 1 IP Routing Options

Mode:                               Unnumbered
Address:
Subnet Mask:
Remote Address:                     0.0.0.0
Remote Subnet Mask:                 255.255.255.255
RIP:                               RIP v1 Compatible
Metric:                             1
MTU:                                1500
Inverse ARP:

Cursor Down = [Space Bar]           Edit Field =
[CR]
```

Port 1 IP Routing Options (WAN)

Screen Path

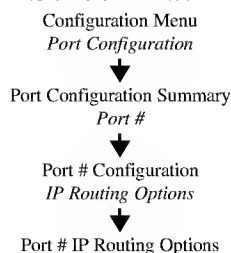

Mode - set the operating mode for this port.

Numbered - an IP address must be assigned to this port.

Unnumbered - no IP network or subnetwork numbers are assigned to the WAN interface. Besides conserving IP address space, Unnumbered mode also decreases the size of the routing table since no direct routes are created for the WAN ports. This reduces the amount of memory required to hold the routing table and also decreases the amount of bandwidth used to send routing updates.

When the mode is changed from Unnumbered to Numbered, the Address and Subnet mask values are displayed. The default value for Port 1 is 192.0.3.1 (255.255.255.0). The default value for Port 2 and greater is 0.0.0.0 255.255.255.0. A direct route for Port 2 and greater is not created until a valid address and subnet mask is entered.

Address and Subnet Mask - the Address and Subnet Mask values are only displayed if the mode is *Numbered*. When the mode is *Unnumbered*, the Address and Subnet mask values are blanked out. A direct route for Port 2 and greater is not created until a valid address and subnet mask is entered. Valid values for the address and subnet mask are the same as those defined for port 0.

Defaults:

Port 1: Address - 192.0.3.1

Subnet Mask - 255.255.255.0

Port 2 and greater: Address - 0.0.0.0

Subnet mask - 255.255.255.0

Remote Address - determines which subnets should be advertised and learned on this port. Enter the address of the remote router's LAN port (the remote router ID). The Remote Address value is only displayed if the mode is *Unnumbered*. When the mode is *Numbered*, the Address value is blanked out. This option only needs to be configured if subnet routes need to be advertised across an unnumbered link. When left at the default value, all subnet routes will be summarized – only the parent network address of IP subnets are advertised.

Default: 0.0.0.0

Remote Subnet Mask - use this option in conjunction with the Remote Address option to determine which subnets should be advertised and learned on this port. Enter the subnet mask of the remote router's LAN port. The Remote Subnet Mask value is only displayed if the mode is *Unnumbered* and RIP is set to *RIP v1 Only*, *RIP v1 Compatible*, or *RIPv2 Compatible*. When the mode is *Numbered* or the mode is *Unnumbered* and RIP is *RIP v2 Only*, then the Remote Subnet Mask value is blanked out.

Default: 255.255.255.0

MTU (Maximum Transmission Units) (WAN only) - the maximum permitted size, in bytes, of IP frames to be transmitted out the WAN interface. The MTU includes the size of the IP header and IP data fields.

Valid input: 296, 576, 1492, 1500

Default: 1500

Inverse ARP (WAN only) - applies only if the Protocol is set to Frame Relay (see WAN Configuration screen) and the Mode is *Numbered*. When the Mode is *Unnumbered*, the Inverse ARP choice is blanked out. This option is provided to interoperate with other vendors that treat Frame Relay as a non-broadcast multi-access (NBMA) interface.

Routers that treat an interface configured for Frame Relay as an NBMA interface can use Inverse ARP to learn the IP address of the remote router associated with a DLCI. These routers usually have the ability to use static mapping instead of Inverse ARP. Enable this option if the remote router requires Inverse ARP. NBMA with Inverse ARP is the default on Cisco routers.

Inverse ARP is not needed by the Routermate Router since it treats Frame Relay as a series of point-to-point connections.

Enabled - the router will send and respond to Inverse ARP requests as defined in RFC 1293.

Disabled - the unit ignores Inverse ARP requests and does not send Inverse ARP requests.

Default: *Disabled*

5.5.1.3 IP Filters

If IP Filters are enabled for a port, use the Port IP Filters screen to enable or disable specific types of filters for that port. In an IP environment, the IP Routing Information Protocol (RIP) exchanges routing information with other routers. IP filters can be used to reduce the amount of IP routing traffic on the WAN link, and to restrict access between certain networks.

The screen is the same for LAN and WAN ports.

To access the Filter Tables listed on the screen, position the cursor on the desired selection and press [CR].


```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 0 IP Filters
Announce Static Routes:      Enabled
Announce Default Route:     Enabled
Learn Default Route:        Enabled
Learned Default Route Minimum Value: 1
RIP Listen Only:            Disabled
RIP Input Filter:           Disabled
RIP Input Filter Table:     >>
RIP Output Filter:          Disabled
RIP Output Filter Table:    >>
BootP Relay:                Disabled

Cursor Down = [Space Bar]          Select = [CR]
Cursor Up = [Backspace]           Exit = [X]
```

IP Filters

Screen Path

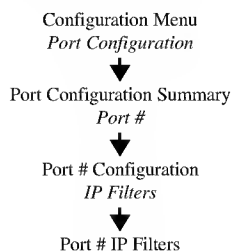

Announce Static Routes - enable/disable port's ability to advertise user-defined IP routes out the specified port.

Enabled - port advertises IP static routes.

Disabled - port does not advertise IP static routes.

Default: *Enabled*

Announce Default Route - enable/disable port's ability to advertise the default route out the specified port.

Enabled - port advertises the default route.

Disabled - port does not advertise the default route.

Default: *Enabled*

Learn Default Route - enable/disable port's ability to learn the default route on the specified port.

Enabled - port learns the default route.

Disabled - prevents the default route from being learned on this port.

Learned Default Route Minimum Value - allows the user to set a minimum default route metric. When a default route is learned, the metric placed in the routing table will be the larger of the learned metric and the Learned Default Route Minimum Value.

Valid range: 1-14.

Default: 1

RIP Listen Only - determines port's handling of RIP messages.

Enabled - port learns routes, but routes are not advertised on this port.

Disabled - routes are learned and advertised on this port.

Default: *Disabled*

RIP Input Filter - filters received RIP messages.

Negative - RIP entries that match a filter are discarded; all others are passed.

Disabled - RIP entries are not filtered.

Default: *Disabled*

RIP Output Filter - filters transmitted RIP messages.

Positive - RIP entries that match a filter are passed; all others are discarded.

Disabled - RIP entries are not filtered.

Default: *Disabled*

BootP Relay - the router listens for BootP request on UDP port number 67 on ports with the *BootP Relay* option enabled. Any BootP request received from the client will be forwarded out all ports with the *BootP Relay* option enabled except for the port the BootP request was received on. For a client to access a remote BootP server, the *BootP Relay* option must be enabled on all of the ports in the path between the client and the server including the ports that the client and server are attached to. See RFC951 and RFC1542 for more details.

Enabled - BootP Relay process allowed.

Disabled - BootP Relay process prevented.

5.5.1.3.1 IP RIP Input/Output Filters

The Port IP RIP Input and Output Filter Table screens are identical (except for the screen name). IP addresses configured for each table are handled differently, as described below:

The Input Filter Table is also called the *Reject List*. If RIP input filters are enabled, use this screen to specify the IP address of networks that are not allowed to be learned on this port from the routing update packet.

The Output Filter Table is also called the *Advertise List*. If RIP output filters are enabled, use this screen to specify the IP address of networks that are allowed to be advertised over this port. Only the addresses listed in the table are advertised over this port.

Address range: 0.0.0.0 to 255.255.255.255

Default: *Blank*

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


Port 0 IP RIP Input (Output) Filter Table

1. 255.255.255.255    16. 255.255.255.255
2.
3.
4.
5.
6.
7.
8.
9.
10.
11.
12.
13.
14.
15.
16.
17.
18.
19.
20.
21.
22.
23.
24.
25.
26.
27.
28.
29.
30.

Cursor Down = [Space Bar]      Add/Edit Entry = [CR]
Cursor Up = [Backspace]        Delete = [D]           Exit = [X]
```

Port IP RIP Input (Output) Filter Table

Screen Path

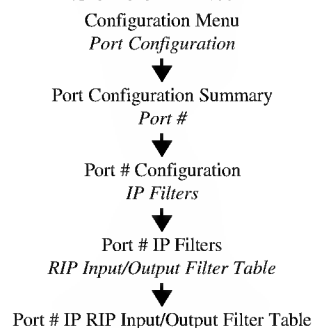

To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR].
2. Edit/configure the address. Press [CR] again to de-select.

5.5.1.4 IPX Routing Options

Access the Port IPX Routing Options screen to configure IPX routing options for the LAN and WAN interfaces. IPX routing options for ports mapped to the LAN and WAN interfaces are identical except for the parameters noted.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


Port 0 IPX Routing Options

IPX Network Number:      00000000
Frame Type:              802.2
Transport Time:          1  ticks
Periodic RIP Timer:      60  s
RIP Age Timer:           180  s
Periodic SAP Timer:      60  s
SAP Age Timer:           180  s

Cursor Down = [Space Bar]      Edit Field = [CR]
Cursor Up   = [Backspace]      Exit     = [X]
```

Port 0 IPX Routing Options (LAN)

Screen Path

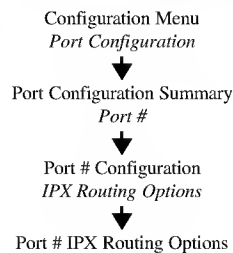

IPX Network Number - the IPX network number for the this port. Each port must have a unique network number. When the Mode is changed from Unnumbered to Numbered the default value of all zeros is displayed. The user is not allowed to save changes with a duplicate or all zeros number displayed. An “Invalid Network Number” message is displayed if Yes is entered at the *save configuration* prompt.

Valid input: 32-bit hex range *00000001* to *FFFFFFFFFE*. All zeros indicate no address defined.

Default: *00000000*

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 IPX Routing Options

Mode:	Unnumbered
IPX Network Number:	
IPXWAN:	Disabled
Transport Time:	5 ticks
Periodic RIP Timer:	60 s
RIP Age Timer:	180 s
Periodic SAP Timer:	60 s
SAP Age Timer:	180 s
Inverse ARP:	

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Edit Field = [CR]
Exit = [X]

Port 1 IPX Routing Options (WAN)

Frame Type (LAN only) - the frame type to be used for IPX transmissions out the LAN interface. Select the option to match the frame type that is used by the Novell servers and clients on the LAN you are connected to. Novell servers and clients support four different types of ethernet encapsulation (frame type). The default value that a server and client use is different for various software revisions. Selecting the wrong frame type is a common IPX configuration error and will prevent the Routermate Plus from communicating with Novell servers and clients. The Routermate Plus will only route the frame type selected. All other frame types will be bridged (if bridging is enabled).

Valid input: *Type II*, 802.3 (RAW), 802.2 (LLC), or SNAP

Default: 802.2

Mode (WAN only) - set the operating mode for this port.

Numbered - an IPX network number is assigned to this port.

Unnumbered - an IPX Network Number is not assigned to this port; the IPX Network Number option is blanked out.

Unnumbered mode decreases the size of the routing table since no direct routes are created for the WAN ports. This reduces the amount of memory required to hold the routing table and also decreases the amount of bandwidth used to send routing updates.

IPXWAN (WAN only) - a protocol developed by Novell and specified in RFC1634. The purpose of IPXWAN is to provide a common way of exchanging router to router information across different type of wide area links. RFC1634 describes how Novell IPX operates over various WAN media using the IPXWAN protocol.

Support for IPXWAN is only provided to allow the router to be compatible with Novell routers. It is not required to route IPX and should be disabled unless it is required.

NOTE

IPXWAN must be set to the same value on both ends of a connection. If it is not set to the same value, then the router will not be able to communicate across the link.

Default: *Disabled*

Transport Time - sets the weight (in time ticks) associated with this port. This determines the delay entered in the IPX Routing Table for the direct route associated with this port. The Transport Time value is added to the value shown in the IPX Routing Table for each route advertised on this port. Set the Transport Time to the estimated amount of time to send a 576-byte packet on this port. For interfaces with more than 1Mbps of bandwidth, set the Transport Time to 1 tick.

There are 18.21 time ticks in a second, so a time tick equals approximately 1/18 second or 55 ms.

Valid input: *1 to 255 ticks*

Default: *1 tick*

Periodic RIP Timer - the time interval between periodic IPX RIP broadcasts transmitted out the specified virtual IPX port.

Valid input: *30 to 999 seconds*

Default: *60 s*

RIP Age Timer - the maximum time between RIP update messages before a route that was learned (i.e., that was added to the IPX Routing Table as the result of an IPX RIP update message) is removed from the IPX Routing Table. If an update message is received for an address, the internal aging count reverts to zero. If no update message is received by the time configured for the RIP Age Timer, the route is removed from the IPX Routing Table.

Valid input: *30 to 9999 seconds*

Default: *180 s*

Periodic SAP Timer - the time interval between periodic IPX SAP broadcasts transmitted out the specified virtual IPX port.

Valid input: *30 to 999 seconds*

Default: *60 s*

SAP Age Timer - the maximum time between SAP update messages before the server that was learned (i.e., that was added to the IPX Services Table as the result of an IPX SAP update message) is removed from the IPX Services Table. If an update message is received for a service, the aging count for that server reverts to zero. If no update message is received by the time configured for this timer, the server is removed from the IPX Services Table.

Valid input: *30 to 9999 seconds*

Default: *180 s*

Inverse ARP (WAN only) - applies only if the Protocol is set to Frame Relay (see WAN Configuration screen) and the Mode is *Numbered*. When the Mode is *Unnumbered*, the Inverse ARP choice is blanked out. This option is provided to interoperate with other vendors that treat Frame Relay as a non-broadcast multi-access (NBMA) interface.

Routers that treat an interface configured for Frame Relay as an NBMA interface can use Inverse ARP to learn the IPX address of the remote router associated with a DLCI. These routers usually have the ability to use static mapping instead of Inverse ARP. Enable this option if the remote router requires Inverse ARP. NBMA with Inverse ARP is the default on Cisco routers.

Inverse ARP is not needed by the Routermate Router since it treats Frame Relay as a series of point-to-point connections.

Enabled - the router will send and respond to Inverse ARP requests as defined in RFC 1293.


Disabled - the unit ignores Inverse ARP requests and does not send Inverse ARP requests.

Default: *Disabled*

5.5.1.5 IPX Filters


Access the Port IPX Filters screen to configure IPX filters, and to access configuration screens for enabled filters. Use IPX filters to reduce the amount of IPX routing traffic on the LAN or WAN link, and to restrict access between certain networks.

To display the filter tables listed in the screen, move the cursor to the desired selection and press [CR].

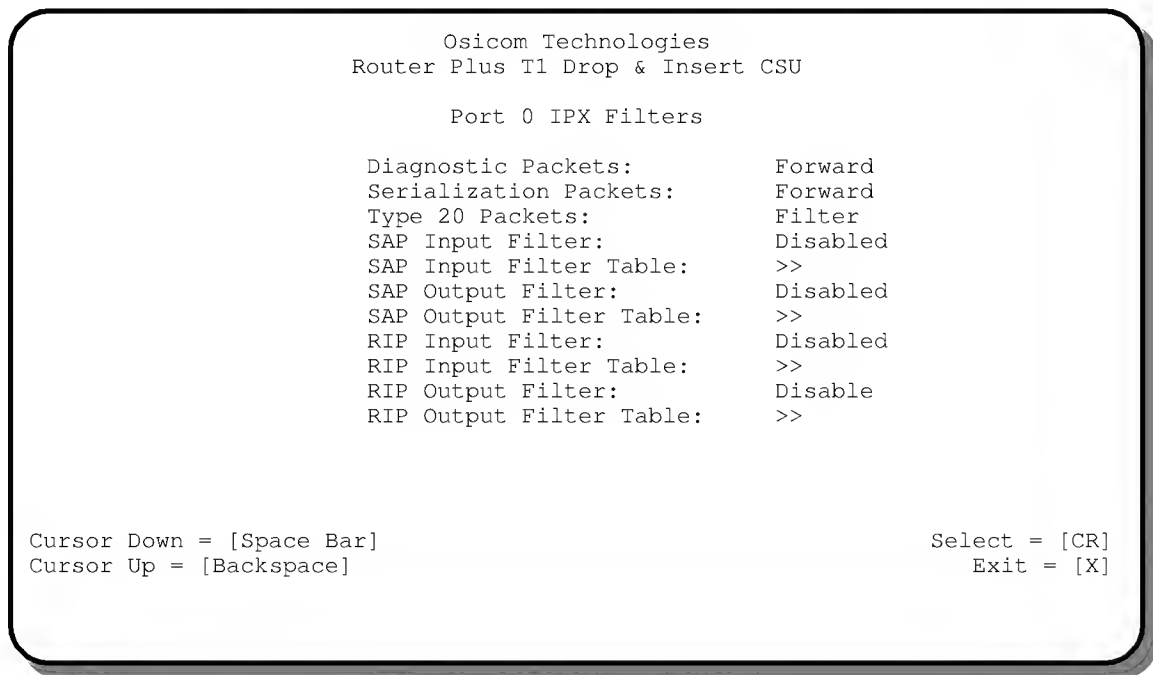

Port 0 IPX Filters (LAN)

Screen Path

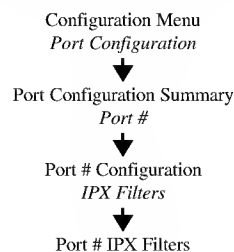

Diagnostic Packets (LAN only) - filter for diagnostic packets on the specified virtual IPX port.

Forward - the port will pass the diagnostic packet.

Filter - packets with a destination socket number of 456 are filtered at the receiving port.

Default: *Forward*

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 1 IPX Filters


Type 20 Packets:	Filter
Watchdog Packets:	Forward
SAP Input Filter:	Disabled
SAP Input Filter Table:	>>
SAP Output Filter:	Disabled
SAP Output Filter Table:	>>
RIP Input Filter:	Disabled
RIP Input Filter Table:	>>
RIP Output Filter:	Disabled
RIP Output Filter Table:	>>

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Select = [CR]
Exit = [X]

Port 1 IPX Filters (WAN)

Screen Path

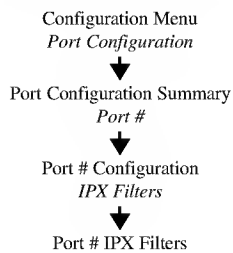

Serialization Packets (LAN only) - a filter for Novell serialization security packets on the specified virtual IPX port. Novell Netware File Servers broadcast security packets that contain serialization information regarding the license of the file server executable. Serialization packets consume valuable bandwidth over a low-speed serial WAN link. Disabling the broadcast of serialization packets reduces WAN traffic. Disabling serialization packets is not intended to interfere with copyright protection mechanisms.

Forward - the port will pass serialization packets.

Filter - packets with a destination socket number of 457 are filtered at the receiving port.

Default: *Forward*

Type 20 Packets - these packets are used to propagate broadcast messages using different protocol through the IPX network. The most common use is NetBIOS encapsulated in IPX.

Broadcast - Type 20 packets received on this port will be broadcast out all other ports with IPX Routing enabled and the Type 20 Packets option set to *Broadcast*.

Filter - disables the processing of Type 20 packets.

Default: *Filter*

Watchdog Packets (WAN only) - the method of Novell File Server "Keep-Alive" Watchdog Spoofing. When a Netware workstation logs into a Novell server, the server issues periodic Keep-Alive messages to the client in order to determine if the workstation is active. The Keep-Alives can consume considerable bandwidth on low-speed serial links. Watchdog packets received on the LAN that are to be forwarded across a WAN port with watchdog spoofing enabled are spoofed.

Spoofed - this option is enabled.

Forward - watchdog packets are not spoofed.

Default: *Forward*

SAP and RIP Input Filters - applied to RIP and SAP update messages received by a port. The filters control what is entered in the IPX SAP and RIP tables.

SAP and RIP Output Filters - applied to RIP and SAP update messages transmitted by a port. The filters control what is advertised on the specified port.

Positive Filter - SAP/RIP entries that match a filter entry are passed; all others are discarded.

Negative Filter - SAP/RIP entries that match a filter entry are discarded; all others are passed.

Disabled - the filter table is not used.

Default: *Disabled*


5.5.1.5.1 IPX SAP Input/Output Filters

Both the Port IPX SAP Input Filter Table and the Port IPX SAP Output Filter Table are shown below. The two tables are identical in appearance. Input filters are applied to SAP or RIP entries received by a port; they control what is entered in the local routers SAP or RIP tables. Output filters are applied to SAP or RIP entries transmitted by a port; they control what is advertised by the local router.

Osicom Technologies Router Plus T1 Drop & Insert CSU						
Port 1 IPX SAP Input (Output) Filter Table - Page 1						
Filter State	Network Address	Filter Mask	Node Address	Server Type	Server Name	
1. Enabled	E0100000	FFFFFFF	08000E000123	A027	Server 1	
2. Enabled	00000000	FFFF0000		1027	Server 2	
3. Disabled	10100000	FFFFFFF	08000E000101	2027	12345678901234567890	
4. Enabled	E0100000	FFFFFFF		3000		
5. Enabled	20100000	FFFFFFF				
6. Enabled				1027	Server 3	
7.						
8.						
9.						
10.						
11.						
12.						
13.						
14.						
Cursor Down = [Space Bar]			Delete = [D]		Select Menu = [CR]	
Cursor Up = [Backspace]			Page = [+] [-]		Exit = [X]	

Port 1 IPX SAP Input (Output) Filter Table

Screen Path

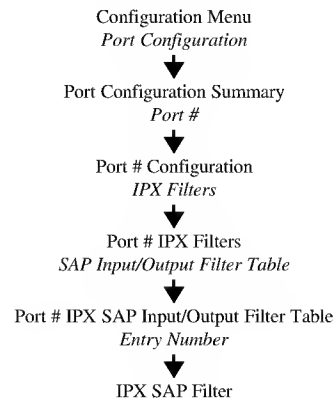

The IPX Service Advertising Protocol (SAP) lets IPX advertise Novell IPX services offered by such devices as file servers (file transfer), printer servers (print service), and gateways (protocol conversion). SAP filters can be used to filter SAP update packets.

To access the tables, select either SAP Input Filter Table or SAP Output Filter Table at the Port IPX Filters screen.

The maximum number of entries for each table is 28. If more than 14 entries are configured, press [+] or [-] to toggle between pages 1 and 2.

To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR]; the IPX SAP Input (or Output) Filter screen is displayed.

```

                                Osicom Technologies
                                Router Plus T1 Drop & Insert CSU

                                Port 1 IPX SAP Input (Output) Filter

Filter State:      Enabled
Network Address:   00000000
Filter Mask:       FFFFFFFF
Node Address:      000000000000
Server Type:       0000
Server Name:       12345678901234567890123456789012345678

Cursor Down = [Space Bar]
Cursor Up = [Backspace]
Select = [CR]
Exit = [X]
```

Port 1 IPX SAP Input (Output) Filter

2. At the Filter screen, move the cursor to the desired field and press [CR] to select the field.
3. Configure each parameter as required.
4. Press [X] to return to the Filter Table.

To delete an entry, position the cursor on it and press [D].

All filter options are taken into account when filtering. The user can configure any combination of the filter options or all of the options.

Setting the Network Address, Filter Mask, Node Address, Server Type, and Server Name to their default value indicates no table entry. Setting any one of these options to a non-default value causes an entry in the filter table.

Saving an entry with all default values does not cause an entry to be placed in the table.

Don't care fields can be configured in an entry, as follows:

- Saving an entry with a network address of all zeroes and a filter mask of FFFFFFFF causes these fields to be blank in the SAP Filter Table, and indicates that the network address is not tested by a filter.
- Saving an entry with all zeroes for the service type or node address causes these fields to be blank in the SAP Filter Table, and these fields are not tested by a filter.
- If the server name is blank, the server name is not tested by a filter.

Filter State - enable/disable the filter.

Default: *Enabled*

Network Address - IPX network number for the router's interface (must match the network number of the Novell device's interface to which it is attached).

Valid input: 32-bit hex range *00000000* to *FFFFFFFE*.

Default: *00000000*; indicates no network address configured.

Filter Mask - used in a logical 'AND' with the network address to determine which part of the network address should be considered. For example, configuring a network address of ABCD0000 and a filter mask of FFFF0000 causes the filter to be applied to addresses ABCD0000 through ABCDFFFF. Configuring a network address of 00000000 and a filter mask of FFFF0000 causes the filter to be applied to addresses 00000001 through 0000FFFF.

Valid input: 32-bit hex range *00000001* to *FFFFFFFF*

Default: *FFFFFFFF*

Node Address - the end-station node address assigned to the router. The node address is assigned the same value as the MAC address. This address must match one of the addresses assigned to the router interfaces. When a node address is specified, the filter is applied against the specified network address, or against all networks if the network address is set to all zeros.

Valid input: 48-bit hex range *000000000000* to *FFFFFFFFFFFF*

Default: *000000000000*; no node address configured.

Server Type - the type of service provided by the server.

See the table of [commonly-used service types](#).

Valid input: 16-bit hex range *0000* to *FFFF*

Default: *0000*; no server type configured

Server Name - the text name for the server that is distributed to other IPX services via SAP messages.

Valid input: Up to 48 alphanumeric characters. A shortened form of the server name is displayed on the SAP Filter Table.

Default: *Blank*

Selected IPX Services	
SERVICE	SERVER TYPE
User	1
User Group	2
Print Queue	3
File Server	4
Job Server	5
Gateway	6
Print Server	7
Archive Queue	8
Archive Server	9
Job Queue	A
Administration	B
Remote Bridge Server 2	24
Bridge Server	26
TCP/IP Gateway	27
Archive Server SAP	2e
Advertising Print Server	47
Print Queue User	53
HP Laserjet	30c
Wildcard	FFFF


5.5.1.5.2 IPX RIP Input/Output Filters

The screen below illustrates the filter table for both IPX RIP input and output filters. The screens for input and output filters are the same except for the screen name.

Osicom Technologies Router Plus T1 Drop & Insert CSU		
Port 1 IPX RIP Input (Output) Filter Table - Page 1		
Filter State	Network Address	Filter Mask
1. Enabled	E0100000	FFFFFFFF
2. Enabled	00000000	FFFFFFFF
3. Disabled	10100000	FFFFFFFF
4. Enabled	E0100000	FFFFFFFF
5. Enabled	20100000	FFFFFFFF
6.		
7.		
8.		
9.		
10.		
11.		
12.		
13.		
14.		
15.		
Cursor Down = [Space Bar]	Delete = [D]	Select Menu = [CR]
Cursor Up = [Backspace]	Page = [+] [-]	Exit = [X]

Port 1 IPX RIP Input (Output) Filter Table

Screen Path

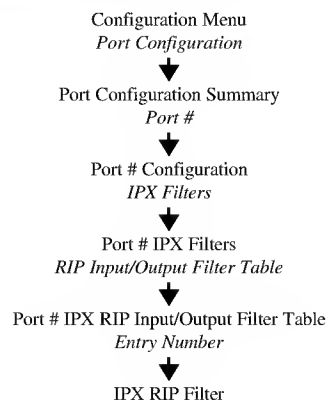

The configuration and operation of the IPX RIP Filters is similar to the IPX SAP Filters described in the previous section except the fields that can be filtered are different.

Routers in an IPX environment use the IPX Routing Information Protocol (RIP) to exchange routing information. IPX RIP is different from IP RIP, although the purposes of both are similar.

To access the tables, select RIP Input Filter Table or RIP Output Filter Table at the Port IPX Filters screen.

The maximum number of entries for each table is 30. If more than 15 entries are configured, press [+] or [-] to toggle between pages 1 and 2.

To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR]; the IPX RIP Input (or Output) Filter screen is displayed.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU
Port 1 IPX RIP Input (Output) Filter

Filter State:      Enabled
Network Address:   00000000
Filter Mask:       FFFFFFFF

Cursor Down = [Space Bar]
Cursor Up = [Backspace]
Select = [CR]
Exit = [X]
```

Port 1 IPX RIP Input (Output) Filter

2. At the Filter screen, move the cursor to the desired field and press [CR] to select the field.
3. Configure each parameter as required.
4. Press [X] to return to the Filter Table.


To delete an entry, position the cursor on it and press [D].

Saving an entry with all default values does not cause an entry to be placed in the table.

5.5.1.6 Bridging Options


Access the Port Bridging Options screen to configure bridging options. Screens for the LAN and WAN interfaces are identical. .

Select [Transmit Filter Table](#) to display configured transmit filters for this port. See the following section.

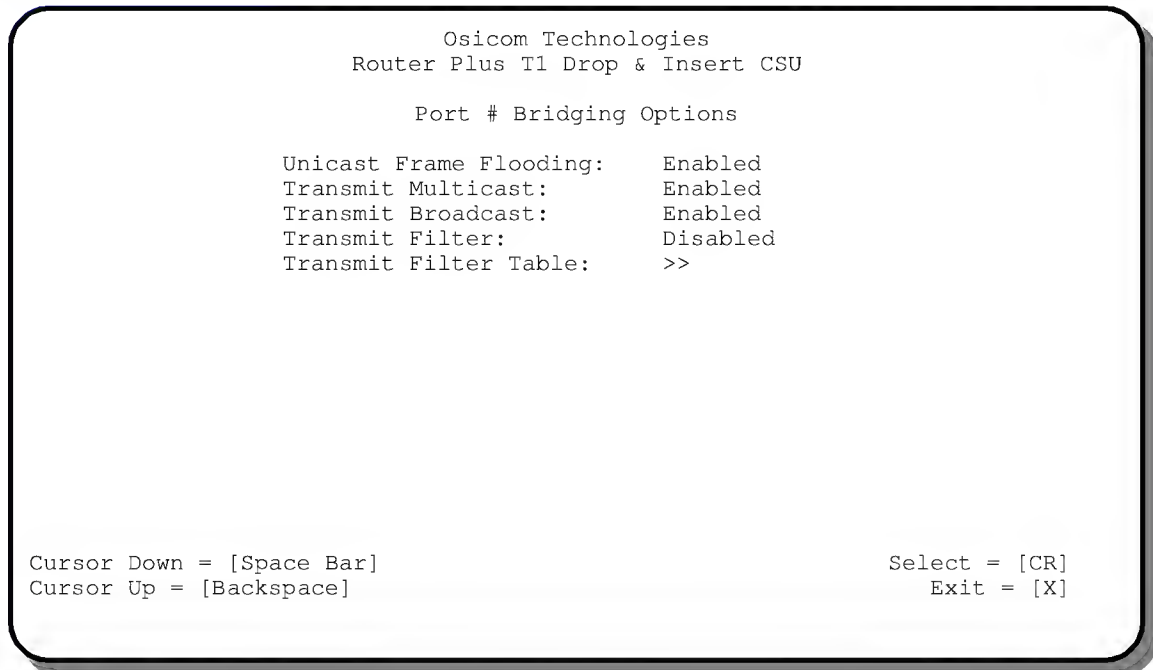

Bridging Options

Screen Path

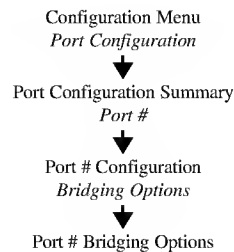

Unicast Frame Flooding - enable/disable flooding of unicast frames on the port.

Enabled - unicast frames with an unknown destination address can be flooded on this port.

Disabled - no flooding will be done on this port; unicast frames with an unknown destination will not be transmitted .

Default: *Enabled*

Transmit Multicast - enable/disable transmission of all multicast frames on this port.

Enabled - transmits multicast frames destined for this port.

Disabled - discards multicast frames destined for this port.

Default: *Enabled*

Transmit Broadcast - enable/disable transmission of all broadcast frames on this port.

Enabled - transmits broadcast frames on this port.

Disabled - discards broadcast frames on this port.

Default: *Enabled*

Transmit Filter - determines how the entries in the Transmit Filters Table will be used.

Positive - frames which match at least one entry in the Transmit Filters Table will be forwarded; the rest are discarded.

Negative - frames which match at least one entry in the Transmit Filters Table will be discarded; the rest are forwarded.

Disabled - filters are not applied, no frames will be filtered based on the contents of the Transmit Filters Table.

Default: *Disabled*

5.5.1.6.1 Transmit Filters

The Transmit Filter Table displays up to five transmit filters for each port. The default configuration is for no filters to be configured.


Transmit filters typically are applied to the Type field in the Ethernet frame to filter specific types of Ethernet frames.

These filters are applied just before the frame is transmitted to the destination port, after address learning and bridging. This lets the filter be port specific.

Osicom Technologies			
Router Plus T1 Drop & Insert CSU			
Port 0 Transmit Filter Table			
	Offset	Type	Value
1.	12	0x0800	
2.			
3.			
4.			
5.			
Page Down = [+]			
Page Up = [-]			
Delete = [D]			
Select Menu = [CR]			
Exit = [X]			

Port Transmit Filter Table

Screen Path

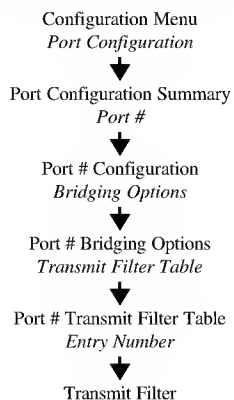

To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR]; the port's Transmit Filter screen is displayed.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Port 0 Transmit Filter

Offset:      12
Type Value:  0000

Cursor Down = [Space Bar]
Cursor Up   = [Backspace]

Edit Field = [CR]
Exit      = [X]
```

Port Transmit Filter

2. At the Transmit Filter screen, configure each parameter as required.
3. Press [X] to return to the Transmit Filter Table.

If a blank entry is selected in the Transmit Filter Table, and *No* is selected in response to the confirmation prompt, the entry remains blank and no entry is added to the Transmit Filter Table.

To delete an entry, move the cursor to the entry and type [D].

Offset - the relative location in the frame of the two bytes to be compared with the Type Value. An offset of 0 would compare the filter's Type Value against the first two bytes of the destination address in the ethernet MAC header.

For example, to apply the filter to the bytes in the Ethernet frame that provide the *Type* code, set the value to 12. The filter will skip the 12 bytes (0 - 5 and 6 - 11) that contain the destination and source addresses in the MAC header before applying the filter). See Type Value, following.

Valid range: 0 - 1516

Default: 12

Type Value - the type of Ethernet frame to be filtered. This value is compared to the transmitted frame at the location in the frame specified by the offset value.

Specific types of Ethernet frames can be filtered. As shown below, the MAC header of an Ethernet frame contains a destination address and a source address, followed by a 2-byte *Type* value.

To filter a particular type of frame, enter the hexadecimal *Type* code (*0000* through *FFFF*) for that frame type. Common Ethernet types are:

Ethernet Type	Code
XNS	0600
IP	0800
ARP	0806
DEC MOP Dump/Load	6001
DEC MOP Remote Console	6002
DECNET	6003
DECLAT	6004
AppleTalk	809B

Filtering is applied to any frame with a *Type* code that matches the value specified in the Type Value field. A frame that matches will be either filtered or forwarded, depending upon the setting of the Transmit Filter (see previous section).

NOTE

If you configure the Type Value parameter, you must also configure the Offset parameter to specify the position of the value in the Ethernet frame.

Valid range: *0000* - *FFFF*

Default: *0000*

A valid configuration is:

Offset = 0

Type Value = 0

5.5.1.7 Encryption Options (Frame Relay and PPP)

Use the Port Encryption Options screen to configure encryption options for the WAN interface. Encryption applies only if the router has the optional encryption hardware installed.

NOTES

Restricted Access - The Encryption Options screen is not available unless the user has entered the Key Password to access the management screens (see [Password](#)). This applies to terminal or Telnet access.

To activate encryption options, Encryption must be *Enabled* on the Port Configuration screen.

```

                                Osicom Technologies                12:00:00
                                Router Plus T1 Drop & Insert CSU


                                Port 1 Encryption Options

                                Clear Key                          Encrypted Key
Current Key:  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Pending Key:  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Cursor Down = [Space Bar]                                Edit Field = [CR]
Cursor Up   = [Backspace]                                Exit     = [X]
```

Encryption Options (Frame Relay and PPP)

Screen Path

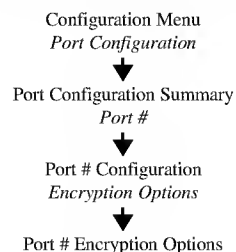

The Routermate Plus can encrypt data using the Data Encryption Standard (DES) algorithm. The DES algorithm is implemented in optional hardware, and uses a 56-bit key to convert clear text into encrypted form. Although the DES technique is well known, it is very difficult to recover the original data without the key used to encrypt it. To recover the original data, the DES algorithm is run in reverse, using the original encryption key. The security of the data is based on secrecy of the key used in its encryption. It is important to minimize exposure of the encryption key, and to change it regularly.

Prior to transmission over Frame Relay, the router encrypts all but the first two bytes of each frame. On reception, the receiving router applies DES to recover the original frame contents. It is important that both ends of the PPP link (or PVC if Frame Relay) use the same DES key. When using Frame Relay, the LMI traffic is sent and received in the clear.

To enhance security of key distribution, the router uses the DES algorithm to encrypt and decrypt the keys themselves. The encryption keys can be entered in either a clear or encrypted form. The router keeps all keys in encrypted form and decrypts them only just prior to their use in encrypting or decrypting data frames. It is highly recommended that keys be managed only in their encrypted form. Use of the clear DES key is unnecessary.

To eliminate downtime experienced when changing encryption keys, the router provides a way to simultaneously update the keys in multiple routers. Keys can be entered as Pending Keys and a Key Update Time can be set. When the Key Update Time arrives, all routers convert their Pending Keys into the active Current encryption keys. Synchronizing the clocks of the routers allows key changes to happen at the same time.

To configure DES encryption of a PPP link:

1. Log out, then log back into the terminal interface screens using the Key Password (default is [CR]).
2. If the time shown in the top right corner of the screen is not correct, go to the [Unit screen](#) and set it to the correct time.
3. Go to the [Port Configuration screen](#) and enable encryption.
4. On the [Encryption Options screen](#) enter a DES key as a Pending, Encrypted key. Although the key seems to be known, it will be DES decrypted prior to use. Thus, the key which is ultimately used to encrypt and decrypt data is really unknown, and likely more random than the key which is entered.

NOTE

It is possible to directly change the Current Key, but as soon as this new Current Key is confirmed, the WAN link will not pass data traffic until the remote router's Current Key is set to the same value.

5. Exit these screens and confirm the changes.
6. Access the [Encryption Global Configuration screen](#) and enter the Key Update Time, which is the time in the future at which the new (Pending) encryption key takes effect. Exit from the screen and confirm the change. The Key Update Time should now be displayed in the top left corner of the terminal display.
7. Prior to logging out, save the configuration, so that the key configuration will not be lost should a power interruption occur.
8. Perform the same steps (1..7) in the remote router(s). Be sure that the identical encryption key is entered. Also be sure that the Key Update Time is effectively the same for each router. To avoid time zone conflicts, it is good policy to set the clocks in all interconnected routers to a universal time, rather than use local time.

At the Key Update Time, the new keys will be implemented and the Key Update Time erased from the top left corner of the screen display. From that point, the data on the WAN interface will be secured by DES encryption.

Current Key - the DES encryption key which is currently in active use.

Pending Key - the DES encryption key which is pending, awaiting the next Key Update Time, at which time it will be copied into the Current Key field and become the active encryption key.

Encrypted Key - the encrypted form of the current or pending DES encryption key. This key is internally decrypted prior to its use to encrypt and decrypt frame data transmitted and received on the WAN interface. The intent is to enter and distribute all DES keys in their encrypted form.

Valid range: 00 00 00 00 00 00 00 00 to FF FF FF FF FF FF FF FF

Default: 00 00 00 00 00 00 00 00 (disables encryption)

Clear Key - provides an alternate way to configure the current or pending DES encryption key. When entering this key, all zeros are displayed and it is immediately encrypted and displayed in the Encrypted Key field. It is normally unnecessary and undesirable to enter the encryption key in clear form.

Valid range: (DES) 00 00 00 00 00 00 00 00 to FF FF FF FF FF FF FF FF (DES)

(E-DES) _0 00 _0 00 _0 00 _0 00 to _F FF _F FF _F FF _F FF

NOTE

In the E-DES (proprietary) version, the cursor skips over the underlined (blank) spaces because they are not configurable.

Default: 00 00 00 00 00 00 00 00 (disables encryption)

If entering keys in clear form, it is recommended to avoid these known weak keys:

00 00 00 00 00 00 00 00 (no key defined)

00 00 00 00 FF FF FF FF

FF FF FF FF 00 00 00 00

FF FF FF FF FF FF FF FF

5.6 Global Configuration

Use the Global Configuration screen to access global configuration parameters for the router. Global parameters are not port-specific; they apply to all interfaces on the router.

NOTE

Encryption applies only if the router has the optional encryption daughter card installed.

For units that include the optional encryption feature, the Encryption Options screen cannot be accessed and encryption options cannot be configured unless the Key Password is used to access the management screens. This applies to terminal or Telnet access of the management screens.

See the following sections for details on each of the global configuration screens:


[IP Global Configuration](#)

[IPX Global Configuration](#)

[Bridging Global Configuration](#)

[PPP Global Configuration](#)

[Encryption Global Configuration](#)

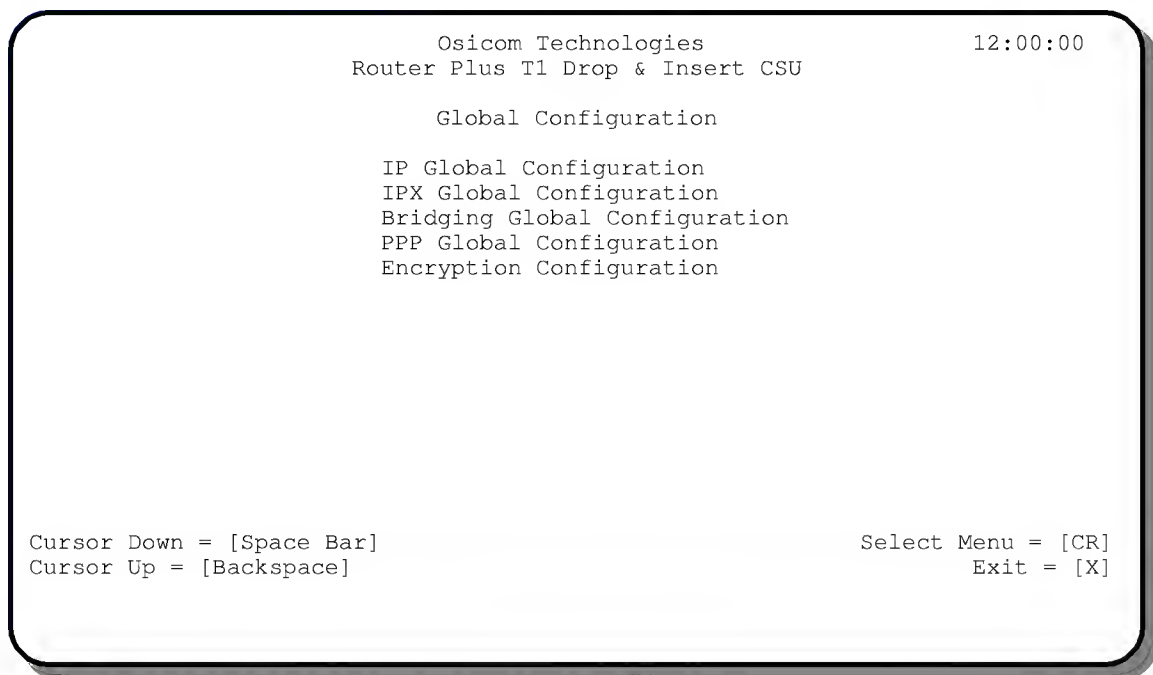

Global Configuration

Screen Path


Configuration Menu
Global Configuration
↓
Global Configuration

5.6.1 IP Global Configuration

Access the IP Global Configuration screen to configure global IP options.

Select the Static Route Table to configure static routes for routing. See [IP Static Routes](#) in next section.

Select the [RIP Neighbor List Table](#) to enter or edit IP addresses of directly-connected routers (any adjacent router) from which IP RIP update packets will be accepted. See IP RIP Neighbor List Table.

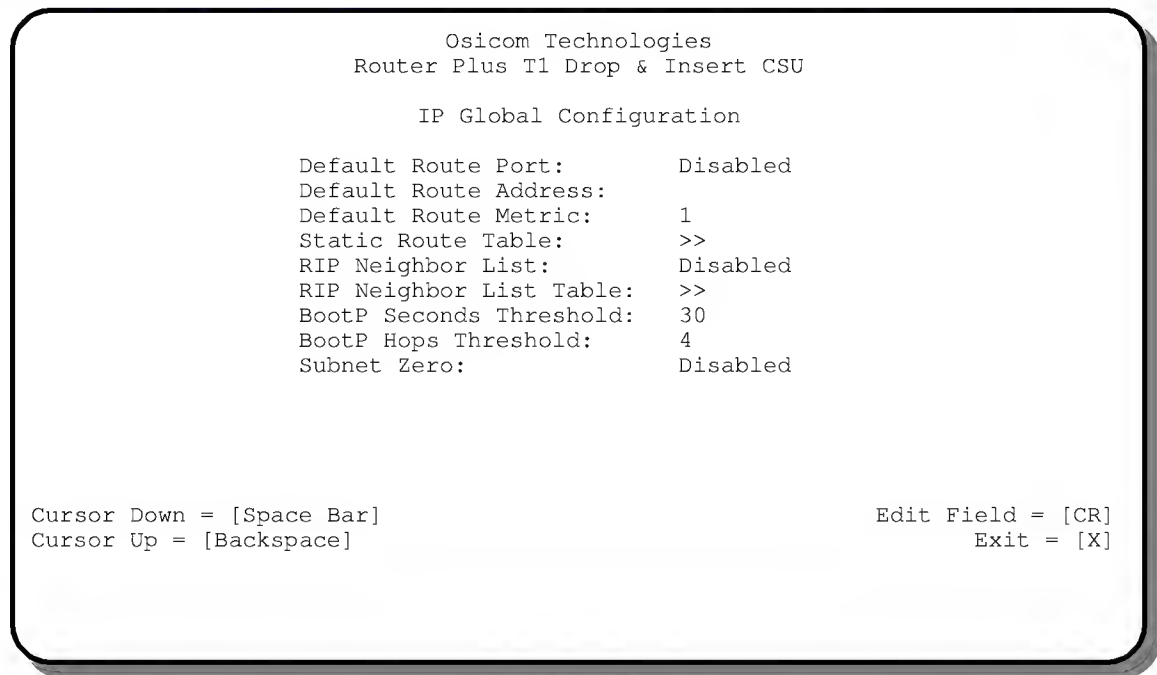

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

IP Global Configuration

Default Route Port:      Disabled
Default Route Address:
Default Route Metric:    1
Static Route Table:      >>
RIP Neighbor List:       Disabled
RIP Neighbor List Table: >>
BootP Seconds Threshold: 30
BootP Hops Threshold:    4
Subnet Zero:             Disabled

Cursor Down = [Space Bar]      Edit Field = [CR]
Cursor Up   = [Backspace]      Exit    = [X]
```

IP Global Configuration

Screen Path

```
Configuration Menu
Global Configuration
↓
Global Configuration
IP Global Configuration
↓
IP Global Configuration
```

Default Route Port - the default port for IP routing. Enter the port number to which packets are to be forwarded when the destination address in the packet is unknown. When default routing is enabled, an entry with a destination of 0.0.0.0 is put in the routing table. This entry is advertised out all the other ports that have IP routing and RIP enabled (unless filtering is enabled). When set to port 0, the Default Route Address value is displayed. When set to a value other than port 0, the Default Route Address value is blanked out.

Valid input: *Disabled* or *range of configured ports*

Default: *Disabled*

Default Route Address - enter the IP address of the router to which packets are to be forwarded when the destination address in the packet is unknown. The host portion of the address cannot be all zeros. If an incorrect address is entered, the “Invalid Address” message is displayed if Yes is entered at the save configuration prompt. The router automatically resolves the IP address to a port number via the IP Routing Table.

Default: *0.0.0.0* (disabled; no address defined)

Default Route Metric - sets the weight (number of hops) associated with the default route. This determines the number of hops to enter in the IP Routing Table for the default route (0.0.0.0).

Valid input: *1 to 15*

Default: *1*

RIP Neighbor List - enable/disable use of the RIP Neighbor List Table. RIP Neighbor List cannot be used on Unnumbered links.

Enabled - the RIP Neighbor List specifies the directly connected routers that routing update packets are accepted from.

Disabled - routing updates are accepted from all neighbors.

Default: *Disabled*

BootP Seconds Threshold - the BootP message contains a field that the booting machine fills in with the number of seconds since it began to boot. If the BootP Threshold Seconds filter is set, the router will not forward any BootP for a machine that booted more than x seconds ago. This is useful if a machine doesn't get a BootP reply, but keeps retrying for a long period of time.

Valid range: *1-300*

Default: *30*

BootP Hops Threshold - the BootP message has a field called Hops that is incremented by each router that forwards the message. The BootP Threshold Hops says to discard any BootP message whose Hops counter is greater than the configured value.

Valid range: *1-15*

Default: *4*

Subnet Zero - this option determines:

- If a subnet zero route will be learned.
- If the subnet portion of the Address can be set to zero on the IP Port Configuration screen.
- If the subnet portion of the Destination (address of target router or network) can be set to zero on the IP Static Route configuration screen.

Valid input: *Enabled or Disabled*

Default: *Disabled*

NOTE

Using Subnet Zero is discouraged because of the possibility that confusion could exist between a network route and a subnet route that have the same address. For example, if network 130.110.0.0 is subnetted as 255.255.255.0, the subnet zero route would be 130.110.0.0 which is the same as the network route.

5.6.1.1 IP Static Routes


The IP Static Route Table lists static (user-defined) routes. Create a static route if the router cannot dynamically build a route to the destination (e.g., the route is to a router that does not implement RIP), or to reduce the amount of traffic used to exchange routing information. RIP announces static routes to other routers (unless filtering is enabled).

The maximum number of entries is 30. If more than 15 static routes are configured, use [+] and [-] to scroll between screens.

Osicom Technologies Router Plus T1 Drop & Insert CSU					
IP Static Route Table - Page 1					
	Destination	Subnet Mask	Port	Next Hop	Metric
1.	128.000.0.0	255.255.0.0	0	118.0.0.12	2
2.	129.102.0.0	255.255.0.0	0	118.0.0.12	4
3.	139.102.0.0	255.255.0.0	0	118.0.0.12	5
4.	149.102.0.0	255.255.0.0	0	118.0.0.12	15
5.	159.102.0.0	255.255.0.0	0	118.0.0.12	4
6.	169.102.0.0	255.255.0.0	0	118.0.0.12	9
7.	105.0.0.0	255.0.0.0	1	0.0.0.0	2
8.	108.0.0.0	255.0.0.0	1	0.0.0.0	2
9.					
10.					
11.					
12.					
13.					
14.					
15.					
Cursor Down = [Space Bar]			Delete = [D]		Select Menu = [CR]
Cursor Up = [Backspace]			Page = [+] [-]		Exit = [X]

IP Static Route Table

Screen Path

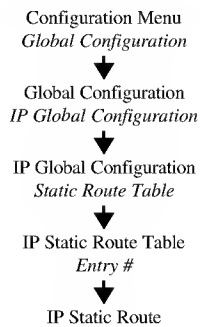

To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR]; the IP Static Route screen is displayed.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

IP Static Route

Destination: 0.0.0.0
Subnet Mask: 0.0.0.0
Outgoing Port: 0
Next Hop: 0.0.0.0
Metric: 1

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Edit Field = [CR]
Exit = [X]
```

IP Static Route

2. At the IP Static Route screen, configure each parameter as required.
3. Press [X] to return to the Static Route Table.

Destination - the IP address for the target router or network. The host portion must be set to zero.

Default: 0.0.0.0

Subnet Mask - if IP subnetworking is used, identifies the parts of the IP address that are used for the network, subnetwork, and host numbers.

If IP subnetworking is not used, ensure that this field is set to one of the following to match the network class of the configured IP address:

Network Class	Subnet Mask
A	255.0.0.0
B	255.255.0.0
C	255.255.255.0

Default: 255.255.255.0

Outgoing Port - identifies the port number for the static route.

Valid input: *Any configured port*

Next Hop - the IP address of the next router in the path toward the destination. The Next Hop address must be on a directly-connected network. The host portion cannot be set to all zeros. The Next Hop address is only displayed for a route that points towards the LAN (port 0); the Next Hop address is blanked out when the Outgoing Port is greater than 0.

Default: 0.0.0.0. (not a valid host number)

Metric - the number of hops (intervening routers) between the source network and the destination network.

Valid input: *1 to 15*

Default: *1*

5.6.1.2 IP RIP Neighbor List Table

Access the IP RIP Neighbor List Table to enter or edit IP addresses of directly-connected routers (any adjacent router) from which IP RIP update packets will be accepted.

Press [CR] to edit an address.

Valid range: *0.0.0.0 to 255.255.255.255*

Default: *0.0.0.0*

To delete an address, position the cursor on that entry and press [D]; the default address (0.0.0.0) is displayed.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

IP RIP Neighbor List Table

1. 123.123.123.123
2. 0.0.0.0
3. 0.0.0.0
4. 0.0.0.0
5. 0.0.0.0
6. 0.0.0.0
7. 0.0.0.0
8. 0.0.0.0
9. 123.123.123.122
10. 0.0.0.0

Cursor Down = [Space Bar]      Delete = [D]      Edit Field = [CR]
Cursor Up   = [Backspace]      Exit   = [X]
```

IP RIP Neighbor List Table (LAN)

Screen Path

```
Configuration Menu
Global Configuration
↓
Global Configuration
IP Global Configuration
↓
IP Global Configuration
RIP Neighbor List Table
↓
IP RIP Neighbor List Table
```

5.6.2 IPX Global Configuration

Access the IPX Global Configuration screen to configure global IPX options.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


IPX Global Configuration

Internal Network Number: 00000000
Gap Time: 2 ticks

Cursor Down = [Space Bar]
Cursor Up = [Backspace]
Edit Field = [CR]
Exit = [X]
```

IPX Global Configuration

Screen Path

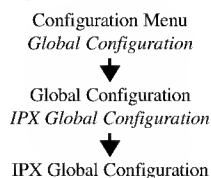

Internal Network Number - only used during IPXWAN initial negotiation to determine master slave roles. The router with the higher Internal Network Number is the master. IPXWAN is described in RFC1634.

Valid input: 32-bit hex range *00000000 to FFFFFFFF*

Default: *the value equal to the last 32 bits of the LAN interface's MAC address* .

Gap Time - the minimum delay, in units of 55 milliseconds, between successive RIP or SAP messages. This option is provided because older Novell Servers may have a problem processing a series of RIP or SAP messages if the inter packet gap is not sufficient.


Valid input: *1 to 255 ticks (1 tick is 55 milliseconds).*

Default: *2 ticks*

5.6.3 Bridging Global Configuration


Access the Bridging Global Configuration screen to configure global bridging options.

View the Static Address Table in the following section.

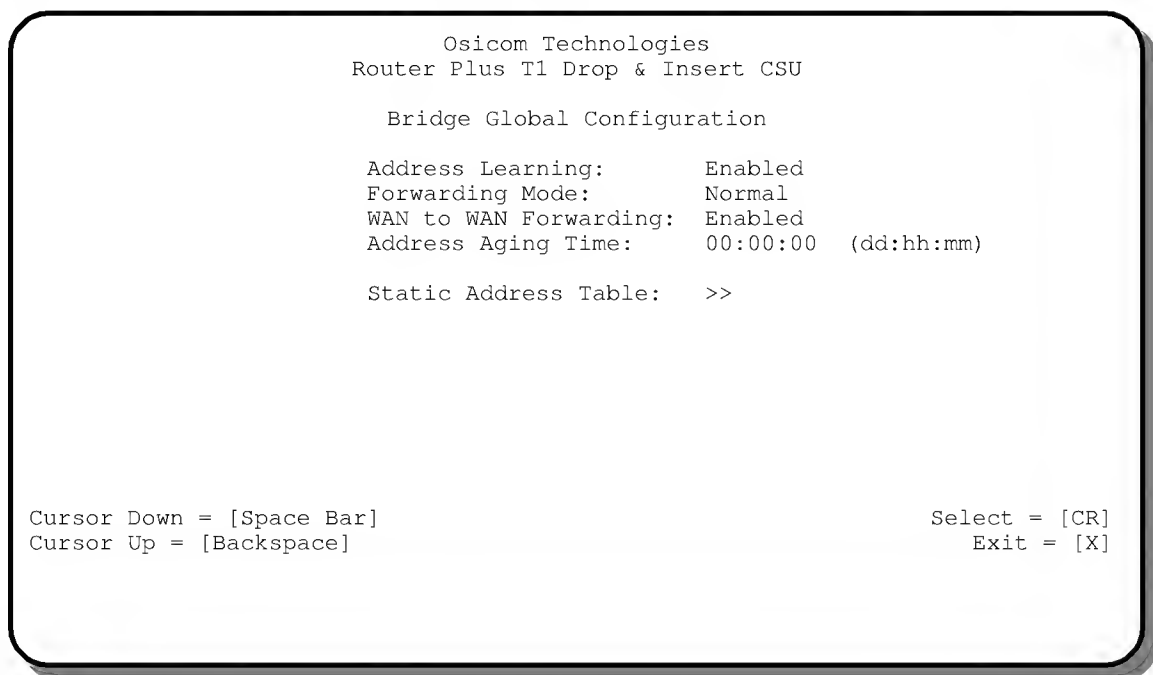

Bridging Global Configuration

Screen Path

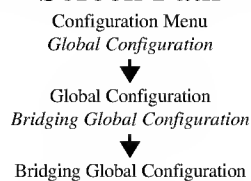

The Address Learning and Forwarding Mode options determine the default bridging action as follows. Entries in the Static Address Table cause the opposite action of the default action.

Configuration	Default Action
Address Learning: Enabled	Permit All
Forwarding Mode: Normal	
Address Learning: Disabled	Deny All
Forwarding Mode: NA	
Address Learning: Enabled	Deny All
Forwarding Mode: Restricted	

Address Learning - enables/disables address learning.

Enabled - the unit automatically learns source addresses. Frames with an unknown destination are broadcast.

Specifically, when an Ethernet frame is received and address learning is enabled, the unit looks in its address table for the received frame's destination address. If the destination address is located, the frame is forwarded. If the destination address is not located, then the frame is broadcast.

Disabled - frames will be forwarded only between statically entered addresses. Frames destined for addresses which are not in the address table will be discarded. Broadcast and Multicast frames from an unknown source are still flooded. Flooding broadcast frames from an unknown source is required for ARP to work across the bridge.

Default: *Enabled*

Forwarding Mode - used in conjunction with the Static Address Table (when address learning is enabled) to control which devices can communicate, as follows:

Normal - any device can communicate with any other device since address learning is enabled. A specific device can be prevented from communicating by adding the device's MAC Address to the Static Address Table and setting Action to *Filter* for that address; the bridge will not forward frames from or to this address.

Restricted - the bridge only forwards frames which are either sourced or destined to a static address table entry. Learning is not affected, so a frame transmitted from a statically-entered source address to an unknown destination will be flooded. Frames are not forwarded between two learned addresses. When forwarding is restricted, broadcasts (not multicasts) will be flooded either if the source address is known or the broadcast is from the WAN. Flooding broadcast from an unknown source is required for ARP to work across the bridge.

Default: *Normal*

WAN to WAN Forwarding - enables/disables bridging of frames between two wide area networks.

Enabled - frames received from a WAN port can be broadcast or flooded to the other WAN ports.

Disabled - frames received from a WAN port are not broadcast or flooded to another WAN port.

Default: *Enabled*

Address Aging Time - a process for determining how long an address which has not been used will remain in the address table. The time entered here is the maximum time that an automatically learned address can remain inactive before it is deleted.

The bridge can accommodate 2047 addresses. If the network is small and it is unlikely that the maximum number of addresses will be learned, set the aging time to a high number (31 days is the maximum). If the network is large, decrease the aging time so inactive Ethernet addresses are deleted, making more room for new addresses.

Decrease the aging time if the Ethernet devices are frequently moved between LANs. This lets the address be aged out and relearned at the new location.

If the aging time is set too low, the bridge might need to relearn addresses frequently, which can affect performance.

When editing the time, use two digits each for days, hours, and minutes. The colons (:) do not have to be typed between numbers.

Valid Range: *0-32 days:0-23 hours:0-59 minutes*

Default: *00:01:00* (1 hour)

5.6.3.1 Bridging Static Addresses

Access the bridging Static Address Table to display static addresses and to access the Static Address configuration screen.

When address learning is disabled, the bridge forwards only those frames that are to MAC Addresses configured in this table.

When address learning is enabled, the bridge forwards all frames except those that are to or from addresses that are both in the Static Address Table and are set to *Filtered*.

Forwarding and filtering are applied to a frame when the frame is received.

There can be up to 60 entries in the Static Address Table. When there are more than 15 entries, press [Page Down] or [+] and [Page up] or [-] to scroll between pages of addresses.

Osicom Technologies Router Plus T1 Drop & Insert CSU			
Static Address Table - Page 1			
	MAC Address	Action	Port
1.	00:00:6d:00:30:00	Filter	--
2.	00:00:6d:00:30:01	Filter	--
3.	00:00:6d:00:30:55	Forward	1
4.			
5.			
6.			
7.			
8.			
9.			
10.			
11.			
12.			
13.			
14.			
15.			
Cursor Down = [Space Bar]		Delete = [D]	Select Menu = [CR]
Cursor Up = [Backspace]		Page = [+] [-]	Exit = [X]

Static Address Table

Screen Path



To add or edit an entry:

1. Position the cursor on the desired entry number and press [CR]; the [Static Address configuration screen](#) is displayed.
2. At the Static Address configuration screen, configure each parameter as required.
3. Press [X] to return to the Static Address Table.

To delete an entry, move the cursor to the desired entry number and press [D].

MAC Address - the Ethernet address (48-bit hexadecimal text) for the entry. Frames from or to this device are filtered or forwarded depending on the setting of the Action field. Setting the address to 0 deletes the entry.

Range: 00:00:00:00:00:00 - FF:FF:FF:FF:FF:FF

Default: 00:00:00:00:00:00

Action - disposition of frames either destined to or sourced from the specified MAC Address, as follows:

Filter - all frames to or from the specified MAC Address are filtered (not forwarded).

Forward - all frames destined for the specified MAC Address are forwarded to the specified port. See Port, following.

Default: *Forward*

Port - port number where frames are forwarded based on their destination address. Frames that contain the specified MAC address in the frame's destination field are forwarded to this port; frames that contain the specified MAC address in the source field should be received on this port. The Port value is ignored when the Action is set to Filter.

Valid range: 0 - 14

Default: 0

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Static Address #

Mac Address: 00.00:12:00:00:01
Action: Forward
Port: 0

Cursor Down = [Space Bar] Edit Field = [CR]
Cursor Up = [Backspace] Exit = [X]

Static Address Configuration


Screen Path



5.6.4 PPP Global Configuration


Access the PPP Global Configuration screen to configure global PPP options.

When you press [CR] at an option, follow the prompts at the bottom of the screen.

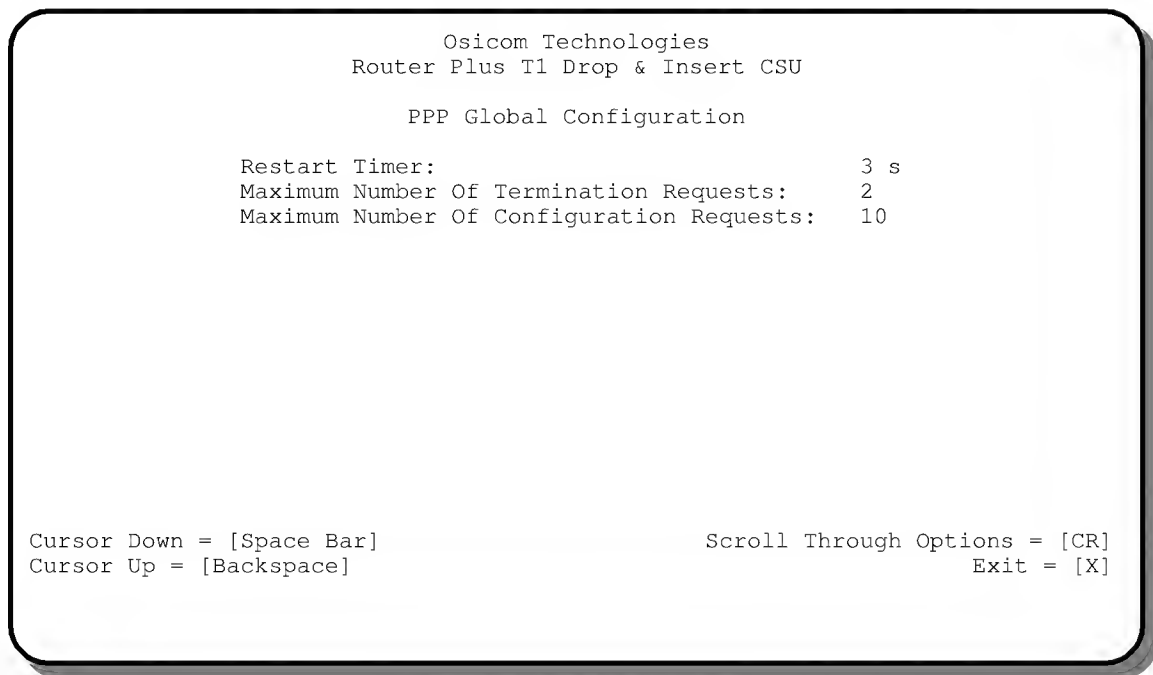

PPP Global Configuration

Screen Path

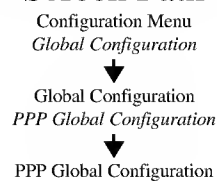

Restart Timer - used to time transmissions of Configure-Request and Terminate- Request packets. Expiration of the Restart timer causes a Timeout event, and retransmission of the corresponding Configure-Request or Terminate-Request packet. packets.

Valid input: *1 to 10 seconds*

Default: *3 s*

Maximum Number Of Termination Requests - the number of Termination Request packets that can be sent without receiving a Terminate Acknowledge, before assuming that the peer is unable to respond.

Valid input: *1 to 100*

Default: *2*

Maximum Number Of Configuration Requests - the number of Configuration Request packets that were sent without receiving a valid Configuration Acknowledged, Configuration Not Acknowledged, or Configuration Reject before assuming that the peer is unable to respond. When this threshold is reached, the counter is reinitialized and the link initialization is started again.

Valid input: *2 to 100*

Default: *10*

5.6.5 Encryption Global Configuration

Use this screen to configure global encryption options.

12:30:00

Osicom Technologies
Router Plus T1 Drop & Insert CSU

12:00:00

Encryption Global Configuration

Key Update Time:12:30:00 (hh:mm:ss)

NOTE

If a DES-KEY-LIC (encryptor key license) has been purchased and implemented, two additional selections will appear on this screen when the user enters the appropriate password upon accessing the management screens.

- Master Key Configuration
- Initial Vector Configuration


Call an Osicom sales representative at 1-888-674-2668 or 1-800-367-2729 for ordering information.

Cursor Down = [Space Bar]
Cursor Up = [Backspace]

Edit Field = [CR]
Exit = [X]

Encryption Global Configuration

Screen Path

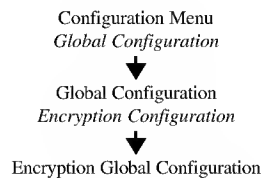

Key Update Time - the time at which all Pending Keys will become the active Current Keys. Its purpose is to synchronize the changing of the DES encryption keys of all interconnected routers. Only ports with encryption enabled are updated.

Valid input: 00:00:00 to 24:00:00 (HH:MM:SS)

Default: 00:00:00 (disables timer)

NOTE

To ensure synchronization, the system time for all communicating units should be set for the same time regardless of differences in time zones. Otherwise, the pending keys overwrite current keys at different times for different units, thus preventing communication between the units.

To use this timer, perform these steps for each router using encryption:

1. Make sure the router's clock is set correctly.
2. Configure Pending Keys for each port. See [Encryption Options](#).
3. Set this option for the time of day to update the encryption keys.
4. Exit the screen and confirm the configuration.

When the system time reaches the Key Update Time, the Key Update Time is reset to 00:00:00 and all pending keys on ports with encryption enabled automatically overwrite the current keys.


Valid input: *00:00:00 to 24:00:00 (hh:mm:ss)*

Default: *00:00:00* (disables this feature)

NOTE

When the time set for Key Update Time is reached, all configuration settings are saved automatically (firmware version 2.0.10 and later). This ensures that the newly updated Current Key configuration is retained following a re-boot or power interruption.

6. CONFIGURATION AND SOFTWARE UPDATE (TFTP)

A rectangular button with a black border and a light gray gradient background. The text "Start of Document" is centered in a black, sans-serif font.

- [6.1 Screen Structure, TFTP](#)
- [6.2 Configuration and Software Update](#)


This section illustrates and describes the router's Configuration and Software Update screens. Access these screens to transfer configuration and software files between the router and a TFTP (Trivial File Transfer Protocol) server. Configuration and software file transfers can be performed across the LAN or WAN from a local or remote server.

Software files contain the operating system; configuration files consist of the parameters and options.

After reading this section, the user will be able to *send* files to a TFTP server and *get* files from a TFTP server.

6.1 Screen Structure, TFTP

The organization of the TFTP screens is shown below. Position the cursor on the TFTP selection at the Main Menu and press [CR] to access the [Configuration and Software Update screen](#)

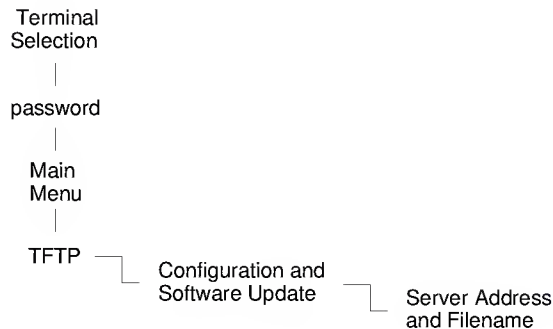

Screen Structure, TFTP

Osicom Technologies
Router Plus T1 Drop & Insert CSU

Configuration and Software Update


Send Configuration To TFTP Server
Get Configuration From TFTP Server
Send Software To TFTP Server
Get Software From TFTP Server

Server Address and Filename:

Cursor Down = [Space Bar] Select = [CR]
Cursor Up = [Backspace] Exit = [X]

Configuration and Software Update

Screen Path



6.2 Configuration and Software Update

NOTES

1. If sending a file to the server, the file must already exist on the server, and the file must have read/write privileges for everyone.
2. An unreliable file will result if the file on the server is larger than the file being sent. The file being sent will not overwrite the entire file on the server; instead, the file being sent will overwrite only a portion of the file on the server. The result will be a file made up of parts of both files.

1. Enter the server's address and filename on the Server Address and Filename configuration screen.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Server Address and Filename

Configuration File

Server Address:  0.0.0.0
Filename:        /filename.txt


Software File

Server Address:  101.100.100.100
Filename:        1234567890123456789012345678901234567890

Cursor Down = [Space Bar]
Cursor Up   = [Backspace]
Edit Field  = [CR]
Exit        = [X]
```

Server Address and Filename

Screen Path



2. Press [X] to return to the Configuration and Software Update screen.

If a transfer is attempted without setting the Server Address and Filename, the following messages may be displayed:

```
Filename Missing
Server Address Missing
Filename and Server Address Missing
```

When this occurs, the cursor is positioned on the Server Address and Filename choice. Press [CR] to display the Server Address and Filename configuration screen.

Server Address - server's IP address.

Default: 0.0.0.0 (not configured).

Filename - text string; alphanumeric, 50 characters maximum.

Default: Blank (not configured).


Position the cursor on the desired *Send* or *Get* command (see screen below) and press [CR] to initiate the file transfer.

To abort the file transfer, press either Ctrl-X, Ctrl-N, or Ctrl-T.

If a transfer is stopped, the user should wait until the server times out before initiating another TFTP session.

NOTE

Selecting any command causes a status message and percentage complete prompt to be displayed. When the transfer is complete or stops, the percentage complete is cleared.

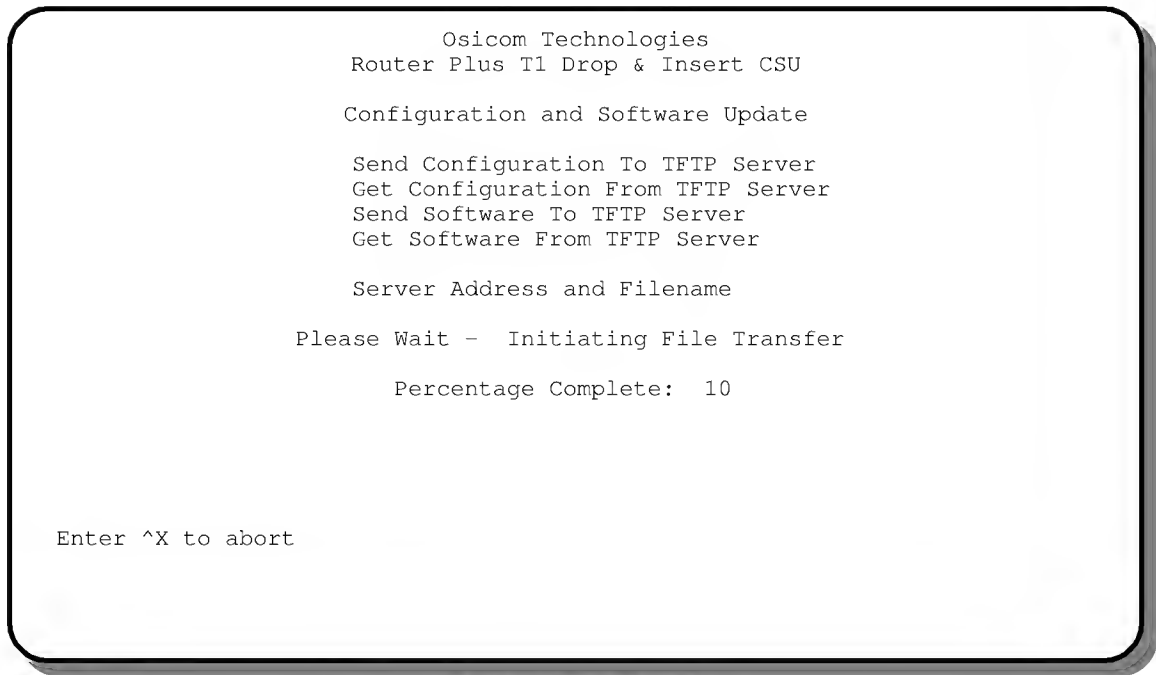

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Configuration and Software Update

Send Configuration To TFTP Server
Get Configuration From TFTP Server
Send Software To TFTP Server
Get Software From TFTP Server

Server Address and Filename

Please Wait - Initiating File Transfer

Percentage Complete: 10

Enter ^X to abort
```

Initiating File Transfer

The screen below illustrates a Get Configuration From TFTP Server process.

If you select *Yes* to "Save Download to Flash," the configuration download is saved to flash and you are prompted to restart.

If you select *No* to "Save Download to Flash," the configuration download is deleted from RAM and the file transfer is discarded. The cursor returns to the Get Configuration From TFTP Server command.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Configuration and Software Update

Send Configuration To TFTP Server
- Get Configuration From TFTP Server
Send Software To TFTP Server
Get Software From TFTP Server

Server Address and Filename:  >>

File Transfer Complete

Save Download to flash?
Yes  No

Select = [CR]
```

Configuration File Transfer

The screen below illustrates a Get Software From TFTP Server process. If you select *Yes* to "Save To Flash and Restart," the software download is saved to flash and the router is restarted using the new software.

If you select *No* to "Save To Flash and Restart," the software download is deleted from RAM and the file transfer is discarded. The cursor returns to the Get Software From TFTP Server command.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

Configuration and Software Update

Send Configuration To TFTP Server
Get Configuration From TFTP Server
Send Software To TFTP Server
- Get Software From TFTP Server

Server Address and Filename:  >>

File Transfer Complete

Save To Flash and Restart?
Yes  No


Select = [CR]
```

Software File Transfer

The screen below illustrates a Send Software To TFTP Server process.

If the file transfer fails, the "cause of failure" is displayed.

A Send Configuration To TFTP Server process operates the same way.

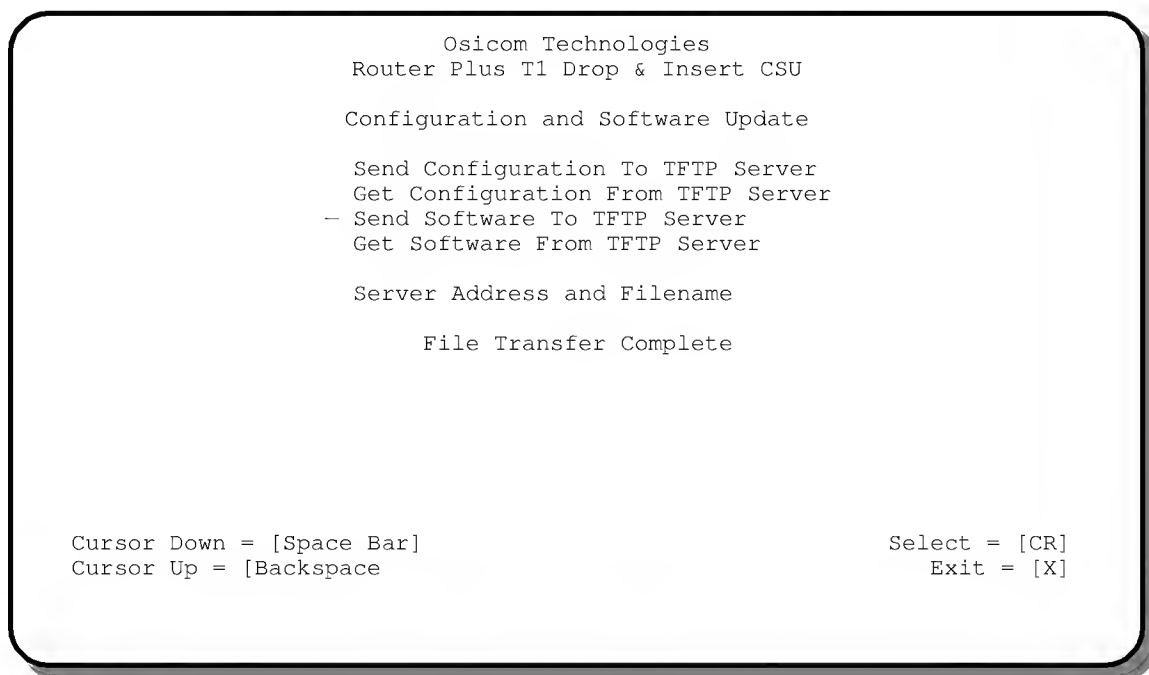

Software File Upload

7. MODEM CONFIGURATION SCREENS

A rectangular button with a black border and a light gray background, containing the text "Start of Document".

Start of Document

- [7.1 Screen Structure, Modem](#)
- [7.2 Modem Parameters](#)

This section illustrates and describes the router's Modem configuration menu. This screen will appear only if the optional V.32 modem is installed. Use this screen to configure the modem for dial-in management of the router's console screens. Dial-in console access takes priority over local console and Telnet access.

This text also serves as a reference tool for defining the various parameters and options appearing on the screens.

7.1 Screen Structure, Modem

The organization of the Modem menu is shown below. Position the cursor on the Modem selection at the Main Menu and press [CR] to access the [Modem menu](#).



Screen Structure, Modem

Osicom Technologies
Router Plus T1 Drop & Insert CSU


Modem

Modem Mode:	Console
Modem Security:	Disabled
Security Password:	*****
Auto Answer:	Enabled

Cursor Down = [Space Bar] Select = [CR]
Cursor Up = [Backspace] Exit = [X]

Modem Menu

Screen Path



7.2 Modem Parameters

Modem Mode - access the WAN 2 interface or the console screens of the router. This parameter is currently fixed at Console. Dial-in console access takes priority over local and Telnet console access.

Default: *Console*

Modem Security - enable/disable security password to access the router through the modem.

Default: *Disabled*

NOTE

If using Osicom's 4532 or 4232 modem, you can enable **Modem Security** to prevent an unauthorized connection. If using a modem other than Osicom's 4532 or 4232 modem, **Modem Security** must be disabled.

Security Password - the password exchanged between the integral modem and the calling 4532 or 4232 when Modem Security is enabled.

Valid input: up to eight alphanumeric characters; case sensitive.

Default: *password*

Auto Answer - enable/disable the integral modem to automatically answer a dial-in call. This parameter must be enabled to allow dial-in access to the management screens.

Default: *Enabled*

8. UNIT CONFIGURATION SCREENS

A rectangular button with a black border and a light gray background, containing the text "Start of Document".

- [8.1 Screen Structure, Unit](#)
- [8.2 Unit Parameters](#)
 - [8.2.1 System Restart](#)
 - [8.2.2 System Information](#)
 - [8.2.3 Service Information](#)

This section illustrates and describes the router's Unit menu. Use this screen to configure the following supervisory functions:


- Header lines on the terminal screens
- Inactivity timeout
- System time
- Passwords (console, encryption, and dial-in management)

Also access the System Restart, System Information, and Service Information screens.

This text also serves as a reference tool for defining the various parameters and options appearing on the screens.

8.1 Screen Structure, Unit

The organization of the Unit menu is shown below. Position the cursor on the Unit selection at the Main Menu and press [CR] to access the Unit menu. The following screen illustrates the [Unit screen](#) for a router with an integral modem for dial-in management and encryption hardware installed.

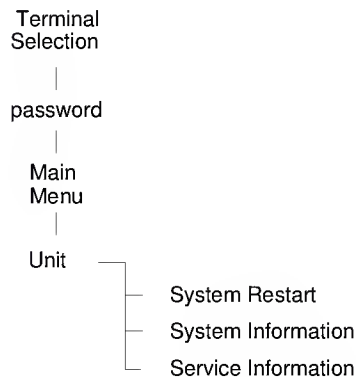

Screen Structure, Unit

NOTE

Parameters will differ depending upon hardware options installed.

```
Osicom Technologies                               12:00:00
Router Plus T1 Drop & Insert CSU

Unit


Header Line 1:      Osicom Technologies
Header Line 2:      Router Plus T1 Drop & Insert CSU
Inactivity Timeout: 00:05 (hh:mm)
Console Password:   *****
System Time:        00:00:00 (hh:mm:ss)
Key Password:       *****

System Restarts:    >>
System Information: >>
Service Information: >>

Cursor Down = [Space Bar]                        Edit Field = [CR]
Cursor Up = [Backspace]                          Exit = [X]
```

Unit Menu

Screen Path



8.2 Unit Parameters

Use the Unit menu to edit the two header lines that appear on all screens and perform other supervisory functions.

Also access the [System Restart screen](#), the [System Information screen](#), and [Service Information screen](#).

To configure a parameter by typing a value:

1. Press the [Space Bar] or [Backspace] to move the cursor to the desired parameter.
2. Press [CR] to highlight the field.
3. Type the value.
4. Press [CR] again to exit the field.

To restore the parameter to its original contents, press [Esc] before exiting the field.

Unit menu parameters are defined below. Note that certain parameters are displayed only for specific hardware versions of the Routermate Plus.

Header Line 1, Header Line 2 - these two fields let you modify the text that appears in the first two lines of each screen. Press [CR] to highlight the field, enter the new header, then press [CR] again when you are finished.

Valid input: Up to 40 alphanumeric characters; spaces are permitted anywhere in the field.

Default: *Osicom Technologies*

Router Plus T1 Drop & Insert CSU

Inactivity Timeout - time, in hours and minutes, during which if there is no keyboard activity, the console is deactivated, or the Telnet connection is terminated. This parameter is for terminal and Telnet users only. Access to the management screens is then restricted to persons who can enter the password.

Valid input: 00:00 (disables timer) to 23:59. Type the time as a continuous 4-digit number in the format hh:mm. You do not have to type the colon.

Default: 00:05

Console Password - for terminal and Telnet operation only; sets a password that restricts access to the management screens. Entering the Console Password allows the user access to all the screens except the encryption screens.

Valid input: Up to 16 alphanumeric characters, case-sensitive. Spaces can be used, but a space cannot be used as the first or last character.

A Telnet user has three attempts and thirty seconds to enter the correct password; if unsuccessful, the session is disconnected.

Default: [CR]

System Time (displayed only when encryption option is installed) - the system time in hours (hh) minutes (mm) and seconds (ss). You do not have to type the colons [:]. When configured, the time is displayed in the upper, right corner of the screens.

Key Password (displayed only when encryption hardware is installed) - enter the Key Password for access to all the screens.

Valid input: Up to 16 alphanumeric characters, case-sensitive. Spaces can be used, but a space cannot be used as the first or last character.

To configure the password, press [CR] to highlight the field, and type the new password. If you make a typing error use [Backspace] to move the cursor to the left, and re-type the correct characters. Press [Esc] before exiting the field to return the password to its previous setting. Press [CR] to exit the field after typing the new password.

The new password is not displayed on the screen. A string of asterisks (*) indicates that a password is configured.

A Telnet user has three attempts and thirty seconds to enter the correct password; if unsuccessful, the Telnet session is disconnected.

Default: [CR]

8.2.1 System Restart

The System Restart screen supports three types of restarts, including one with software downloads.

Selecting a restart command causes a confirmation box to appear. If you select Yes, the following message appears:

Please wait - *type of restart* in progress

NOTE

A Telnet session is closed once any restart is initiated. Following a defaults restart, you must re-enter the IP address from a local terminal before another Telnet connection can be made.

```

Osicom Technologies
Router Plus T1 Drop & Insert CSU

System Restart


-----
|          Select Restart Type          |
|-----|
| Cancel                               |
| System Restart                       |
| Defaults Restart                     |
| Restart SW Download - Use BootP     |
|-----|

```

Cursor Down = [Space Bar] Select = [CR]
Cursor Up = [Backspace] Exit = [X]

System Restart

Screen Path

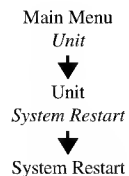

Cancel - exit the screen.

System Restart - this restart is equivalent to powering the router off and on. Configuration parameters are not affected.

Defaults Restart - select this option to change all configurable parameters to their default values. This includes the Console and Key passwords but does not include the Master key or Initial Vector passwords.

Restart SW Download - Use BootP - when this command is selected, the router restarts, runs the boot image, and sends out a BootP request. The information in the BootP response from the BootP server is used to automatically perform the TFTP transfer. Once the image file is successfully transferred, the unit runs the full image and uses the configuration stored in the database, including the LAN IP address. If the transfer is unsuccessful, the unit discards the file and runs the existing full image.

The advantage of using this command over the Get Software From TFTP Server in the [TFTP menu](#) is that the server address and filename do not need to be known.

NOTES

1. The **Restart SW Download - Use BootP** command can only be performed across the LAN because the WAN is not operational when running from the boot sector.
2. The **Restart SW Download - Use BootP** command can only be used to retrieve a file from a remote server if the router that leads to the remote BootP server supports BootP Relay.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU

System Restart

-----
|           Select Restart Type           |
|-----|
| Cancel                                 |
| System Restart                        |
| Defaults Restart                      |
| Restart SW Download - Use BootP      |
|-----|

-----
| Confirm Restart? |
| No      Yes     |
|-----|


Cursor Down = [Space Bar]
Cursor Up   = [Backspace]

Select = [CR]
Exit   = [X]
```

Restart SW Download - Use BootP


The following two screens illustrate a [restart and software download in progress](#).

Software download can only be performed across the LAN because the WAN is not operational when running from the boot sector.

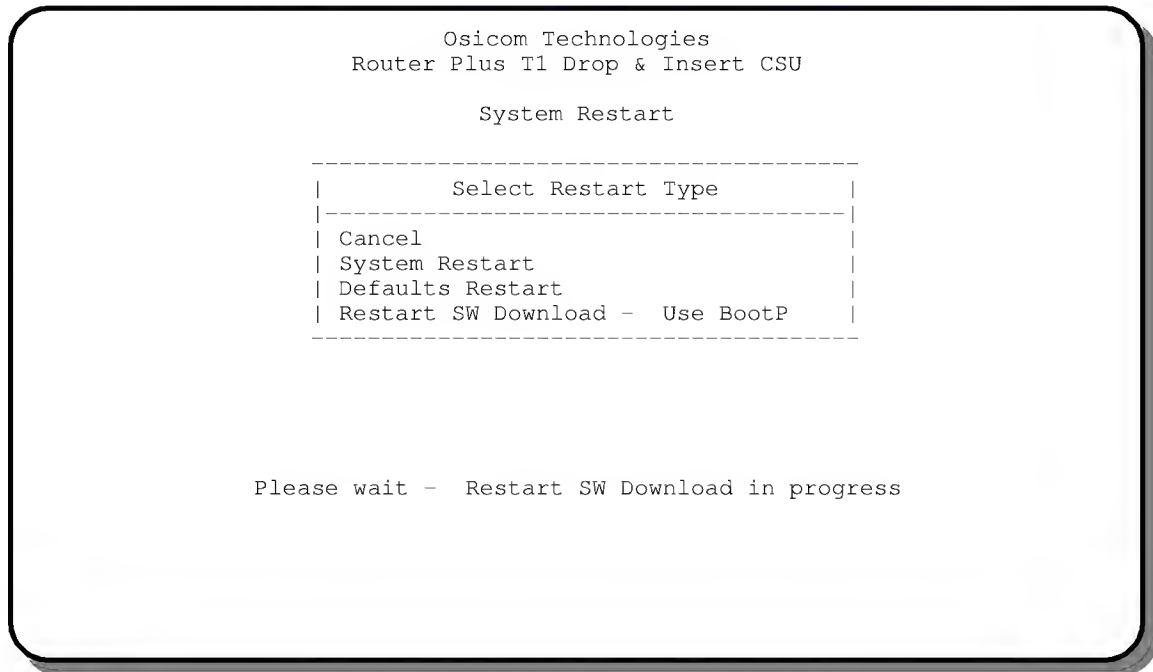

System Restart (SW Download in Progress)

The message shown in the screen below is displayed if any restart command is selected when there are unsaved configuration changes. Selecting No clears the message and returns the cursor to last position.

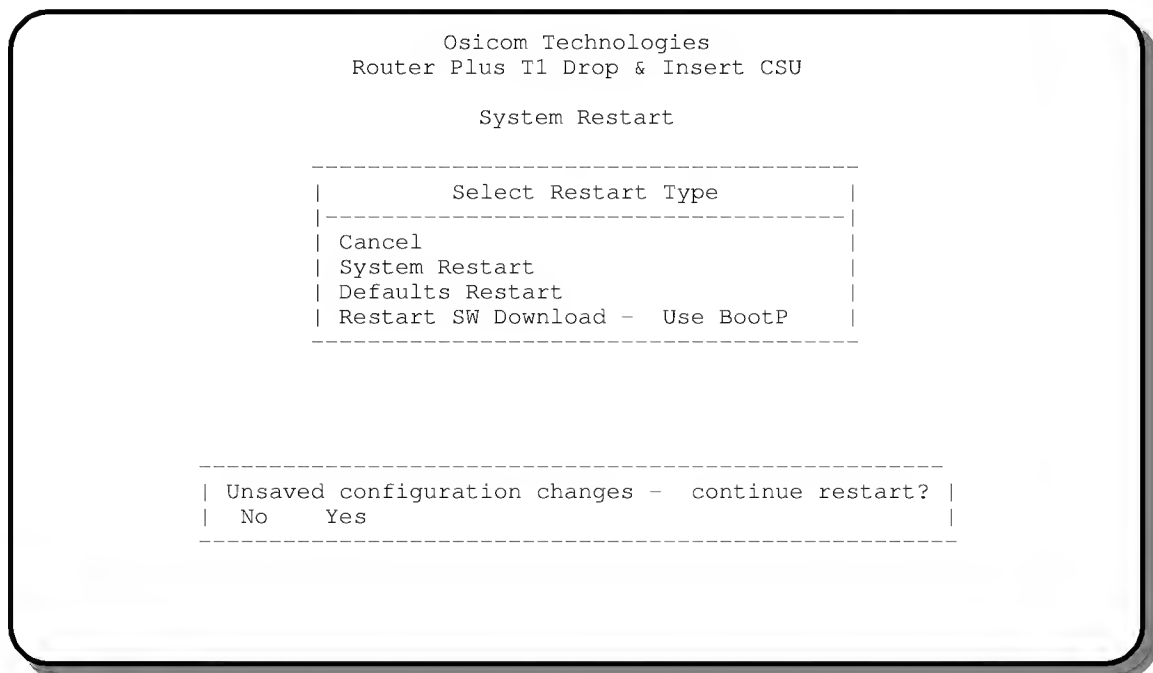


System Restart (Prompt for Unsaved Configuration Changes)

8.2.2 System Information


Select System Information at the Unit screen to view the System Information screen.

This screen displays software and hardware options integral to the router.

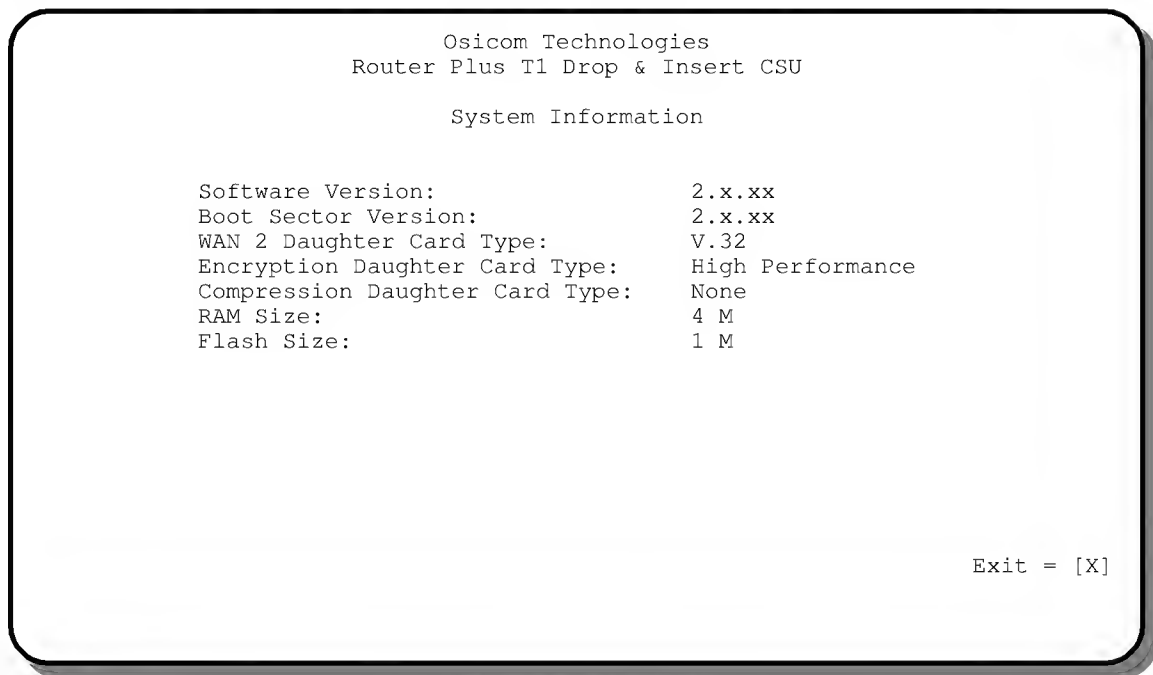

System Information

Screen Path

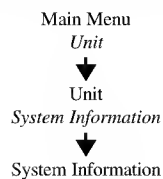

Software Version - the revision level of the router's firmware.

Software Checksum - 32-bit CRC checksum of operational software.

Boot Sector Version - the revision level of the boot sector firmware.

WAN 2 Daughter Card Type - hardware option for WAN 2 interface.

Valid options: *None, V.32, ISDN U*

Encryption Daughter Card Type - hardware option for encryption.

Valid options: *None, Standard, High Performance, Proprietary Standard, Proprietary High Performance*

Compression Daughter Card Type - hardware option for compression.

Valid options: *None, Standard, High Performance*

RAM Size - number of bytes of memory.

Valid options: *4 M*


Flash Size - number of bytes of memory used to store configuration and software image files.

Valid options: *1 M*

8.2.3 Service Information


Select Service Information at the Unit screen to display the Service Information screen.

This screen provides address, telephone, fax, e-mail, and web site numbers for contacting service personnel.

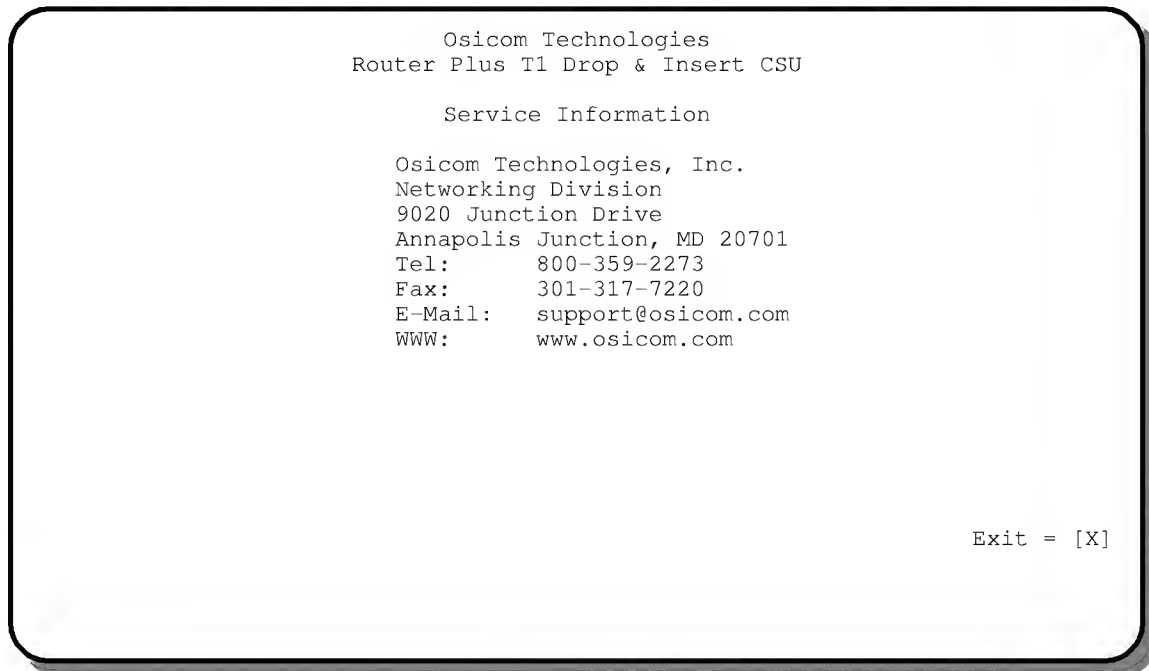

Service Information

Screen Path

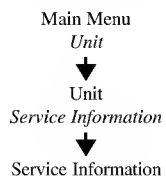

9. MANAGEMENT CONFIGURATION SCREENS

Start of Document

- [9.1 Screen Structure, Management](#)
- [9.2 Management Parameters](#)
 - [9.2.1 SNMP Trap Client Table](#)
 - [9.2.2 Traps](#)

This section describes the router's Management menu. Use this screen to enable Telnet access, configure SNMP (Simple Network Management Protocol) options, and access the SNMP Trap Client Table.

This text also serves as a reference for defining the parameters and options appearing on the screens.


NOTE

SNMP management capabilities:


- Router - standard MIB II
- Encryption - enterprise MIB

9.1 Screen Structure, Management

The organization of the Management menu is shown below. Position the cursor on the Management selection at the Main Menu and press [CR] to access the [Management menu](#).

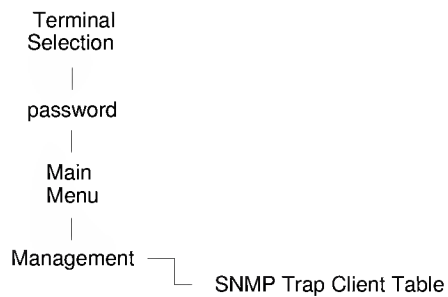


Screen Structure, Management

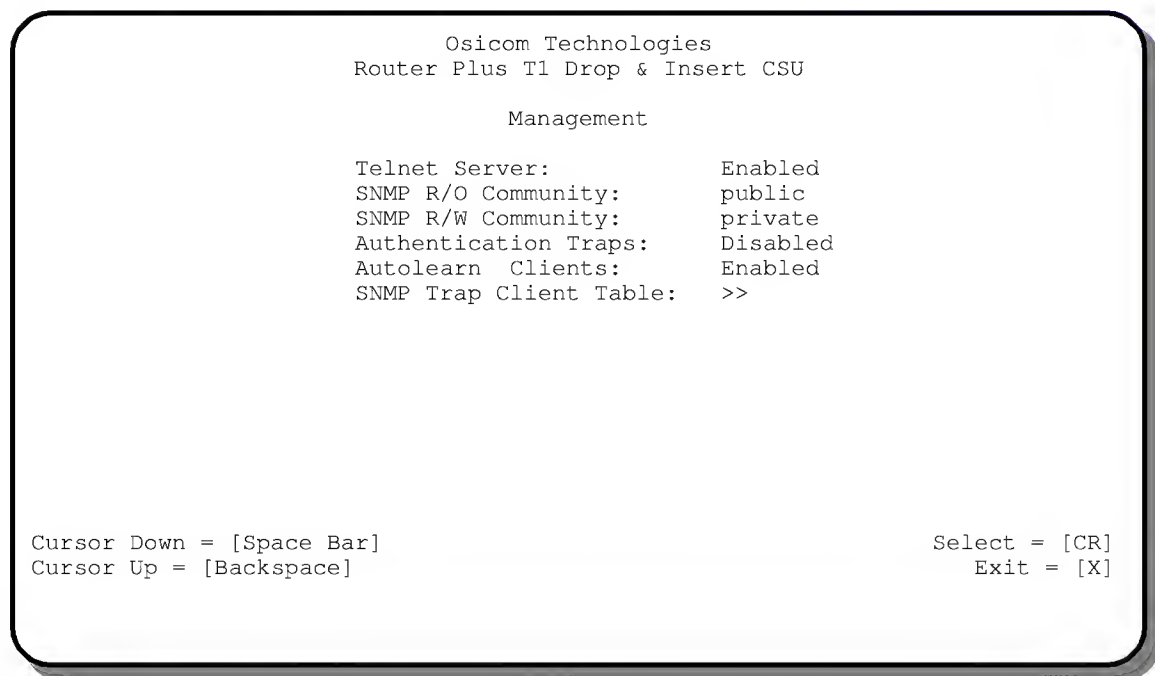

Management

Screen Path



9.2 Management Parameters

Telnet Server - enable/disable Telnet access to the management screens.

Default: *Enabled*

SNMP R/O Community - the community string used for read-only access to the router's MIB objects.

Valid input: Up to 40 alphanumeric characters

Default: *public*

SNMP R/W Community - the community string used for read-write access to the router's MIB objects. If this is set to the same value as the read-only string, write access is prevented.

Valid input: Up to 40 alphanumeric characters.

Default: *private*

Authentication Traps - enable/disable authentication traps sent by the router when an SNMP request is received with an invalid community string. A trap is an unsolicited alarm or event.

Enabled - allows alarm messages.

Disabled - prevents alarm messages.

Default: *Disabled*

Autolearn Clients - enable/disable the router's ability to automatically learn the IP addresses of SNMP management stations (clients) to whom SNMP traps are to be sent.

Enabled - the SNMP Trap Client Table lists the management stations that will receive traps from the router. The router automatically learns the IP addresses of SNMP management stations that access it. Learned addresses are added to the table, which can contain up to 16 addresses. If the table contains any static addresses, then the number of addresses that can be learned is 16 minus the number of configured static addresses.

Disabled - the SNMP Trap Client Table lists the management stations that can access the router's SNMP agent, and the management stations that will receive traps from the router. SNMP access is limited to only the hosts that are listed in the table. See the [SNMP Trap Client Table](#) in the following section.

Default: *Enabled*

9.2.1 SNMP Trap Client Table

A trap client is an SNMP management station to which SNMP traps are routed. A trap client is identified by configuring an IP address for each of up to 16 SNMP management stations.

Move cursor between columns by using left/right arrows or Tab/Shift-Tab.

IP addresses for trap clients can be configured manually, or automatically learned. For automatic address learning, see [Autolearn Clients](#) in previous section. Any addresses that are not entered manually can be learned automatically.

Trap client addresses can be configured manually using SNMP management or from a terminal at the [SNMP Trap Client Table screen](#).

If it is desirable to limit the management stations to which traps are sent, the IP addresses for those management stations can be configured manually and the autolearn feature disabled. Only those management stations whose IP addresses have been configured manually will receive traps from the router.

```
Osicom Technologies
Router Plus T1 Drop & Insert CSU


SNMP Trap Client Table

Client Address      Type                Client Address      Type
125.0.0.1           Static              125.0.0.8           Static
125.0.0.2           Static              0.0.0.0             -----
125.0.0.3           Dynamic             0.0.0.0             -----
125.0.0.4           Static              0.0.0.0             -----
125.0.0.9           Static              0.0.0.0             -----
125.0.0.7           Static              0.0.0.0             -----
125.0.0.6           Static              0.0.0.0             -----
125.123.123.125     Static              0.0.0.0             -----

Cursor Down = [Space Bar]      Edit Field = [CR]
Cursor Up   = [Backspace]      Exit       = [X]
```

SNMP Trap Client Table

Screen Path

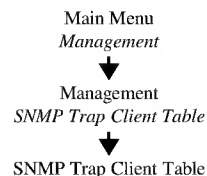

Client Address - the IP address for the SNMP management station to which SNMP traps are to be sent. Default value is 0.0.0.0 (no entry configured).

Type - the Type field is read only. It identifies a trap client as one of the following:

Dynamic - the IP address for this trap client was learned automatically from an incoming SNMP message.

Static - the IP address for this trap client was configured manually.

- - - - - no address is assigned.

9.2.2 Traps

A trap, which is the SNMP term for an alarm or event, is unsolicited information from an SNMP agent to an SNMP management station. Traps are the only type of unsolicited data that is permitted with SNMP. A trap occurs only when a threshold within the agent is violated or when a major event occurs.

The following MIB-II traps also are reported:

- Link Up
- Link Down
- Warm start
- Cold start
- Authentication

10. MAINTENANCE AND REPAIR

Start of Document

10.1 Customer Support

Osicom Technologies offers a comprehensive range of customer support services, including technical assistance and maintenance agreements.

For technical assistance or detailed information about Osicom's support plans or pricing, call 1-800-DLX-CARE (1-800-359-2273) to reach a Customer Service Marketing Representative. You can also e-mail Osicom's Customer Support Department at support@osicom.com.

10.2 Equipment Return and Repair

Corrective maintenance is limited to the testing and troubleshooting procedures provided in this manual. If, after contacting Customer Support, you are unable to correct any malfunction, please return the unit to Osicom Technologies for repair.

Prior to shipping the unit to Osicom Technologies for repair, call Product Repair at 301-317-7400 and request a Return Goods Authorization (RGA) number.

You may furnish information on defective units to Osicom Technologies by telephone. Please provide the following information:

- Unit part number and serial number
- Brief description of failure symptoms and cause
- Return shipping address (including sender's name)
- Preference of return shipping mode
- Invoice address
- Purchase Order number or letter of authorization for out of warranty units
- Person to contact for further information. Please include telephone number.

For the best equipment protection, use the original cartons and packaging material. Send the unit to:

Osicom Technologies, Inc.
9020 Junction Drive
Annapolis Junction, Maryland 20701

IMPORTANT

RGA number must appear on container!

APPENDIX A.

SPECIFICATIONS

Start of Document

Router Plus T1 Drop & Insert CSU Specifications	
ITEM	DESCRIPTION
Protocol Support Routing Bridging LAN frame types WAN 1 frame types	IP (Static, RIP, RIPv2) IPX/SPX, (Static, RIP/SAP) All popular LAN protocols, transparent bridging Type II, 802.2 (LLC), 802.3 (RAW), SNAP Frame Relay and PPP
Interfaces LAN WAN 1 Speed (NI) NI Format/Coding Timing Diagnostics NCTE Rate Format Coding Output Signal	Ethernet 10BaseT (RJ45) Integral T1/Fractional T1 CSU Nx56/64 kbps (RJ48C or RJ48X) up to 1.536 Mbps Auto Detect - D4, ESF, AMI, B8ZS Internal or Repeater V.54 w/integral test generator RJ48C 8-pin modular jack 1.544 Mbps $\pm$ 50 bps D4 or ESF AMI (62411), AMI (No Density), or B8ZS DSX-0 w/LBO
Management Console Speed (DCE) Telnet BootP TFTP (Client) SNMP Modem (Optional) Speed (NI) GUI (Optional)	Asynchronous via RS-232 9600 bps (DB25) Built-in default IP address (user configurable) Configuration to Flash Operating system and configuration to Flash Private Enterprise MIB, MIB II, and Encryption MIB (Get, Set, Trap) Integral Management Modem V.32 (RJ11) Graphical User Interface for Castle Rock <i>SNMPc</i>

Router Plus T1 Drop & Insert CSU Specifications	
Security (Optional)	Integral DES Encryptor module
Memory 4 Mbyte DRAM 1 Mbyte Flash-PROM	SIMM upgrade to 8 Mbyte Pre-loaded with router OS software
RFC Compliance	768, 791, 792, 793, 826, 854, 855, 862, 894, 903, 919, 922, 950, 951, 1010, 1058, 1155, 1157, 1166, 1212, 1213, 1315, 1332, 1350, 1490, 1542, 1552, 1570, 1634, 1638, 1661, 1723
Power Standalone AC Transformer MiniRack AC Transformer DC Power Tray	Input: 120 VAC, 60 Hz Output: 9 VAC @ 2.1 amps (max.) Input: 120 VAC, 60 Hz Output: 10 VAC @ 10 amps (max.) Input: -48 VDC @ 6.25 amps (max.) Output: 8 to 12 VAC (9.5 nominal) @ 21.6 amps (max.)
Dimensions Standalone 6-slot rack	1.6" H x 6.25" W x 9.6" D 3.5" (2U) H x 17" W x 10.5" D
Weight Standalone Rack-mount card MiniRack w/AC transformer MiniRack w/DC power tray	2.3 lbs. fully-loaded (includes AC transformer) 1.4 lbs. (includes front and rear panels) 7.7 lbs. (empty) 12 lbs. (empty)
Operating Temperature Storage Temperature	32° to 104° F; 0° to 40° C -40° to 158° F; -40° to 70° C
Relative Humidity	0% to 95%, non-condensing

APPENDIX B.


INTERFACES AND CABLES

Start of Document

Console Interface		
PIN	SIGNAL	DIRECTION
2	Transmit Data	Input
3	Receive Data	Output
5	Clear to Send	Output
6	Data Set Ready	Output
7	Signal Ground	—
8	Carrier Detect	Output



WAN 1 Interface		
PIN	SIGNAL	DIRECTION
1	Receive	Input
2	Receive	Input
3	—	—
4	Transmit	Output
5	Transmit	Output
6	—	—
7	—	—
8	—	—




LAN Interface (10BaseT)	
PIN	SIGNAL
1	Transmit Data (+)
2	Transmit Data (-)
3	Receive Data (+)
4	—
5	—
6	Receive Data (-)
7	—
8	—
	

WAN 2 Interface (V.32 Modem)	
PIN	SIGNAL
1	—
2	—
3	—
4	T Tip
5	R Ring
6	
7	—
8	—
	


NCTE Interface		
PIN	SIGNAL	DIRECTION
1	Transmit	Output
2	Transmit	Output
3	—	—
4	Receive	Input
5	Receive	Input
6	—	—
7	Ground	—
8	Ground	—
		

The following cables are available from Osicom Technologies. Illustrations are provided below for reference.

Router Plus Drop & Insert T1 CSU Cables		
DESCRIPTION	PART NUMBER	ORDER NUMBER
WAN 1 cable (included with unit)	DCA94511	CBE9451 (15 ft)
NCTE cable (included with unit)	115-0611-01	CBE06111 (6 in)
DDD line cable (included with WAN 2 integral V.32 dial modem option)	115-0414-001	CBE04141 (7 ft)

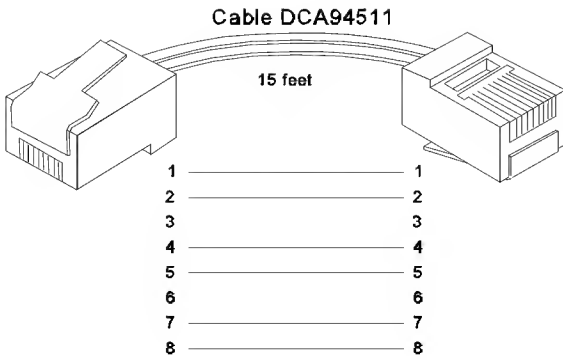


WAN 1 Cable

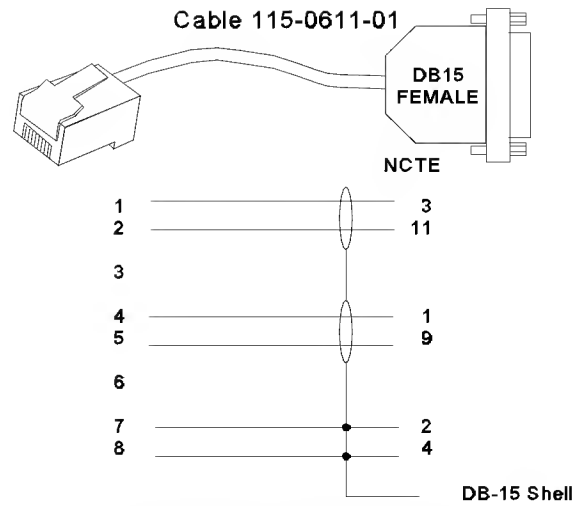

NOTE: Twisted pairs are shielded individually with shield terminations as shown.

NCTE Interface Adapter Cable

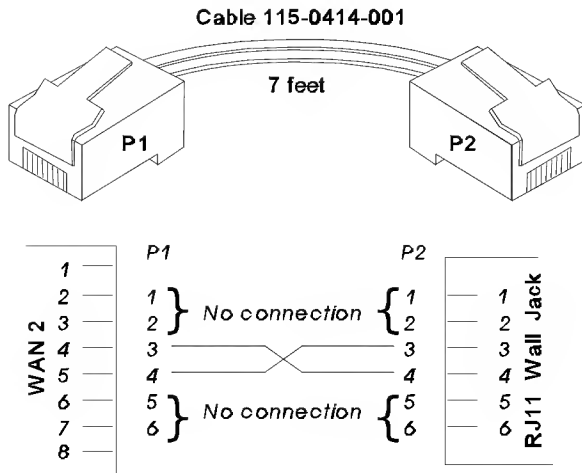

NOTE: Cable 115-0414-001 is a 6-pin modular cable that connects the 8-pin WAN 2 interface to a 6-pin RJ11 wall jack. Cable connectors 3 and 4 connect to WAN 2 connectors 4 and 5, respectively.

DDD Line Cable

APPENDIX C.

DIAGNOSTICS

Start of Document

- [C.1 LED Test](#)
- [C.2 RAM Test](#)
- [C.3 Flash Test](#)
- [C.4 TFTP Software Download](#)
- [C.5 System Information](#)

Special-purpose diagnostics test certain hardware elements of the unit. The user can also view flash and system information.

NOTE

Diagnostic screens are intended to be used for manufacturing test purposes and error recovery when the full software image will not run.

```
Router Plus Drop and Insert T1 CSU Boot Diagnostics 2.x.xx  
Copyright 1996-1997 Osicom Technologies, Inc.
```

```
Press D to run diagnostics
```

Diagnostic Menu Prompt

When the unit is powered up, a prompt appears on the screen, as shown. To enter the diagnostics, press D within 3 seconds. The Diagnostic Menu is displayed.

Type the letter of the desired operation to execute it.

```
Router Plus Drop and Insert T1 CSU Diagnostics
```

```
A - LED Test  
B - RAM  
C - Flash Test  
D - TFTP Software Download  
E - System Information  
X - Exit
```

```
Select [A..E,X]:
```

Diagnostic Menu

When the user boots up and does not press D, the system verifies if the CRC in the software matches the CRC in the boot information database. If the CRC matches, the unit's software runs. If the CRC does not match, the bootcode will initiate BootP and try to automatically download a copy of the operating software (OS). If this is successful, the software will be run. If it fails, the router will reset.

C.1 LED Test

The LED test checks the operation of the TST, ALM, W1, W2, and LAN LEDs. The LEDs will go ON and OFF in sequence for 5 to 6 seconds.

```
Router Plus Drop and Insert T1 CSU Diagnostics
```

```
A - LED Test
B - RAM
C - Flash Test
D - TFTP Software Download
E - System Information
X - Exit
```

```
Select [A..E,X]: A
```

```
TESTING LEDS
```

LED Test

C.2 RAM Test

Test A executes a minimal verification of RAM that non-destructively tests the read-write functions of the RAM. The test returns a result of Passed or Failed.

Tests B, C, and D execute a thorough verification of RAM. These tests overwrite RAM. The user is then prompted to press a key, after which the unit will reboot.

```
RAM Tests
```

```
A - Non-destructive RAM Test
B - 32-bit destructive RAM Test - Auto reboot
C - 16-bit destructive RAM Test - Auto reboot
D - 8-bit destructive RAM Test - Auto reboot
X - Exit
```

```
Select [A..D,X]: A
```

```
Testing RAM - Please Wait
```

```
RAM Test Passed
Press any key to continue:
```

RAM Test

If the test is successful, the following message appears:

```
RAM Test Passed
```

If the test fails, the message below appears:

```
RAM Test Failed : Address = 0xxxxxxxxx (hex address)
```

C.3 Flash Test

Select A to view information about the flash memory, as shown here.

```
Flash Tests

A - Flash Info
B - Erase Configuration Flash
X - Exit

Select [A..B,X]: A

Program Flash Information:

Make/Model   = AMD 29F040
Bus Width    = 16 bits
Flash Width   = 16 bits
Sector Size  = 128K
Total Size   = 1024K

Press any key to continue:
```

Flash Test - Flash Info

Select B to remove the configuration in flash.

At the 'Enter password' prompt, enter the console password as it was configured on the [Unit menu](#). The configuration flash will not be erased unless the correct password is entered.

```
Flash Tests

A - Flash Info
B - Erase Configuration Flash
X - Exit

Select [A..B,X]: B

Enter password:
```

Flash Test - Erase Configuration Flash

The unit returns to the Flash Tests screen. When the software is run, the unit uses the default configuration.

C.4 TFTP Software Download

When you select TFTP Software Download, the following screen appears. Use this option to download the router's operating software or boot software from a specified TFTP server via the router's LAN interface.

Router Code Download

```
A - Initiate BOOTP
B - configure Lan IP Address: 128.1.128.1
C - Configure Lan IP Subnet Mask: 255.255.255.0
D - Configure Server Address: 125.0.0.103
E - Configure Filename: routerplus.txt
F - Configure Gateway Address: 0.0.0.0
G - Download Operational Code
H - Download Boot Code
I - Lan Frame Type: TYPE II
X - Exit
```

Select [A..I,X]:

NOTE

Any changes to the fields on the TFTP Download screen do not change the database in the main operating software.

TFTP Software Download

The commands are intended for error recovery when the full software image will not run. The user can also upgrade the boot code via this screen.

Software downloads can only be performed across the LAN because the WAN is not operational when running from the boot sector.

NOTE

You can download through another router on the local LAN if you configure the LAN address of the other router as the Gateway Address.

When this screen is initially entered, the data displayed will be whatever was configured in the database.

You can configure the LAN IP Address, Subnet Mask, Server Address, Filename, and Gateway Address manually or via BootP. If you choose the latter, the new values will be displayed once the BootP reply is received.

Manually configure the LAN type for either TYPE II or SNAP.

Selecting Initiate BOOTP does not cause the download to start. After you are satisfied that all fields are set properly, press [G] to start a download of the operating software or [H] to start a download of the boot software.

C.5 System Information

Select System Information to view details of the unit's internal software and hardware components, as shown here.

NOTE

The contents of the System Information screen is an example; your screen contents will be different.

System Information:

MAC address = 00:00:6d:13:57:90
Boot code version = 2.x.xx
Software size = 607K
Software checksum = 0xcf777318
DB version = 2
DB size = 76K

RAM size = 4M

SIMM:	Installed
WAN2:	Not Installed
Compression:	Not Installed
V.32 Modem:	Installed
Encryption:	Not Installed

Press any key to continue:

System Information

If encryption is installed, the version will be displayed.

